


A

No.	Código	Clave	Descripción
1	954899	R1-COMP-10L2	Cárter del cigüeñal
2	954900	R2-COMP-10L2	Cigüeñal
3	954901	R3-COMP-10L2	Biela
4	954902	R4-COMP-10L2	Junta de goma
5	954903	R5-COMP-10L2	Cubierta del cárter
6	954904	R6-COMP-10L2	Sello de hule
7	954905	R7-COMP-10L2	Nivelado de aceite
8	954906	R8-COMP-10L2	Tornillo hexagonal bridado M5x16
9	954907	R9-COMP-10L2	Tapón
10	954908	R10-COMP-10L2	Anillo tipo "C" (Ø12)
11	954909	R11-COMP-10L2	Pasador del pistón
12	954910	R12-COMP-10L2	Pistón
13	954911	R13-COMP-10L2	Anillo de aceite
14	954912	R14-COMP-10L2	Anillo de pistón
15	954913	R15-COMP-10L2	Tornillo Allen M6x16
16	954914	R16-COMP-10L2	Junta de cilindro
17	954915	R17-COMP-10L2	Cilindro
18	954916	R18-COMP-10L2	Tornillo hexagonal bridado M6x16
19	954917	R19-COMP-10L2	Pasador de posicionamiento (3x6.5)
20	954918	R20-COMP-10L2	Hoja de válvula
21	954919	R21-COMP-10L2	Junta de válvula
22	954920	R22-COMP-10L2	Placa de válvula subconjunto
27	954921	R27-COMP-10L2	Sello del cilindro
28	954922	R28-COMP-10L2	Tapa de cilindro
29	954923	R29-COMP-10L2	Filtro de aire
30	954924	R30-COMP-10L2	Tornillo Allen M6x30
31	954925	R31-COMP-10L2	Arandela de presión Ø6
32	954926	R32-COMP-10L2	Conector de ángulo derecho Rp3/8
33	954927	R33-COMP-10L2	Capacitor de arranque (65µF)
34	954928	R34-COMP-10L2	Capuchón
35	954929	R35-COMP-10L2	Arandela de presión Ø5
36	954930	R36-COMP-10L2	Tornillo hexagonal M5x80
37	954931	R37-COMP-10L2	Cubierta del ventilador
38	954932	R38-COMP-10L2	Tornillo hexagonal bridado M5x8
39	954933	R39-COMP-10L2	Anillo tipo "C" (Ø12x15x1)

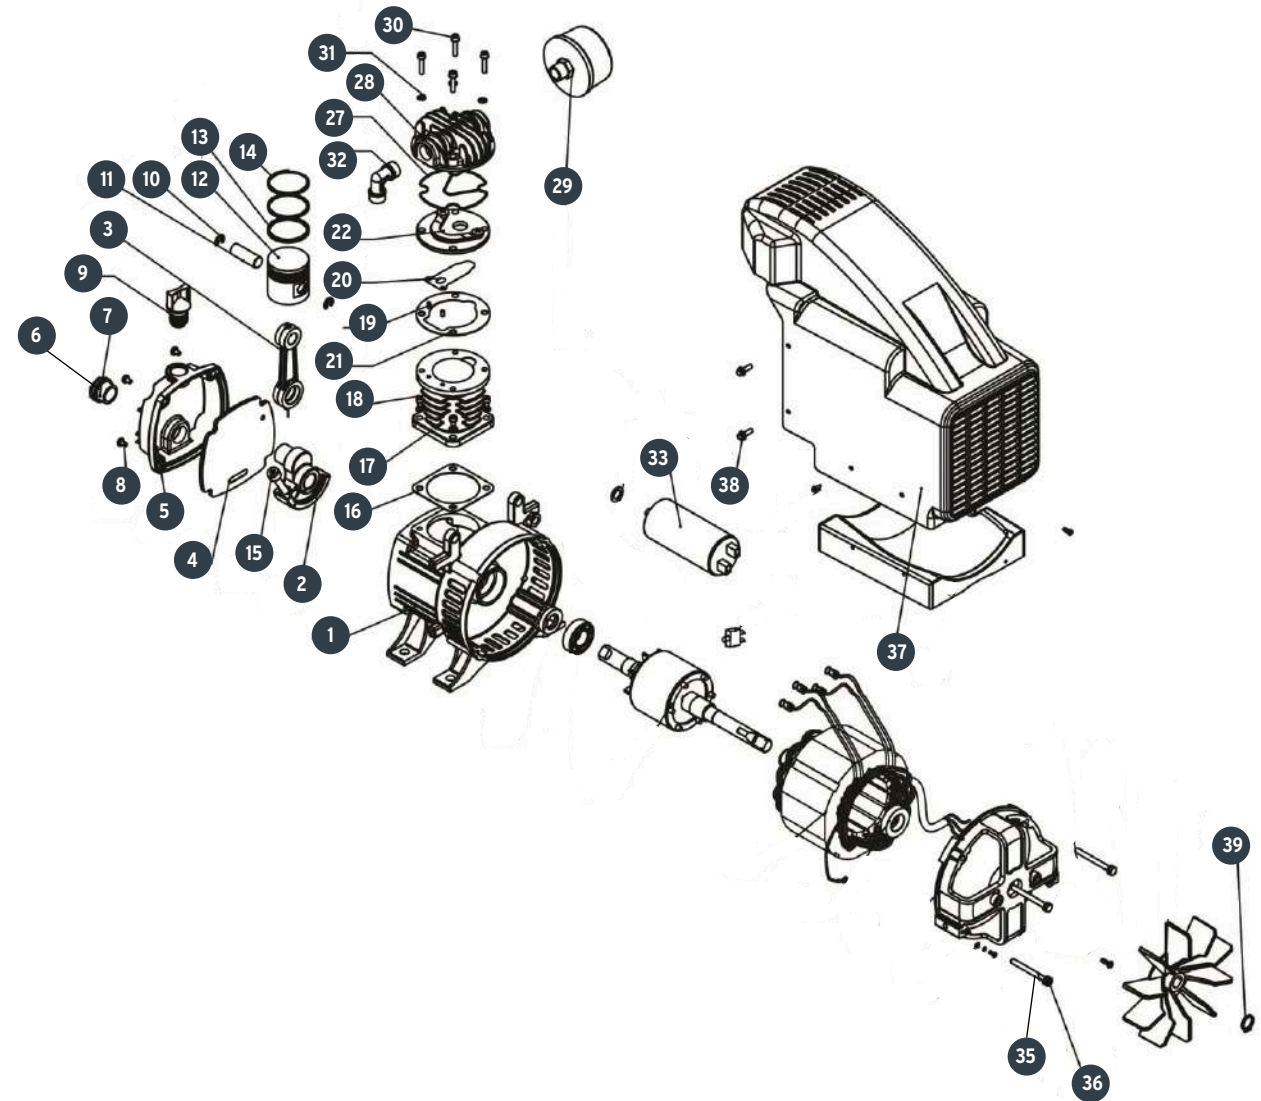

A



B

No.	Código	Clave	Descripción
40	954934	R40-COMP-10L2	Plástico
41	954935	R41-COMP-10L2	Soporte del motor
42	954936	R42-COMP-10L2	Balero 6202
43	954937	R43-COMP-10L2	Subconjunto del estator
44	954938	R44-COMP-10L2	Rotor
45	954939	R45-COMP-10L2	Balero 6003
46	954940	R46-COMP-10L2	Sello de aceite (Ø28x16x7))
47	954941	R47-COMP-10L2	Tornillo Hexagonal 8x25
48	954942	R48-COMP-10L2	Tuerca hexagonal bridada M8
49	954943	R49-COMP-10L2	Acoplamiento rápido
50	954944	R50-COMP-10L2	Manómetro de válvula reguladora
51	954945	R51-COMP-10L2	Manómetro de presostato
52	954946	R52-COMP-10L2	Válvula de seguridad
53	954947	R53-COMP-10L2	Presostato
54	954948	R54-COMP-10L2	Conector recto
55	954949	R55-COMP-10L2	Válvula reguladora
56	954950	R56-COMP-10L2	Tubo de liberación
57	954951	R57-COMP-10L2	Válvula antirretorno
58	954952	R58-COMP-10L2	Tubería de descarga
59	954953	R59-COMP-10L2	Tanque
60	954954	R60-COMP-10L2	Mango de hule
61	954955	R61-COMP-10L2	Válvula de drenado
62	954956	R62-COMP-10L2	Tornillo hexagonal bridado M8x20
63	954957	R63-COMP-10L2	Patas de hule
64	954958	R64-COMP-10L2	Amortiguador
65	954959	R65-COMP-10L2	Cable y clavija
66	954960	R66-COMP-10L2	Tornillo M4x8
67	954961	R67-COMP-10L2	Arandela estriada
68	954962	R68-COMP-10L2	Indicador de enlace a Tierra
69	954963	R69-COMP-10L2	Protector térmico
70	954964	R70-COMP-10L2	Placa de metal



B

