

No.	Código	Clave	Descripción
1	957500	R1-PRE-1/6R	Conector con Tuerca M26 y Sello (Diam 16x24x2)
4	957501	R4-PRE-1/6R	Cuerpo de bomba
8	957502	R8-PRE-1/6R	Rotor
9	957503	R9-PRE-1/6R	Buje (Ø12X22X12)
10	957504	R10-PRE-1/6R	Manga protectora del rotor
11	957505	R11-PRE-1/6R	Ensamble de campo con carcasa
12	957506	R12-PRE-1/6R	Sello (Ø29X41X2.5)
14	957507	R14-PRE-1/6R	Tornillo Allen (M5X16)
16	957508	R16-PRE-1/6R	Sello (Ø12X18X3)
17	957509	R17-PRE-1/6R	Tapón de purga (M14X5)
18	957510	R18-PRE-1/6R	Sello (Ø18X24X3)
19	957511	R19-PRE-1/6R	Interruptor de flujo
20	957512	R20-PRE-1/6R	Anillo de entrada
21	957513	R21-PRE-1/6R	Impulsor
22	957514	R22-PRE-1/6R	Sello (Ø85X90X2.5)
23	957515	R23-PRE-1/6R	Sello (Ø68X82X3)
24	957516	R24-PRE-1/6R	Deflector
25	957517	R25-PRE-1/6R	Buje (Ø12X22X12)
26	957518	R26-PRE-1/6R	Junta de conexión
27	957519	R27-PRE-1/6R	Anillo de cerámica
30	957520	R30-PRE-1/6R	Junta de la caja
31	957521	R31-PRE-1/6R	Caja de conexiones
32	957522	R32-PRE-1/6R	Protector de cable
33	957523	R33-PRE-1/6R	Placa de conexiones
34	957524	R34-PRE-1/6R	Tornillo (M4X12)
35	957525	R35-PRE-1/6R	Clip de fijación
36	957526	R36-PRE-1/6R	Capacitor 4µF
37	957527	R37-PRE-1/6R	Tapa de la caja de conexión
38	957528	R38-PRE-1/6R	Perilla de posición
39	957529	R39-PRE-1/6R	Tornillo (St4X25)
40	957530	R40-PRE-1/6R	Cable de alimentación

