


A

No.	Código	Clave	Descripción
1	961328	R1-LIRO-5A2	Cubierta de interruptor
2	961329	R2-LIRO-5A2	Placa de fijación
3	961330	R3-LIRO-5A2	Interruptor
4	961331	R4-LIRO-5A2	Porta carbones
5	961332	R5-LIRO-5A2	Carbones
6	961333	R6-LIRO-5A2	Campo
7	961334	R7-LIRO-5A2	Conector
8	961335	R8-LIRO-5A2	Opresor de cable
9	961336	R9-LIRO-5A2	Tornillo (St3.5X16)
10	961337	R10-LIRO-5A2	Protector de cable
11	961338	R11-LIRO-5A2	Tornillo (St4X14)
12	961339	R12-LIRO-5A2	Cable de alimentación y enchufe
13	961340	R13-LIRO-5A2	Conjunto de carcasas
14	961341	R14-LIRO-5A2	Cable interno 1
15	961342	R15-LIRO-5A2	Cable interno 2
16	961343	R16-LIRO-5A2	Cable interno 3
17	961344	R17-LIRO-5A2	Cable interno 4
18	961345	R18-LIRO-5A2	Cable interno 5
19	961346	R19-LIRO-5A2	Armadura
19.1	961347V	R19.1-LIRO-5A2	Balero 608
19.2	961348	R19.2-LIRO-5A2	Seguro C (Ø7X14X1)
20	961349	R20-LIRO-5A2	Ventilador de polvo
21	961350	R21-LIRO-5A2	Eje excéntrico
22	961351	R22-LIRO-5A2	Conjunto de soporte y balero 6002
23	961352	R23-LIRO-5A2	Contrapeso
24	961353	R24-LIRO-5A2	Tornillo Con Arandela (M4X15)
25	961354	R25-LIRO-5A2	Anillo de freno
26	961355	R26-LIRO-5A2	Cubierta del balero
27	961356	R27-LIRO-5A2	Base con velcro
28	961357	R28-LIRO-5A2	Tornillo de rosca (St4X16)
29	961358	R29-LIRO-5A2	Anillo C (Ø33X35X2)
30	961359	R30-LIRO-5A2	Anillo O (Ø28X31X1.5)

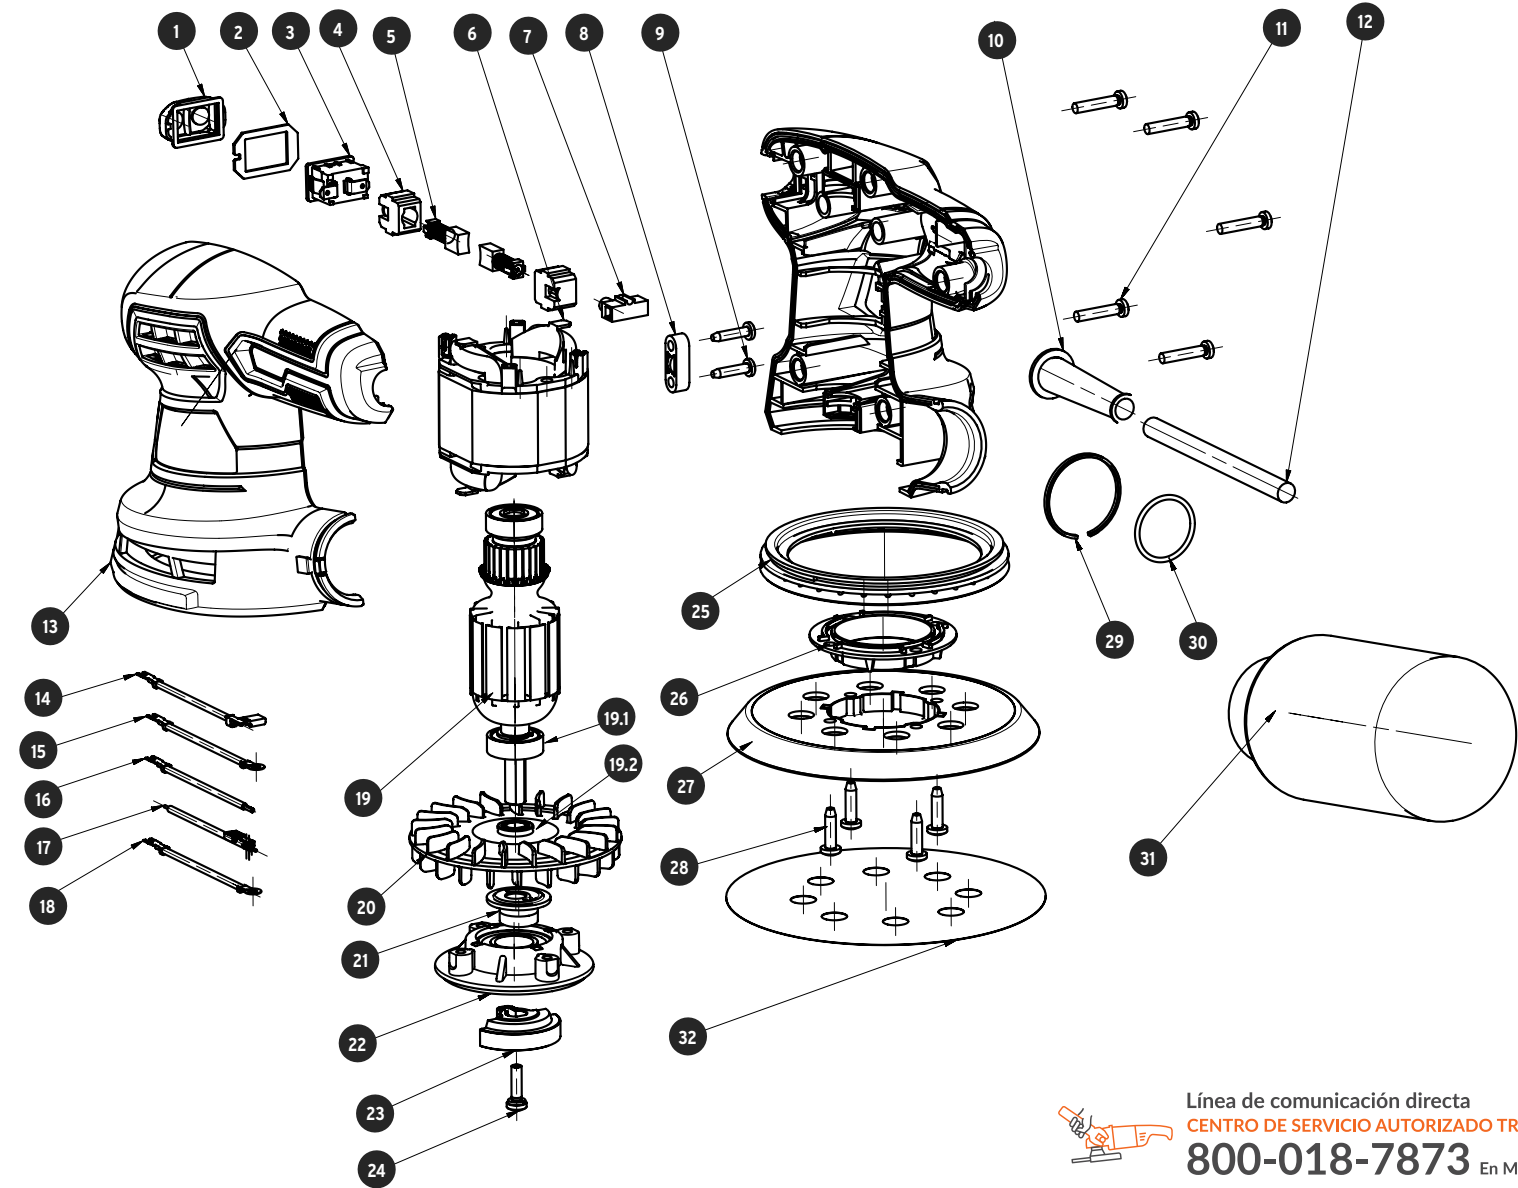

A