


A


A

No.	Código	Clave	Descripción
1	941456	RB1-HILA-1500P	Motor
2	941457	RB2-HILA-1500P	Sello
3	941458	RB3-HILA-1500P	Ensamble de bomba
4	941459	RB4-HILA-1500P	Ensamble de caja de engranes
5	941460	RB5-HILA-1500P	Plato inclinado
6	941461	RB6-HILA-1500P	Arandela
7	941462	RB7-HILA-1500P	Tornillo esp M8x20
8	941463	RB8-HILA-1500P	Balero especial
9	941464	RB9-HILA-1500P	Tornillo
10	941465	RB10-HILA-1500P	Ensamble de bomba
11	941466	RB11-HILA-1500P	Tuerca de válvula
12	941467	RB12-HILA-1500P	Sello
13	941468	RB13-HILA-1500P	Ensamble válvula de salida
14	941469	RB14-HILA-1500P	Tornillo M6x8
15	941470	RB15-HILA-1500P	Tornillo M6x55
16	941471	RB16-HILA-1500P	Arandela de presión Ø 6
17	941472	RB17-HILA-1500P	Arandela Ø 6
18	941473	RB18-HILA-1500P	Cabeza de bomba
19	941474	RB19-HILA-1500P	Reten Ø 10
20	941475	RB20-HILA-1500P	Ensamble válvula de entrada
21	941476	RB21-HILA-1500P	Sello Ø 6.5

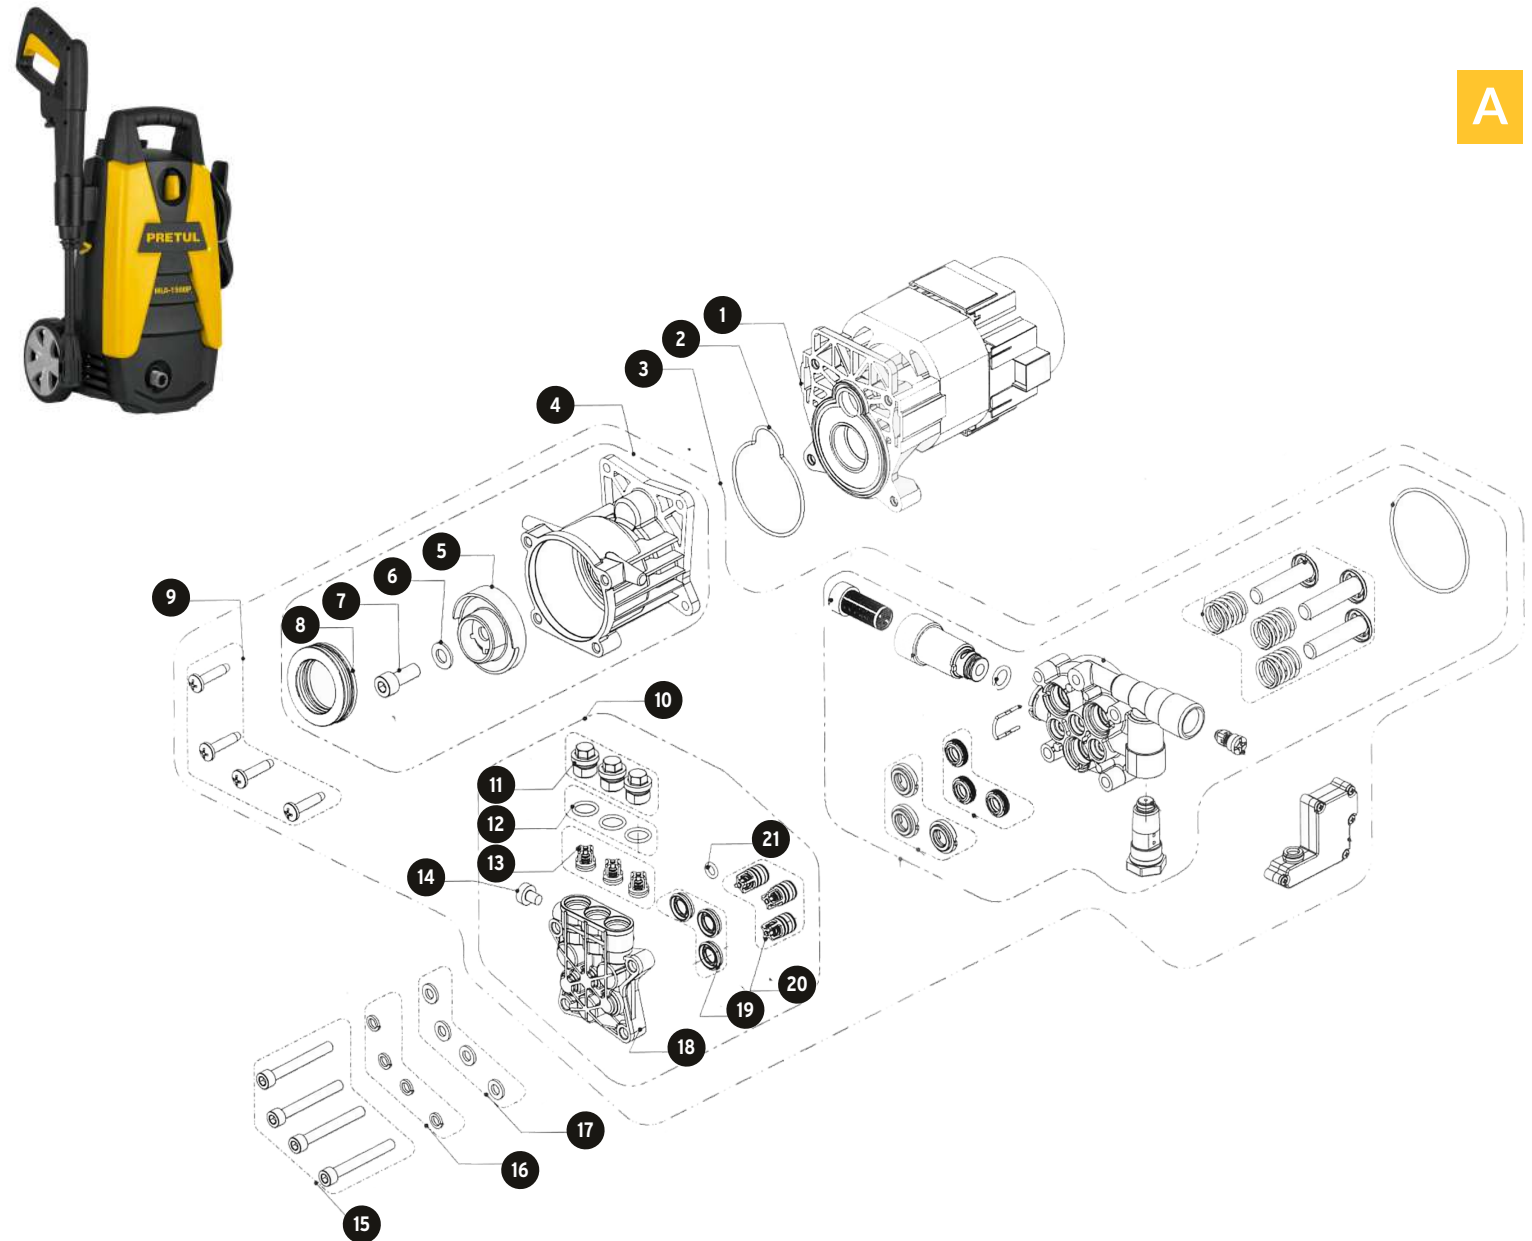

B

No.	Código	Clave	Descripción
22	941477	RB22-HILA-1500P	Ensamble cuerpo de pistón
23	941478	RB23-HILA-1500P	Base de sello
24	941479	RB24-HILA-1500P	Sello de pistón
25	941480	RB25-HILA-1500P	Válvula de paro
26	941481	RB26-HILA-1500P	Juego de válvula
27	941482	RB27-HILA-1500P	Sello Ø 62
28	941483	RB28-HILA-1500P	Ensamble de pistón
29	941484	RB29-HILA-1500P	Resorte
30	941485	RB30-HILA-1500P	Guía de pistón
31	941486	RB31-HILA-1500P	Seguro U
32	941487	RB32-HILA-1500P	Sello Ø 10
33	941488	RB33-HILA-1500P	Tubo de entrada
34	ACC		Filtro de entrada
35	941489	RB35-HILA-1500P	Ensamble de micro interruptor

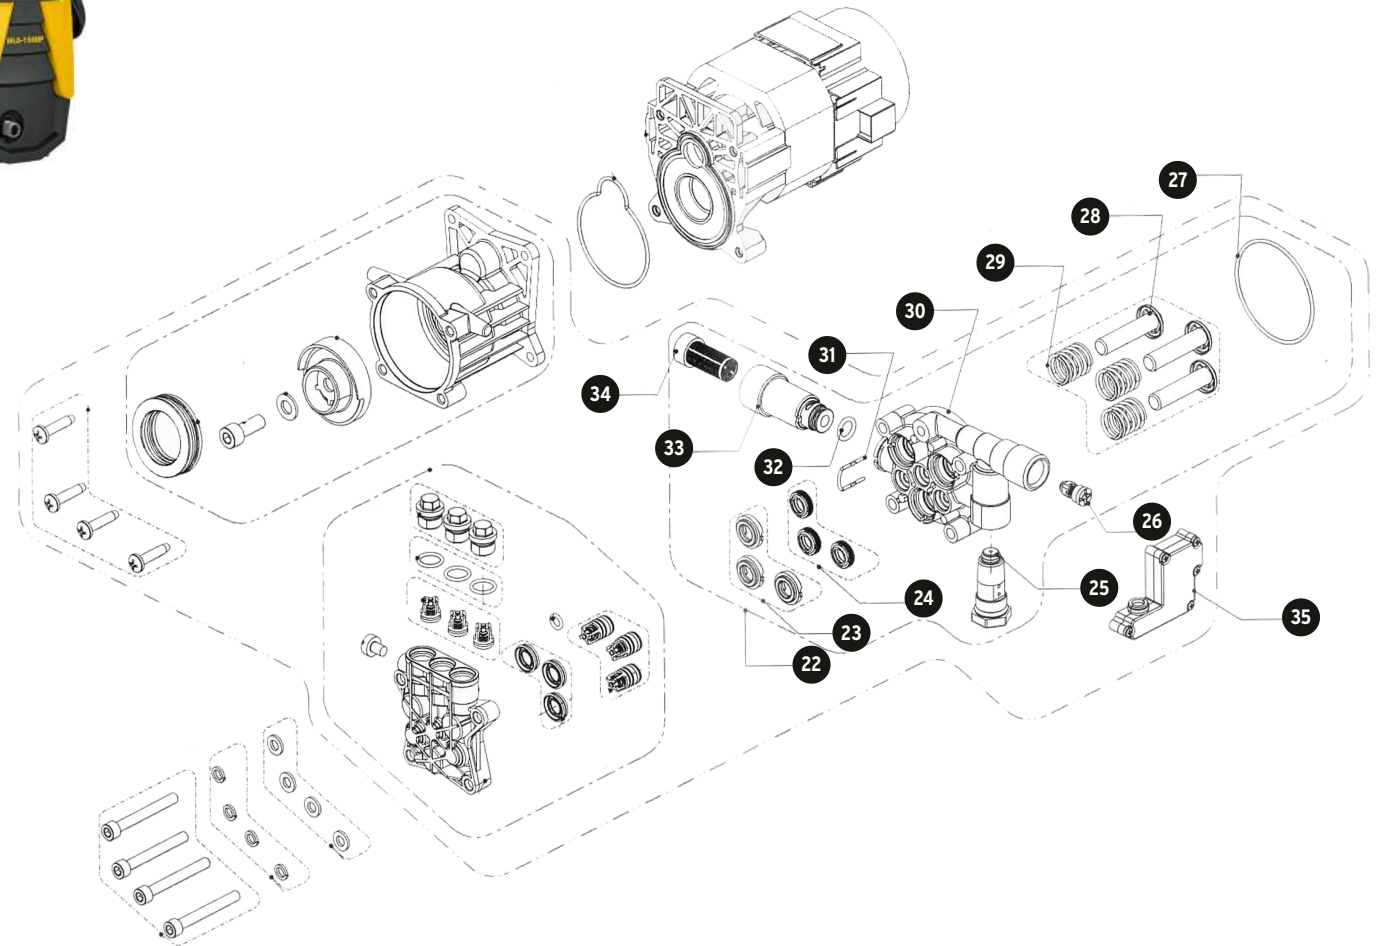


B



C


No.	Código	Clave	Descripción
1	941450	RM1-HILA-1500P	Tornillo ST3x12
2	941451	RM2-HILA-1500P	Tapa de motor
5	941452	RM3-HILA-1500P	Carcasa de motor
6	941453	RM5-HILA-1500P	Ensamble de motor con bomba
7	941454	RM6-HILA-1500P	Amortiguador
8	941455	RM7-HILA-1500P	Filtro de motor

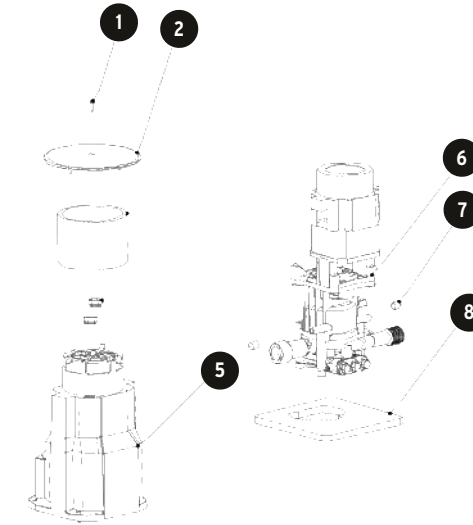

C

D

No.	Código	Clave	Descripción
1	941439	R1-HILA-1500P	Ensamble de carcasa frontal
2	941440	R2-HILA-1500P	Perilla de encendido
3	941441	R3-HILA-1500P	Ensamble de Interruptor
4	941442	R4-HILA-1500P	Ensamble de motor
5	941443	R5-HILA-1500P	Ensamble de cable de alimentación
6	941444	R6-HILA-1500P	Ruedas
7	941445	R7-HILA-1500P	Ensamble carcasa trasera
8	941446	R8-HILA-1500P	Manija
9		R9-HILA-1500P	Pistola
10		R10-HILA-1500P	Lanza
11		R11-HILA-1500P	Lanza media
12	941447	R12-HILA-1500P	Gancho
13	941448	R13-HILA-1500P	Soporte de gancho
14	941449	R14-HILA-1500P	Manguera de presión

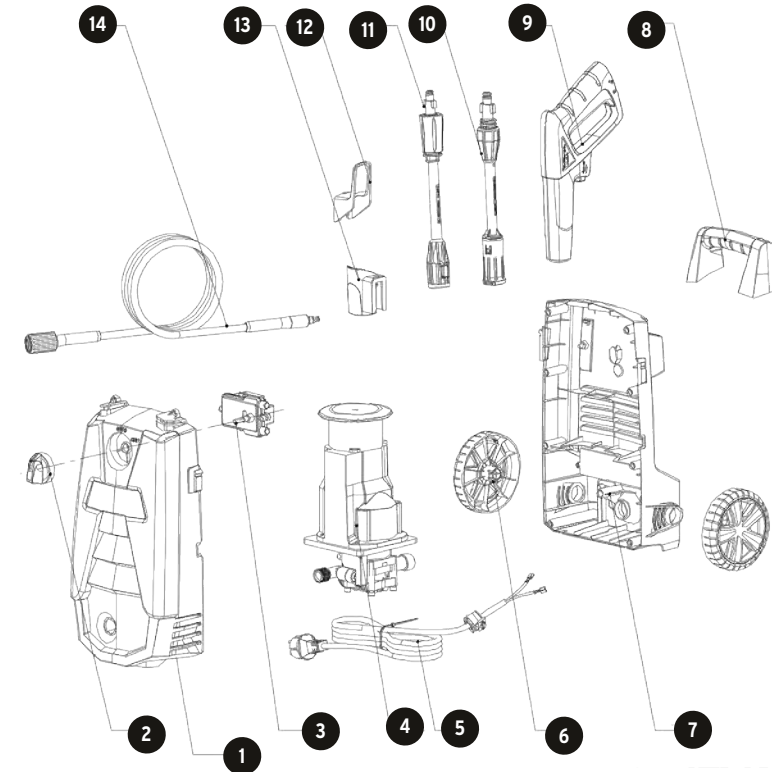

D

