

ENGLISH
ESPAÑOL

TRUPER®
expert


Manual

Demolition Hammer

55 J
Impact energy

Applies for:

Code	Model
100893	MADE-20NX

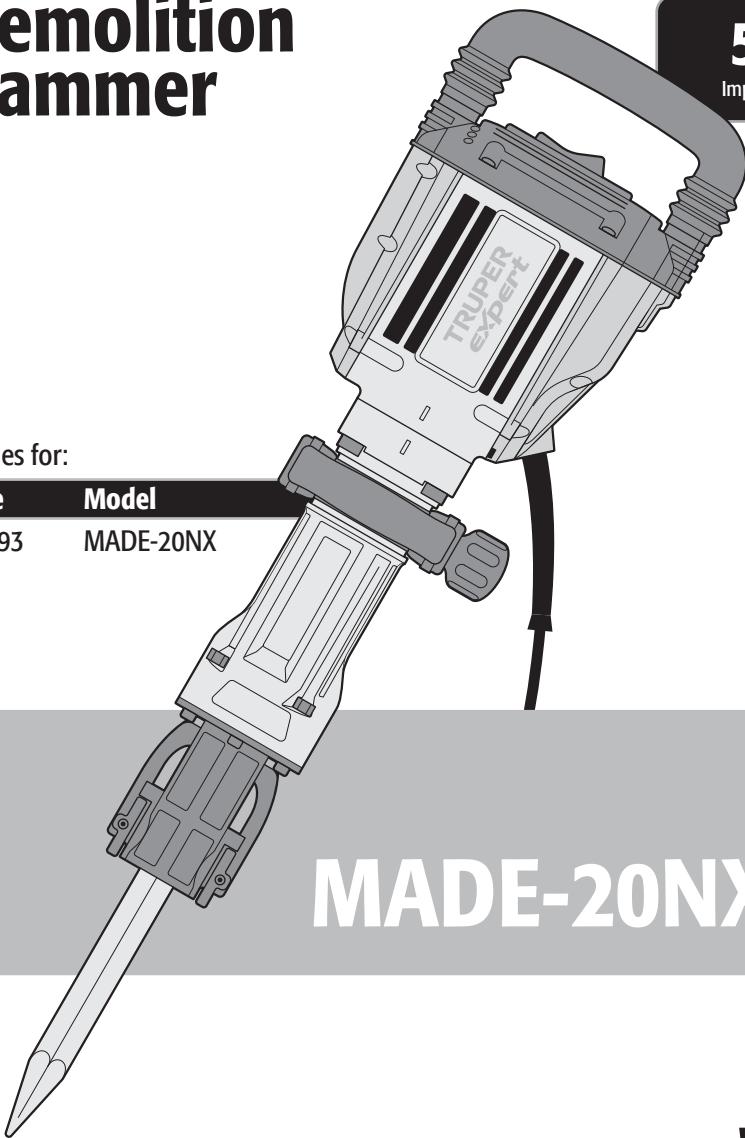

MADE-20NX

CAUTION



Read this manual thoroughly
before using the tool.




Technical Data	3
Power requirements	3
 General power tool safety warnings	4
 Safety warnings for the use of demolition hammers	5
Parts	6
Assembly	6
Adjustments	7
Start up	8
Operation	8
Maintenance	8
Authorized service centers	9
Warranty policy	10

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

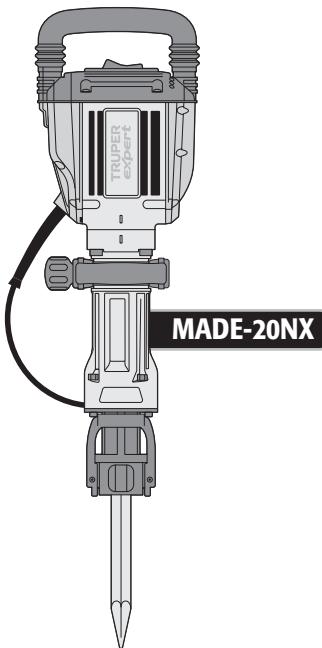

MADE-20NX

Code	•	100893
Description	•	Demolition hammer
Voltage	•	127 V~
Frequency	•	60 Hz
Current	•	15 A
Power	• 1600 W	Impact energy • 55 Joules
Weight	•	44 lb
Tool holder	•	HEX 1 1/8"
Work cycle	•	50 min work per 20 min rest. Maximum 6 hours per day
Conductors	•	14 AWG x 2C with insulation temperature of 221 °F
Insulation	• Class II	IP Grade • IP20

Power Cord Grips used in this product: Type "Y".

Tool Build Quality: Reinforced insulation

Thermal insulation on motor winding: Class E

WARNING Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a TRUPER Authorized Service Center.


The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use. Do not expose to rain, liquids and/or dampness.

WARNING Before gaining access to the terminals all power sources should be disconnected.



Power requirements

WARNING Tools with double insulation and reinforced insulation are equipped with a polarized plug (one prong is wider than the other). This plug will only fit in the right way into a polarized outlet. If the plug cannot be introduced into the outlet, reverse the plug. If it still doesn't fit, call a qualified electrician to install for you a polarized outlet. Do not alter the plug in any way. Both insulation types eliminate the need of both a grounded third power cord with three prongs or a grounded power connection.

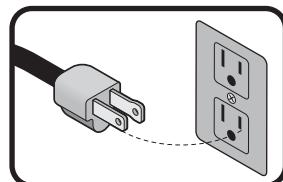

WARNING When using an extension cable, verify the gauge is enough for the power that your product needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and overheating. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

Ampere Capacity	Number of Conductors	Extension gauge	
		from 6' to 49'	higher than 49'
from 0 A and up to 10 A		18 AWG(*)	16 AWG
from 10 A and up to 13 A		16 AWG	14 AWG
from 13 A and up to 15 A		14 AWG	12 AWG
from 15 A and up to 20 A		8 AWG	6 AWG

* It is safe to use only if the extensions have a built-in artifact for over current protection.

AWG = American Wire Gauge. Reference: NMX-J-195-ANCE

WARNING When operating power tools outdoors, use a VOLTECK grounded extension cable labeled "For Outdoors Use". These extensions are especially designed for operating outdoors and reduce the risk of electric shock.



⚠ WARNING! Read carefully all safety warnings and instructions listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. **Save all warnings and instructions for future references.**

Work area

Keep your work area clean, and well lit.

Cluttered and dark areas may cause accidents.



Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

Sparks generated by power tools may ignite the flammable material.



Keep children and bystanders at a safe distance while operating the tool.

Distractions may cause loss of control.



Electrical Safety

The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.



Modified plugs and different power outlets increase the risk of electric shock.

Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

Personal safety

Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.

A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.



Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times.

This enables a better control on the tool during unexpected situations.

Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.

Loose clothes, jewelry, or long hair can get caught in moving parts.



If you have dust extraction and recollection devices connected onto the tool, inspect their connections and use them correctly.

Using these devices reduce dust-related risks.

Power Tools Use and Care

Do not force the tool. Use the adequate tool for your application.

The correct tool delivers a better and safer job at the rate for which it was designed.



Do not use the tool if the switch is not working properly.

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.

These measures reduce the risk of accidentally starting the tool.



Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.

Power tools are dangerous in the hands of untrained users.

Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.

Most accidents are caused due to poor maintenance to the tools.



Keep the cutting accessories sharp and clean.

Cutting accessories in good working conditions are less likely to bind and are easier to control.

Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

Service

Repair the tool in a TRUPER Authorized Service Center using only identical spare parts.

This will ensure that the safety of the power tool is maintained.



This tool is in compliance with
the Official Mexican Standard
(NOM - Norma Oficial Mexicana).

Safety warnings for the use of demolition hammers

TRUPER
expert

Choose the appropriate drill or attachment

- ⚠ CAUTION** • The tool is designed to work with bits or accessories with 1 1/8" HEX shanks. Choose the appropriate one for the material to be worked on, this reduces the risk of serious injury and speeds up the work.
- Do not attempt to use bits that exceed the capacity of the drill.
 - Use well-sharpened and well-conditioned drill bits/accessories to optimize the work.

Before operating the demolition hammer

- Take your time to evaluate the work to be done and make sure you have followed all the necessary precautions before starting to drill.

- ⚠ WARNING** • Fit the accessory correctly to the chuck, otherwise it can be thrown out at high speed and cause serious injury.

- ⚠ DANGER** • Before hitting a wall, floor or ceiling, make sure there are no embedded objects, such as wires or electrical conduits or pipes.

- ⚠ DANGER** • Make sure the switch is off (page 8 Start-up) before connecting the tool, otherwise it will start working unexpectedly, which can cause serious injury.

- ⚠ CAUTION** • Turn off and disconnect the tool before installing or replacing an accessory.

- ⚠ WARNING** • This electric tool produces an electromagnetic field during its operation that could interfere with medical implants. To reduce the risk of serious or fatal injury, it is recommended that people with medical implants consult their physician and the manufacturer of the implant before operating the tool.

While operating the demolition hammer

- ⚠ CAUTION** • Hold the tool by its handle and by the auxiliary handle. Remember that loss of control can cause personal injury.

- Hold the tool by its insulating surfaces, especially when performing work where the cutting portion of the drill may contact hidden wiring or the tool's own power cord. Contact with a live wire also makes the metal parts of the tool live and can cause an electric shock to the operator.

- Do not subject the tool to excessive stress.

- ⚠ CAUTION** • If the drill bit gets stuck in the workpiece, turn off the demolition hammer immediately. Then remove the drill bit from the workpiece. Do not attempt to remove jammed bits by turning the tool on and off.

- Do not put too much pressure on the tool to speed up the drilling. Otherwise, the drill bit will be damaged and the efficiency of the tool will decrease as well as its life span.

- ⚠ WARNING** • The larger the chisel area, the greater the reactive force, which can lead to a loss of control of the tool. To avoid this possibility, hold the tool firmly with both hands and maintain a balanced position on both feet while drilling at 90°.

- Be careful and ready to relax the force as soon as the drill bit penetrates the material. Sudden movements can cause accidents.


- ⚠ CAUTION** • Do not touch the chisel or drill holes immediately after drilling. Wait for them to cool down before handling them. Do not try to cool them with water or oil.


- Avoid placing the tool in a place with particles and/or dust immediately after use, these can be absorbed into the tool mechanism and thus damage it.

- Use headset protectors, when running services that make noise above 85 dB. Exposure to noise can cause hearing loss.

- Use a dust mask and dust extraction equipment if necessary. Remember that working with materials such as asbestos, lead paint, additives, some types of wood, metals, or minerals is highly toxic.

- Wear safety goggles.

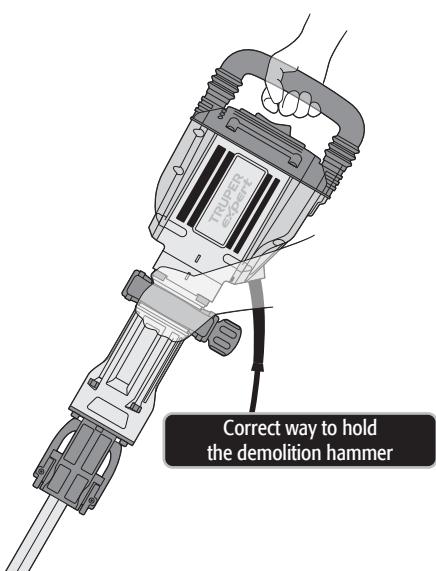

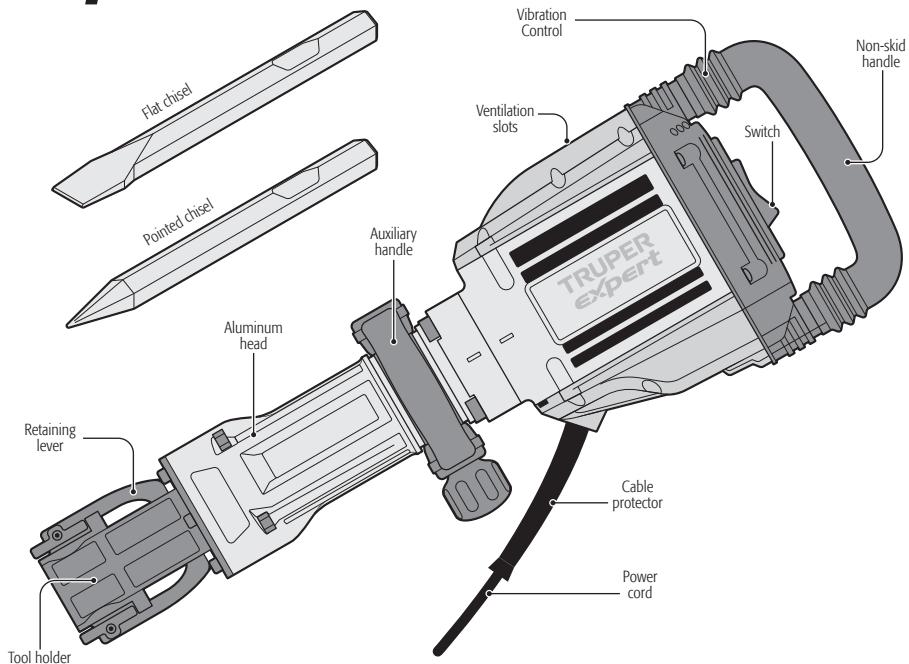

Assembly


CAUTION To prevent accidents, confirm that the switch is off and disconnect the plug from the power supply.

WARNING Wear gloves whenever you change accessories. They can become extremely hot during the operation.

- Clean the accessories shanks and apply grease from the included tubes before mounting them on the tool fastener (**A**).
- The attachments are secured in the tool chuck by the retaining lever (**B**). The position of the lever depends on the type of shank of the fixture being used, usually slotted or shouldered.


SLOTTED ACCESSORIES (**C**)

- Move the retention lever to the bottom of the fastener without reaching the tool axis, as shown in the image (**D**).
- Insert the accessory into the fastener; ensure that the attachment slot is parallel to the retention lever.
- Return the lever to its original position to lock the attachment (**E**).
- Pull the bit to confirm that it is fully secured.
- To remove the accessory, move the lever to the tip of the drill chuck and remove the accessory.

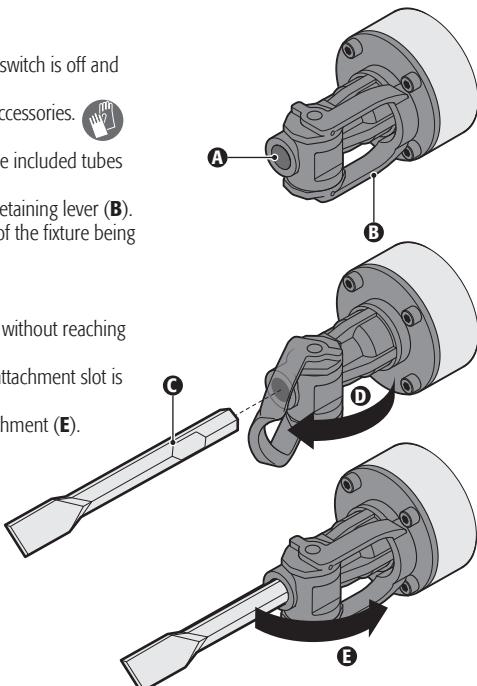

ACCESORIES WITH SHOULDER (F)

- Move the retention lever towards the bottom of the fastener until it exceeds the axis of the tool, as shown in the image (G).
- Insert the accessory into the fastener.
- Return the lever toward the accessory to lock it (H).
- Make sure the shoulder is inside the retaining lever.
- Pull the bit to confirm that it is fully secured.
- To remove the accessory, pull the lever and remove the accessory.

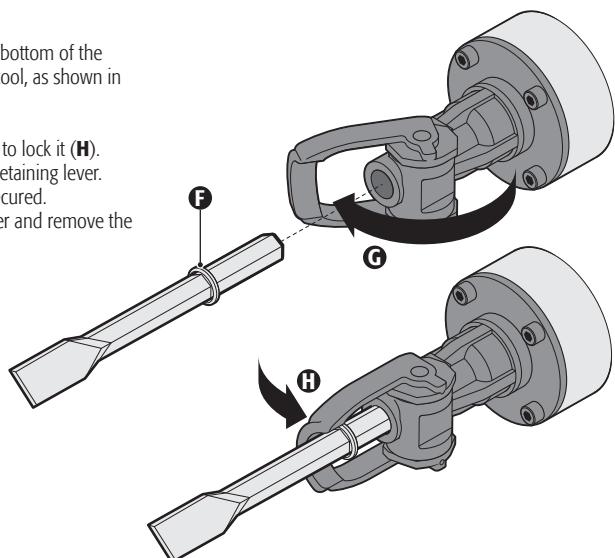


Adjustments

Auxiliary handle


CAUTION Operate the power tool only with the auxiliary handle installed (A).

- The auxiliary handle can be rotated to any position and tilted back and forth for safe, low-fatigue positioning.
- Turn the auxiliary handle knob (B) counterclockwise to loosen the mount (C) and place the auxiliary handle in the desired position.
- Then retighten the auxiliary handle knob by turning clockwise.
- Make sure the band of the mount (D) is positioned in the proper section of the housing.

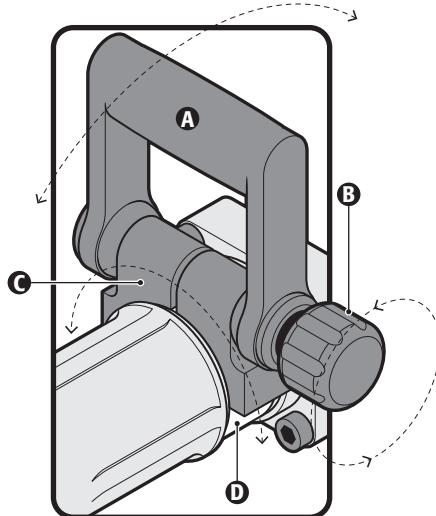


ON AND OFF

- To turn on the demolition unit, press “**I**” on the switch.
- To turn it off press “**O**” on the switch.

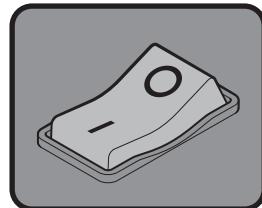**Operation**

- Hold the tool firmly with both hands.
- Turn it on and apply light pressure to it to prevent kickback.
- Over-pressing with the tool will not improve efficiency.

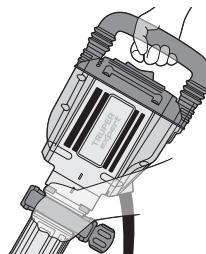**Maintenance****Cleaning and care**

- Clean the machine with a soft cloth, moistened with soap and water, preferably after each use.
- Always keep the vents clean and unobstructed to ensure proper engine cooling.
- Regularly inspect all mounting screws and make sure they are properly tightened. If any of the screws are loose, tighten them immediately.

Lubrication

- The demolition hammer crankshaft is lubricated with low viscosity grease so that it can be used for a long period without the need to replace the grease.
 - Go to a TRUPER Authorized Service Center to replace the grease in case of leakage.
- ⚠ WARNING** Applying non-recommended grease will stick to the machine and reduce its useful life.

Carbon brush replacement

- The carbon brushes must be checked periodically, and always replaced by a TRUPER Authorized Service Center when they have worn out.
- After they have been replaced, ask for them to inspect if the new carbon brushes can move freely in the carbon holder and ask them to turn the tool on for 5 minutes to match the contact of the brushes and the switch.
- Only TRUPER original spare carbon brushes should be used, specifically designed with the right hardness and electrical resistance for each type of motor. Out-of-spec coals can damage the engine.
- When changing carbon brushes always replace both coals.

Service

- Servicing of the tools must be performed only at a TRUPER Authorized Service Center. Service and maintenance by unqualified persons can be dangerous and can cause personal injury in addition to invalidating the product warranty.

Authorized service centers

TRUPER
expert

In the event of any problem contacting a TRUPER Authorized Service Center, please see our webpage WWW.TRUPER.COM to get an updated list, or call our toll-free numbers **800 690-6990** or **800-018-7873** to get information about the nearest Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20050, AGUASCALIENTES, AGS. TEL: 449 994 0537	MORELOS	FIX FERRETERÍAS CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL: 735 352 8931
BAJA CALIFORNIA	SUCURSAL TIJUANA AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL: 664 969 5100	NAYARIT	HERRAMIENTAS DE TEPIC MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL: 311 258 0540
BAJA CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL: 613 132 1115	NUEVO LEÓN	SUCURSAL MONTERREY CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL: 81 8352 8791 / 81 8352 8790
CAMPECHE	TORNILLERÍA Y FERRETERÍA AAA AV. ALVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL: 981 815 2808	OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL: 287 106 3092
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL: 962 118 4083	PUEBLA	SUCURSAL PUEBLA AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLA, PUE. TEL: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	SUCURSAL CHIHUAHUA AV. SILVESTRE TERRAZAS #12-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTEMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL: 614 434 0052	QUERÉTARO	ARU HERRAMIENTAS S.A. DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMIENDA, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL: 427 268 4544
CIUDAD DE MÉXICO	FIX FERRETERÍAS EL MONSTRUO DE CORREDIGORA, CORREDIGORA # 35, COL. CENTRO, C.P. 06060, CUAUHTEMOC, CDMX. TEL: 55 5522 5031 / 5522 4861	QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL: 984 267 3140
COAHUILA	SUCURSAL TORREÓN CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27228, TORREÓN, COAH. TEL: 871 209 68 23	SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, SLP. TEL: 444 822 4341
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL: 314 352 1986 / 352 8015	SINALOA	SUCURSAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL: 667 173 9139 / 173 8400
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZURIÓ #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO. TEL: 618 817 1946 / 618 818 2844	SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL: 644 413 2392
ESTADO DE MÉXICO	SUCURSAL CENTRO JILOTEPEC PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL: 761 782 9104 EXT. 5728 Y 5102	TABASCO	SUCURSAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL: 993 353 7244
GUANAJUATO	C.I.A. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL: 461 617 7578 / 79 / 80 / 88	TAMAULIPAS	VM ORINGS Y REFACCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL: 899 926 7552
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ 1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL: 747 478 5793	TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PALO SIDAR #132, COL. BARROJO DE SAN BARTOLOMÉ, C.P. 90930, SAN PABLO DEL MONTE, TLAX. TEL: 222 271 7502
HIDALGO	FERREPRECIOS S.A. DE C.V. LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL: 775 753 6615 / 775 753 6616	VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL: 782 823 8100 / 826 8484
JALISCO	SUCURSAL GUADALAJARA AV. ADOLFO A. HORN # 6800, COL. SANTA CRUZ DEL VALLE, C.P.: 45655, TLALOMULCO DE ZUÑIGA, JAL. TEL: 33 3606 5285 AL 90	YUCATÁN	SUCURSAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAH Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL: 999 912 2451
MICHOACÁN	FIX FERRETERÍAS AV. PAES DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL: 443 334 6858		

Code	Model	Brand
100893	MADE-20NX	TRUPER expert

Warranty. Duration: 5 years. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by TRUPER®. To make the warranty valid, only present the product in the establishment where you bought it or in Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. The costs of transportation of the product that derive from its fulfillment of its service network are included. TRUPER will not require any proof of purchase to make the warranty effective. Phone number 800-018-7873. Made in China. Imported by TRUPER, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.

Stamp of the business. Delivery date:



Sellos del establecimiento comercial. Ficha de entrega:



100893	Codiglo	Modelo	Marcia	TRUPER	MAD-E-20NX
--------	---------	--------	--------	--------	------------

Poliza de Garantía

TRUPEER EXPERT


Puesta en marcha

TRUPEER EXPERT

Limpieza y cuidados


- Sostenga la herramienta firmemente con ambas manos.
 - Encuéntrela y aplique una leve presión sobre ésta para evitar que rebote sin control.
 - Hacer una presión excesiva con la herramienta no mejorará la eficiencia.

Operación

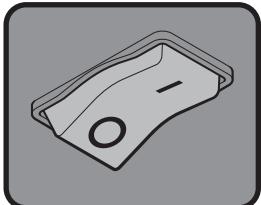

- Para apagarlo presione "0" en el interruptor.
- Para encender el demoldor presione "1" en el interruptor.

Mantenimiento

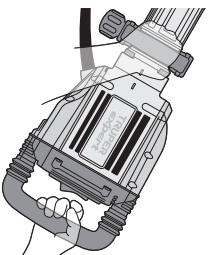


- Limpie la máquina con un paño suave, humedécelo con agua y jabón, preferiblemente despus de cada uso.
 - Siempre mantenga las ventosas limpias y libres de obstrucciones para garantizar un entramado adecuado de motor.
 - Inspeccione regularmente todos los tornillos de montaje y asegúrese de que estén apretados correctamente. En caso de que alguno de los tornillos esté suelto, aprietelo firmemente.

Servicio

- **E** Cigüeña del demoler es la libración con grasa de bala viscosidada para que permanezca en su sitio durante un largo período sin necesidad de reemplazarla.
 - **A**unque es una garantía en caso de fugas, recomienda que se utilice el servicio autorizado TRUPER para reemplazar la grasa.
 - **A**DVERTENCIA Aplicar grasa no recomendada para reemplazar la grasa en caso de fugas.
 - **S**ervicio de las herramientas debe ser realizado únicamente en un Centro de Servicio Autorizado TRUPER. El servicio y mantenimiento realizado por personas no calificadas daños irreversibles a la garantía.

Cambio de carbonos

- Los carbonones debén revirarse Periodicamente, y ser quemados siempre para un Centro de Servicio Autorizado
 - TUEPER cuando se hayan sido quemados, pida que se despus de que haya sido quemado, se le devuelvan más tarde.
 - Siempre que se hayan quemado los carbonones, se debe de limpiar la chimenea en su totalidad, y solicite que se encienda la chimenea durante 5 minutos para empalmar el combustible los carbonones y el cumulado.
 - Solo se deben de usar carbonones de repuesto
 - TUEPER originales, diseños específicamente con la duración de los carbonones fijera de especificaciones para cada tipo de motor.
 - Cuando se haga el cambio de carbonones siempre debén dechar el motor.

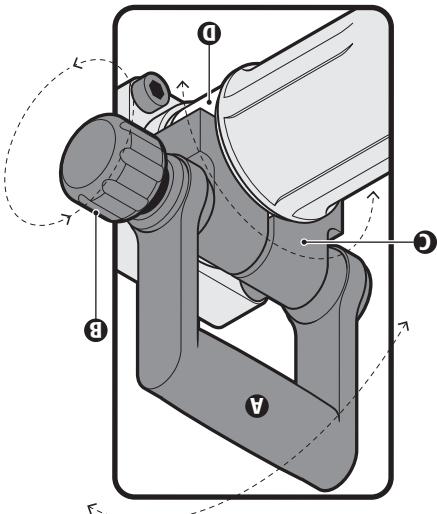


- Asegúrate que la banda de la montura (D) esté girando en dirección a las manecillas del reloj.
- Extrae la parte auxiliar en la posición de montura (C) y colócalas en una posición segura y estable.
- Giro la perilla del mango auxiliar (B) en contra de las manecillas del reloj para aflojar la montura (C) y colocar el mango auxiliar en la posición deseada.
- El mango auxiliar se puede rotar hasta cualquier posición e inclinar hacia adelante y hacia atrás, para lograr solamente con el mango auxiliar instalado (A).
- ASEGÚRATE DE QUE EL MANGO AUXILIAR ESTÉ INSTALADO (A).

AUTENCIÓN


Dope la herramienta eléctrica

Mango auxiliar

Ajuste

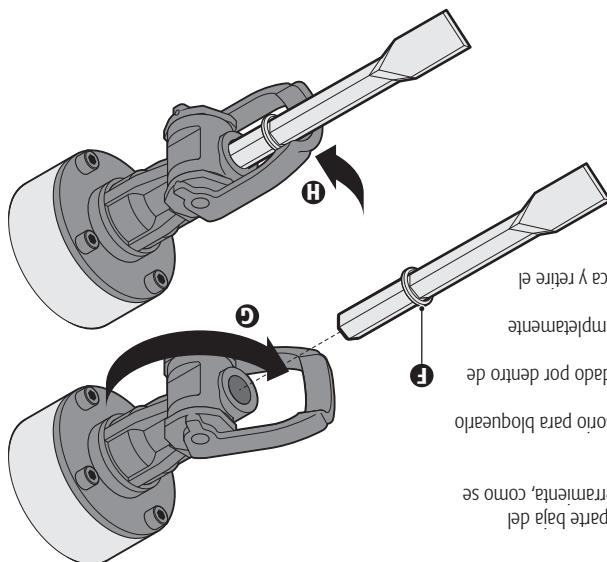


- Para retirar el accesorio, separa la palanca y retira el accesorio.
- Jala la broca para confirmar que está completamente sujeta en la referencia (G).
- Asegúrate de que el hombre haya quedado por dentro de la palanca de retención.
- Regresa la palanca en dirección al accesorio para bloquearlo.
- Inserta el accesorio en el sujetador.
- Muéve la palanca sobre pasas al eje de la herramienta, como se muestra en la referencia (G).
- Muéve la palanca de retención hacia la parte baja del sujetador hasta sobrepasar al eje de la herramienta, como se muestra en la referencia (F).

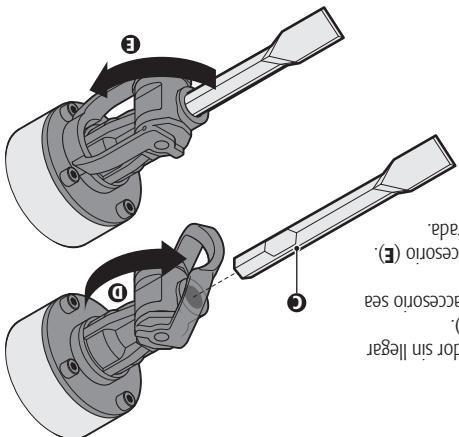

- Para retirar el accesorio, muévalo a la palanca que está completamente asegurada.
- Jale la broca para confirmar que está completamente asegurada.
- Retírela a su posición original para bloquear el accesorio (E).
- Retírela a la palanca de retención.
- Inserte la palanca de retención hacia la parte baja del sujetador sin llegar al límite de la herramienta, como se muestra en la referencia (D).
- Muévala la palanca de retención hacia la parte baja del sujetador sin llegar a la punta del brocador y retire el accesorio.

ACCESORIOS CON RANURA (C)

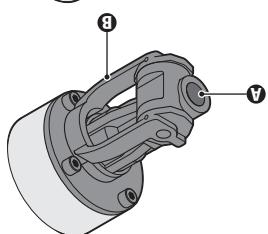


- Los accesorios son segurados en el sujetador de herramienta por medio de zancos de montaje en el sujetador de herramienta (A).
- Limpie el zanco de los accesorios y aplique grasa de los tubos incluidos de la herramienta (B). La posición de la palanca depende del tipo de accesorio que se utilice.
- Los accesorios son segurados en el sujetador de herramienta por medio de zancos de montaje en el sujetador de herramienta (A).



- Utilice guantes siempre que操re el accesorio.
- Puede ser peligroso usar extremadamente calientes durante la operación.
- Este accesorio y desconecte la cavidad del interruptor.

A ATENCIÓN

Montaje

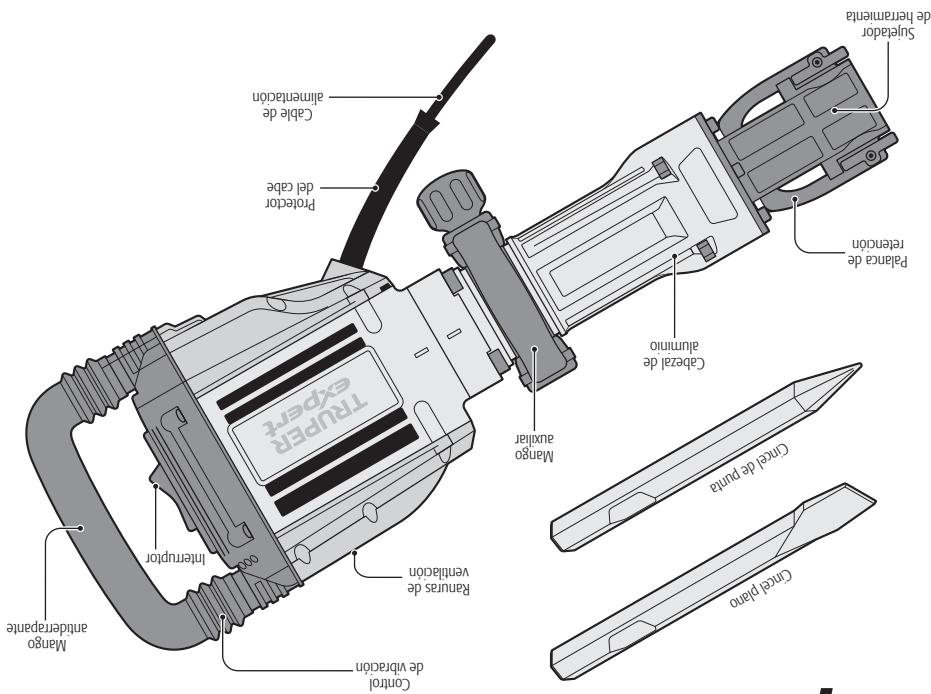

Partes

TRUPERT

TRUPEER EXPERT

Milettas opera el demódeor

■ ALIENACION • Sostengas la heterogeneidad por su
mango y por el mango auxiliar. Recuerde que la perdida
de control puede causar lesiones personales.

- Sostengá la heredamiento por las superficies islandesas.

¡Cucharamichina!, el cucharrito con un cuadro comunitario de corriente hace que las piezas metálicas de la herramienta también tengan certeza y puedan producir una

SU VIDA ULLI.


- Este intento y preparado para regular la fuerza en cuanto sobre ambos pies mientras prefería a 90°.
- Se ha bloccatratarse de material. Los movimientos repetidos sobre el suelo provocan una perdida de control de la hermanita. Para evitar esta posibilidad suele tratar de la hermanita. Para con ambas manos y mantiene una posición equilibrada sobre el suelo.

- Entre colocar la herramienta en un sitio con particuladas o acetato.

- Utilice protectores auriculares, cuando ejecute servicios que hagan ruidos superiores a 85 dB. La

• *L'efficacité des sels métalliques dépend de la nature des métaux et de leur concentration dans l'eau.*

Forma correcta de sostener el demoleador

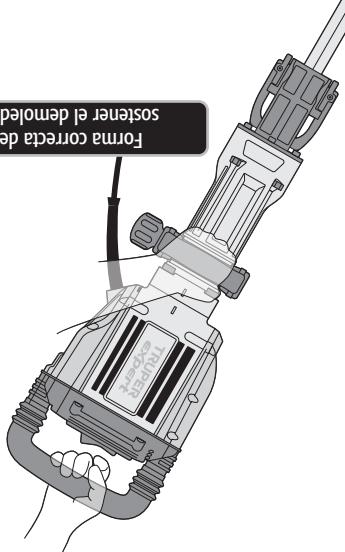

herramienta.

AVERENCIA Esta heramienta electrónica produce un campo eléctrico magnético duradero que genera una corriente eléctrica en el interior del dispositivo. Algunas de las personas con lesiones importantes o fracturas, recomienda la averencia para reducir el dolor y la inflamación.

A PELÍCULA • Asegúrate que el lumenoplano esté apagado (Página 8 Puesta en marcha) antes de conectar la herramienta, de lo contrario ésta comenzará a funcionar inmediatamente, puliéndolo provocar lesiones graves.

REFUGIOS - Asegúrate de que no haya objetos empotados, tales como cables o conducciones eléctricas o tuberías.

A ADVERGNCIA • Ayuda a corregir el manejo de la bicicleta y el automóvil.
A PELIGRO • Antes de golpear un muro o
gran velocidad y provocar lesiones graves.

- Utilizarse su tiempo para evaluar el trabajo y establecer las estrategias que se complementarán.

Antes de operar el demoleador

- Utilice drocas / accesorios deh allíadas y en buenas condiciones para optimizar el trabajo.

ATENCIÓN • La hermandad establecerá procedimientos para la entrega de los documentos que excedan la capacidad del bolso.

Elija la broca o accesorio apropiados

Advertencias de Seguridad

ADVERTENCIA Al operar herramientas eléctricas en exteriores, utilice una extensión especializada marcada como "uso exterior" marca **VOLTEC**. Estas extensiones son

especializadas para el uso en exteriores y reducen el riesgo de sufrir una descarga eléctrica.



AWG = Calibre de alambre estadounidense (American Wire Gauge). Referencia: NMX-J-195-ANNEC
* Se permite utilizarlo siempre y cuando las extensiones militares cuenten con un rótulo de protección contra sobrecorriente.

de 0 A hasta 10 A	18 AWG(*)	16 AWG	14 AWG	12 AWG	10 AWG	8 AWG	6 AWG
de 10 A hasta 15 A	16 AWG	14 AWG	12 AWG	10 AWG	8 AWG	6 AWG	5 (uno a tierra)
de 15 A hasta 20 A	14 AWG	12 AWG	10 AWG	8 AWG	6 AWG	5 (uno a tierra)	3 (uno a tierra)
de 20 A hasta 25 A	12 AWG	10 AWG	8 AWG	6 AWG	5 (uno a tierra)	3 (uno a tierra)	2 (uno a tierra)
de 25 A hasta 30 A	10 AWG	8 AWG	6 AWG	5 (uno a tierra)	3 (uno a tierra)	2 (uno a tierra)	1 (uno a tierra)


ADVERTENCIA Al usar un cable de extensión, asegúrese de usar el calibre suficiente para transportar la corriente que

dependiendo de la longitud del cable y de la capacidad de amperes indicada en la placa de datos de la herramienta. Si tiene

pendida de potencia y sobreexcederán el del motor. La siguiente tabla muestra el tamaño correcto que debe usarse

consistente con su herramienta. Un cable inferior ocasionaría calidas de tensión en la línea, teniendo como resultado

que se debilita el sistema de alimentación. Si tiene dudas use el siguiente tablero más alto.

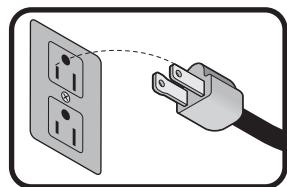

partes con conexión a tierra o de un sistema de corriente eléctrica con conexión a tierra. Una conexión a tierra es necesaria para proteger el usuario en caso de un cortocircuito. No utilice la clavija en forma alguna. El doble aislamiento elimina la necesidad de un cable de conexión a tierra.

La construcción del aislamiento eléctrico de esta herramienta es alterada por salpicaduras o

derramamiento de líquidos durante su operación. No lo exponga a la lluvia, líquidos y/o humedad.

ADVERTENCIA Antes de obtener acceso a las terminales, todos los circuitos de alimentación deben ser desconectados.



La clase de construcción de la herramienta es: Aislamiento reforzado. El cable de alimentación tiene sujetacables tipo Y.


Código	100893	Descripción	Martillo de demolición	Tensión	127 V~	Frecuencia	60 Hz	Corriente	15 A	Potencia	1 600 W	Energía de impacto	55 Joules	Sujetador de herramienta	HEX 1 1/8" (28 mm)	Ciclo de trabajo	50 min de trabajo por 20 min de descanso. Máximo 6 horas diarias.	Conductores	14 AWG x 2C con temperatura de aislamiento de 105 °C	Clase II	Clase IP	•	Aislamiento	•	IP20
--------	--------	-------------	------------------------	---------	--------	------------	-------	-----------	------	----------	---------	--------------------	-----------	--------------------------	--------------------	------------------	---	-------------	--	----------	----------	---	-------------	---	------

MADE-20NX

TRUPER

Especificaciones técnicas

EXPERT

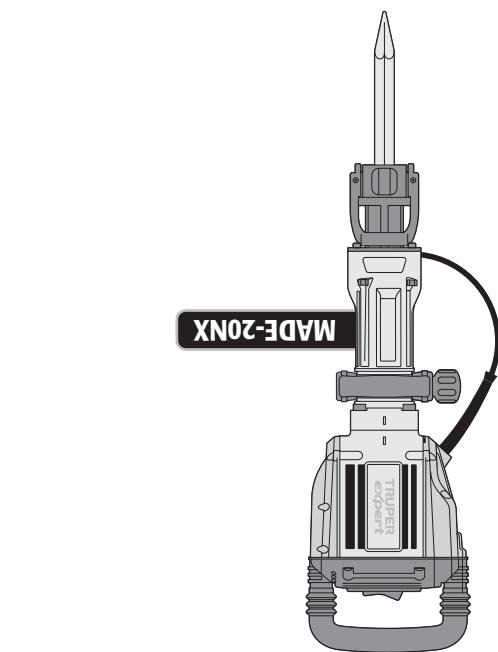

A ATTENCIÓN

Para poder sacar el máximo provecho de la herramienta, alargar su vida útil, hacer válida la garantía en caso de ser necesario y evitar riesgos o lesiones graves, es fundamental leer este instructivo por completo antes de usar la herramienta.

Guarde este instructivo para futuras referencias.

Los gráficos de este instructivo son para referencia, pueden variar del aspecto real de la herramienta.

- | | |
|----|--|
| 10 | Póliza de garantía |
| 9 | Centros de servicio autorizados |
| 8 | Mantenimiento |
| 8 | Operación |
| 8 | Plesta en marcha |
| 7 | Ajustes |
| 6 | Montaje |
| 6 | Partes |
| 5 | Advertencias de seguridad para uso de demoliciones |
| 4 | Advertencias generales de seguridad para herramientas eléctricas |
| 3 | Requisimientos técnicos |
| 3 | Especificaciones técnicas |

Indice


TRUPER **EXPERT**



Lea este instructivo por completo
antes de usar la herramienta.

ATENCIÓN

MADE-20NX

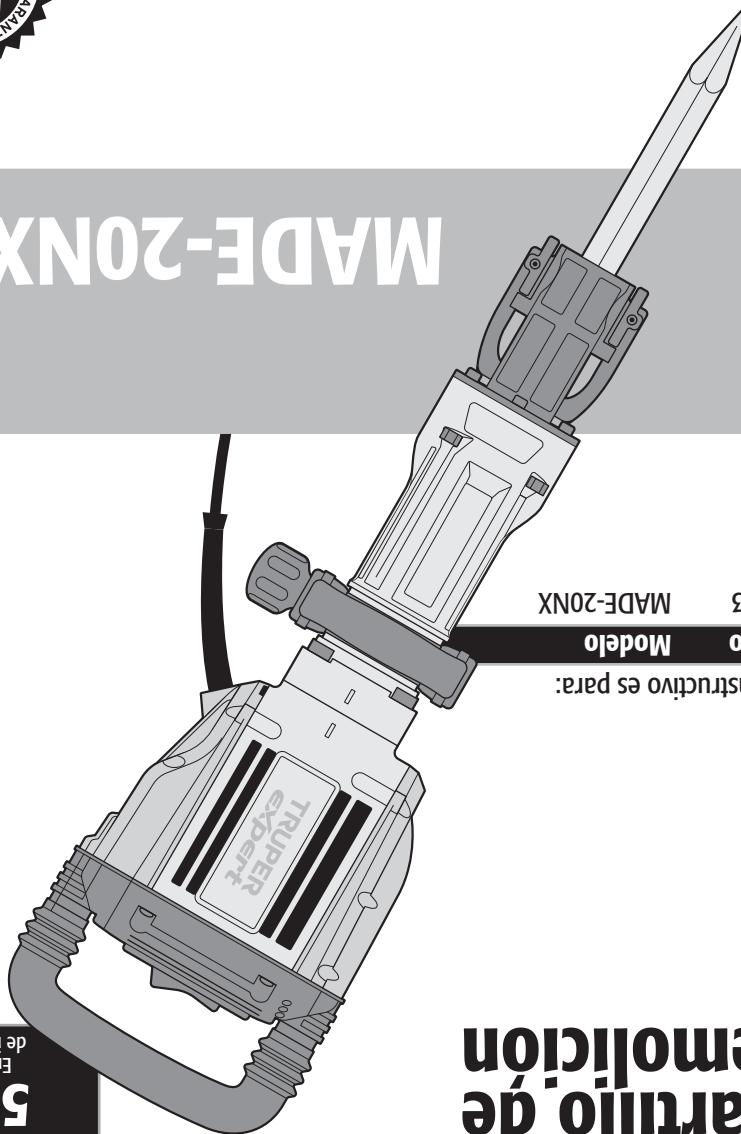

100893 MADE-20NX

Código Modelo

Este instructivo es para:

martillo de demolición
instruccivo de

55 J

Energía
de impacto

TRUPEER[®]
EXPERT

ESPAÑOL
ENGLISH