

ENGLISH
ESPAÑOL

TRUPER®

Manual

Wet / Dry Vac


16 gal

Capacity

Applies for:

Code
101520

Model
ASP-16

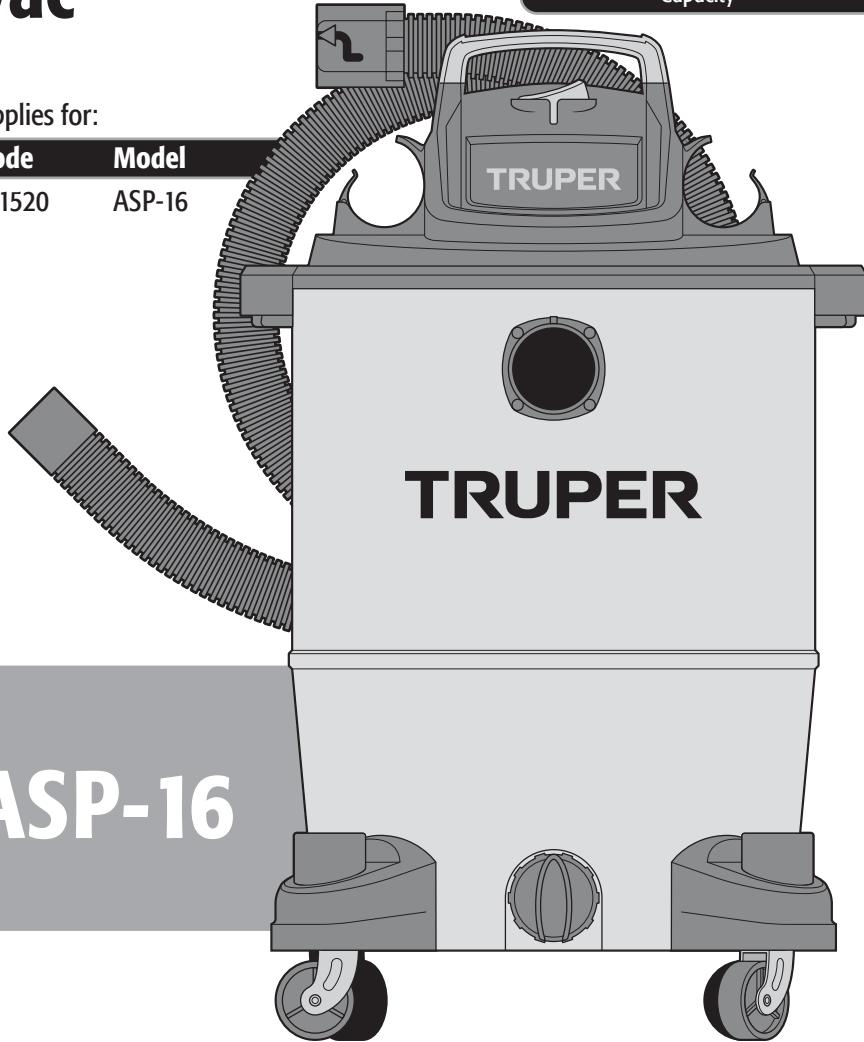

ASP-16

CAUTION



Read this manual thoroughly
before using the tool.




Technical data.....	3
Power requirements.....	3
 General power tools safety warnings.....	4
 Safety warnings for vacuum cleaners.....	5
Parts.....	6
Assembly	7
Start Up.....	7
Maintenance.....	9
Troubleshooting.....	9
Notes.....	10
Authorized service centers	11
Warranty policy.....	12

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

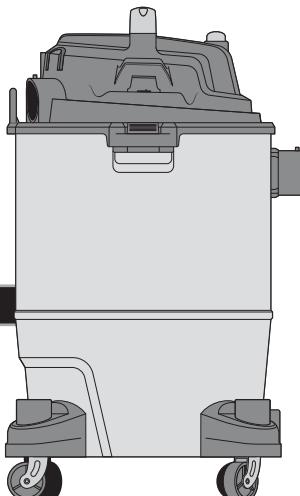

ASP-16

Code	•	101520
Description	•	Wet / Dry vac
Voltage	•	127 V~
Frequency	•	60 Hz
Current	•	8.5 A
Maximum power	•	5 Hp
Rated power	•	1.4 Hp
Capacity	•	16 gal
Vacuuming pressure	•	1.7 PSI
Outflow pressure	•	2 PSI
Conductors	•	16 AWG x 2C with insulating temperature of 221 °F
Insulation	•	Class II IP Grade • IPX4

Power Cord Grips used in this product: Type "Y".

Tool Build Quality: Double insulation

Thermal insulation on motor winding: Class F


WARNING Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a TRUPER® Authorized Service Center. The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use. Do not expose to rain, liquids and/or dampness.

WARNING Before gaining access to the terminals all power sources should be disconnected.



Power requirements

WARNING Tools with double insulation and reinforced insulation are equipped with a polarized plug (one prong is wider than the other). This plug will only fit in the right way into a polarized outlet. If the plug cannot be introduced into the outlet, reverse the plug. If it still doesn't fit, call a qualified electrician to install for you a polarized outlet. Do not alter the plug in any way. Both insulation types eliminate the need of both a grounded third power cord with three prongs or a grounded power connection.

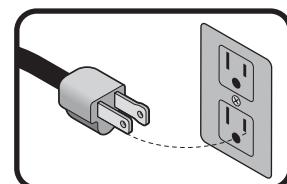

WARNING When using an extension cable, verify the gauge is enough for the power that your product needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and overheating. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

Ampere Capacity	Number of Conductors	Extension gauge	
		from 5.9' to 49.2'	higher than 49.2'
from 0 A and up to 10 A		18 AWG(*)	16 AWG
from 10 A and up to 13 A		16 AWG	14 AWG
from 13 A and up to 15 A	3 (one grounded)	14 AWG	12 AWG
from 15 A and up to 20 A		8 AWG	6 AWG

* It is safe to use only if the extensions have a built-in artifact for over current protection.

AWG = American Wire Gauge. Reference: NMX-J-195-ANCE

WARNING When operating power tools outdoors, use a VOLTECK grounded extension cable labeled "For Outdoors Use". These extensions are especially designed for operating outdoors and reduce the risk of electric shock.



⚠ WARNING! Read carefully all safety warnings and instructions listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. **Save all warnings and instructions for future references.**

Work area

Keep your work area clean, and well lit.

Cluttered and dark areas may cause accidents.



Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

Sparks generated by power tools may ignite the flammable material.



Keep children and bystanders at a safe distance while operating the tool.

Distractions may cause loss of control.



Electrical Safety

The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.



Modified plugs and different power outlets increase the risk of electric shock.

Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

Personal safety

Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.

A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.



Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times.

This enables a better control on the tool during unexpected situations.

Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.

Loose clothes, jewelry or long hair may get caught in moving parts.



If you have dust extraction and recollection devices connected onto the tool, inspect their connections and use them correctly.

Using these devices reduce dust-related risks.

Power Tools Use and Care

Do not force the tool. Use the adequate tool for your application.



The correct tool delivers a better and safer job at the rate for which it was designed.

Do not use the tool if the switch is not working properly.

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.

These measures reduce the risk of accidentally starting the tool.

Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.



Power tools are dangerous in the hands of untrained users.

Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.



Most accidents are caused due to poor maintenance to the tools.

Keep the cutting accessories sharp and clean.

Cutting accessories in good working conditions are less likely to bind and are easier to control.

Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

Service

Repair the tool in a TRUPER® Authorized Service Center using only identical spare parts.

This will ensure that the safety of the power tool is maintained.

This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the product. Strict supervision should be maintained if children or disabled individuals use or are near any type of household appliance.



This tool is in compliance with the Official Mexican Standard (NOM - Norma Oficial Mexicana).

Safety warnings for vacuum cleaners



Dangerous materials

⚠ WARNING • Do not vacuum or use the vacuum cleaner near flammable liquids, gases or explosive fumes such as gasoline or other types of fuel, lighter fluid, hot liquids, cleaners, oil-based paint, natural gas, hydrogen or explosive dust such as coal dust, magnesium dust, grain dust or gunpowder. Sparks inside the motor can ignite flammable vapors or dust.

⚠ WARNING • Do not vacuum any burning or smoke-producing materials like cigarettes, matches or hot ashes.

⚠ CAUTION • To reduce the risk of damage to health, do not vacuum toxic materials.
• Do not vacuum masonry dust or soot from the chimney, as it is a very fine dust and will not be trapped by the filter, which may cause damage to the motor. When vacuuming fine dust use a special dust filter (sold separately).

Power Cable

- Do not pull or carry the vacuum cleaner by the cord; do not use the cord around sharp edges or corners.
- Keep cord away from hot surfaces.
- Do not unplug the vacuum cleaner by pulling on the cord: To unplug, grasp the plug, not the cord.
- Do not use the vacuum cleaner if the power cord or plug is in bad repair.
- Do not pass the vacuum cleaner over the power cord.
- Do not pick up the plug or vacuum cleaner with wet hands.
- To reduce the risk of injury due to accidental starting, unplug the power cord before changing or cleaning the filter.

Blowing

- Direct the air discharge only in the working areas.
- Do not use the vacuum cleaner as a sprayer.
- Do not blow air at people and animals.
- Keep children away when using as a blower.
- Use safety goggles. 

While operating the vacuum cleaner

 





⚠ CAUTION • Keep hair, loose clothing, fingers and any other body parts away from openings and moving parts.

- Do not use or store near hazardous materials.
- Do not leave the vacuum cleaner running unattended.
- Do not leave the vacuum cleaner unattended when it is plugged into the power source.
- Do not install any objects over the ventilation openings.
- Do not operate the vacuum cleaner with blocked vents; keep them free of dust, lint, hair or anything that reduces air flow.
- Do not operate the vacuum cleaner with a broken filter or without the filter installed, except when vacuuming liquids as described in the operation section of this instruction manual.
- To reduce the risk of falls, use extreme caution when cleaning stairs.
- If the vacuum is not working properly: missing parts, dropped or damaged, left outdoors or dropped in water, take it to a  TRUPER® Authorized Service Center.
- Turn off the vacuum cleaner before unplugging it.
- Unplug from outlet when not in use or before servicing.
- Do not allow to be used as a toy. Particular care should be taken when used by children or when they are nearby.
- Do not expose the vacuum cleaner to rain. Store indoors.
- Use ear protectors when performing services that make noises in excess of 85 dB




The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or by untrained persons, unless they are supervised by a person responsible for their safety or have received prior instruction in the use of the appliance.

⚠ CAUTION Children should be supervised to ensure that they do not play with the appliance. Close supervision is necessary when handicapped persons or children use any electrical appliance or are near it.

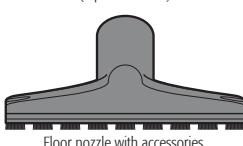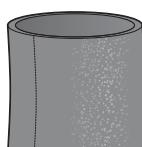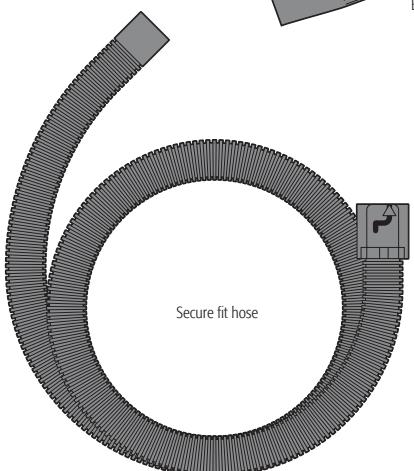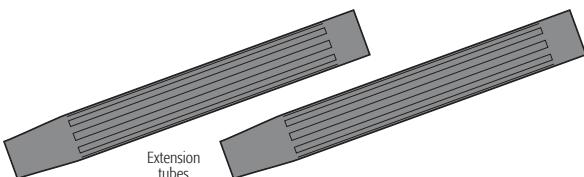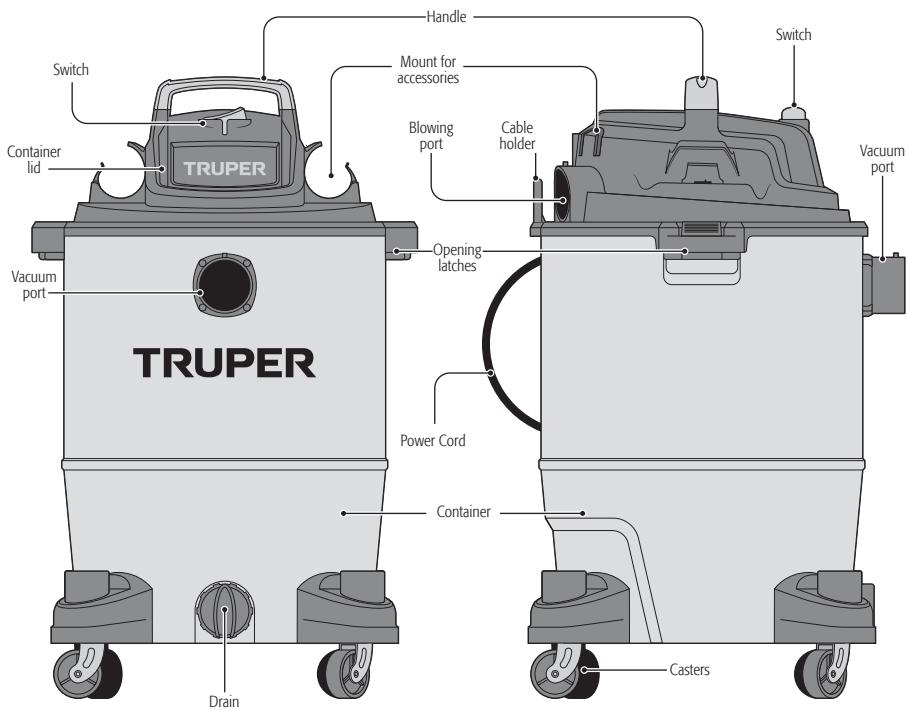


Assembly


 **TRUPER®**

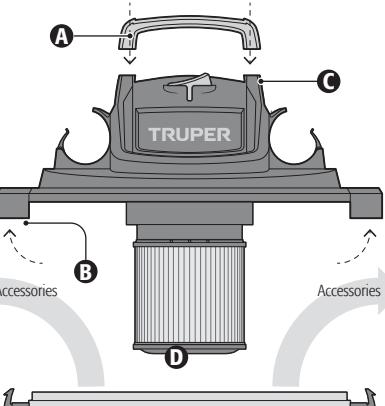

- Insert the hose into the vacuum port and twist it clockwise to secure it in place (**G**).
- If necessary, connect one or more extension tubes to the free end of the hose.
- Choose the appropriate nozzle and connect it to the free end of the hose or if necessary to the extension tube (**H**).

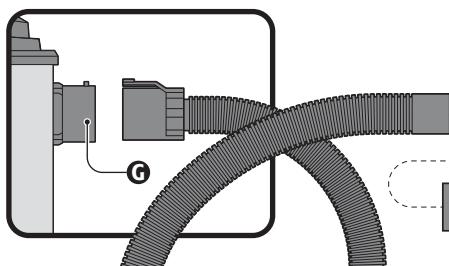

- Insert the handle (**A**) into the container lid, make sure that both mamelons are inserted into the lid boxes. Attach the handle using the 2 screws provided in one of the bags.
- Pull the latches (**B**) outwards to lift the motor cover (**C**).
- Remove all accessories from inside the container.
- The dry vacuum cartridge filter (**D**) is factory installed, remember to use the vacuum cleaner with one of the filters installed otherwise the motor will be damaged and the warranty will be void.
- Turn the container (**E**) upside down and install the four wheels (**F**) in their respective mounts on the base of the container with the included screws. Rotate the container again to support the wheels on the floor.
- Install the motor cover back on the container until the latches click.

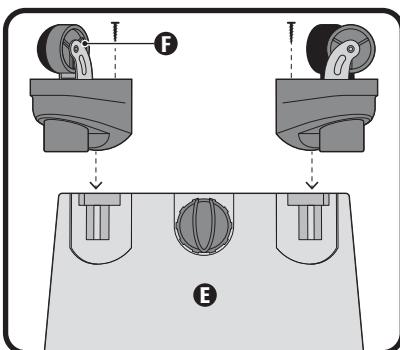


Start up

Turning ON and OFF

- To turn the vacuum cleaner on, plug the power cord into the electrical outlet.
- Install the switch in the "I" (ON) position.
- To turn the vacuum cleaner off, install the switch in the off position "O" (OFF), and disconnect the power cord from the outlet.

CAUTION • Always verify that the switch is in the off position before connecting the power cord to the outlet.

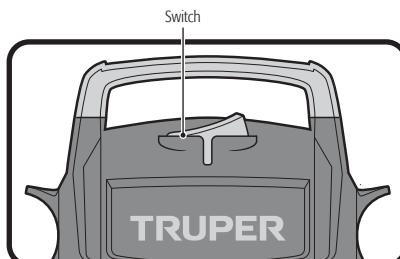

Dry vacuuming


• Open the vacuum as instructed on page 7 to verify that the dry vacuum cartridge filter is properly installed.

• If not, hold the motor cover by the handle and install the filter in the filter cage (**H**) as shown. Then install the motor cover in place.

WARNING • Do not vacuum or work near toxic, flammable or explosive materials as indicated in the safety warnings on page 5.

CAUTION • For dry vacuuming do not use the foam filter that is for liquid vacuuming.

• When you finish the vacuuming work, empty the container before storing the vacuum cleaner.

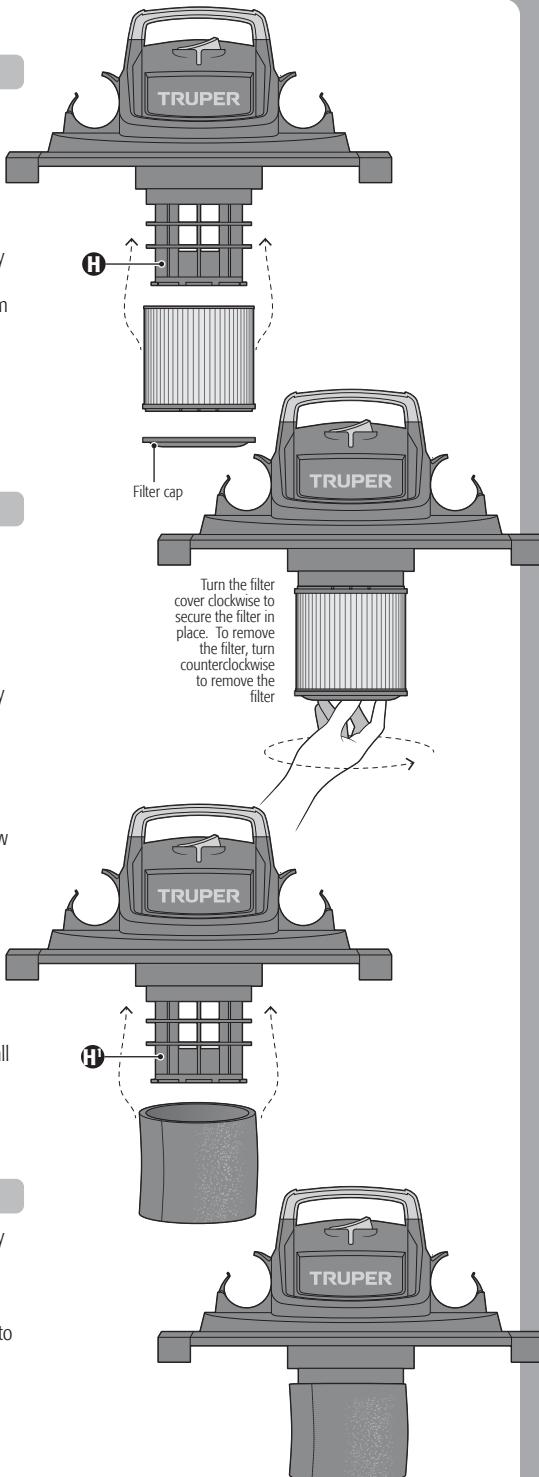

Liquid vacuuming

• To install the foam filter for liquid vacuuming, open the vacuum cleaner as indicated on page 6.

• Turn the engine cover upside down and place the filter in the filter cage (**H¹**) as shown in the image. Then put the engine cover back in place.

WARNING • Do not vacuum or work near toxic, flammable or explosive materials as indicated in the safety warnings on page 5.

CAUTION • For liquid vacuuming, do not use the cloth filter for dry vacuuming.

CAUTION • When vacuuming large quantities of liquids, do not immerse the nozzle completely in the liquid; leave a gap at the tip of the nozzle opening to allow air flow. The machine is designed with a float valve that stops the suction action when the container reaches its maximum capacity. You will notice an increase in motor speed. When this happens, turn the machine off, unplug the power cord from the outlet, open the vacuum and empty the liquid from the container into a receptacle or drain.

• At the end of the vacuuming job empty the container, clean and dry the inside. Remove the foam filter and install the cartridge filter in place before storing the vacuum cleaner.

Blowing

WARNING • Read, understand and apply the safety warnings on page 5.

- Make sure the container is empty before operating the vacuum cleaner as a blower.
- Remove the hose from the vacuum port and connect it to the blower port.
- Hold the end of the hose firmly.
- Turn on the vacuum cleaner.

It is recommended to take the equipment for maintenance once a year for inspection of components such as carbon brushes, bearings, etc.

Cleaning

- Always keep the vents clean and free of obstructions to ensure proper engine cooling.
- Regularly inspect all mounting screws and make sure they are tightened properly. In case any of the screws is loose, tighten it immediately

Service


- Tools should only be serviced at a  **TRUPER®** Authorized Service Center. Service and maintenance by unqualified persons can be dangerous and may result in personal injury and void the product warranty.
- When servicing a vacuum cleaner, ask that only genuine replacement parts be used. Use of unauthorized parts, or failure to properly maintain may create a risk of electrocution or injury.

Carbon brush replacement

- The carbons should be checked periodically, and always be replaced by a  **TRUPER®** Authorized Service Center when they have worn out.
- After they have been replaced, ask to inspect if the new carbons can move freely in the carbon holder and request that the tool be turned on for 5 minutes to match the contact of the carbons and commutator .
- Only genuine  **TRUPER®** replacement carbons, specifically designed with the proper hardness and electrical resistance for each type of motor, should be used. Out of specification carbons may damage the motor.
- When changing carbons, always replace both carbons.

Troubleshooting

Problem	Cause	Solution
The vacuum cleaner is not working.	<ul style="list-style-type: none">• No power.• Defective cable.• The container is full.	<ul style="list-style-type: none">• Check the power supply, cable, circuit switches, fuses.• Unplug and check the electric cable. If damaged, have it repaired in a  TRUPER® Authorized Service Center.• Empty the container.
Dust comes out of the motor cover.	<ul style="list-style-type: none">• The filter cartridge is not set or is damaged.	<ul style="list-style-type: none">• Set or replace the cartridge filter.
Reduced motor efficiency and vibration / speed.	<ul style="list-style-type: none">• There is a blockage in the nozzle, hose or container inlet.• The filter cartridge is clogged due to the presence of fine dust.	<ul style="list-style-type: none">• Check nozzle, hose and container inlet for blockage.• Remove the filter and clean it or install a new one.

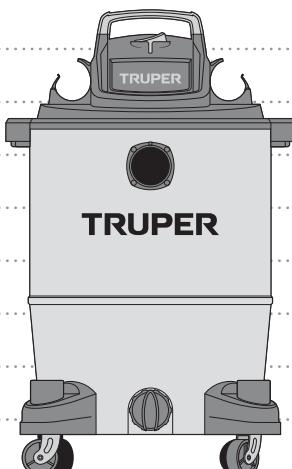

Authorized service centers



In the event of any problem contacting a Truper Authorized Service Center, please see our webpage www.truper.com to get an updated list, or call our toll-free numbers **800 690-6990** or **800-018-7873** to get information about the nearest Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0537	MORELOS	FIX FERRETERÍAS CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931
BAJA CALIFORNIA	SUCRASAL TIJUANA AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100	NAYARIT	HERRAMIENTAS DE TEPIC MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540
BAJA CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115	NUEVO LEÓN	SUCRASAL MONTERREY CARRETERA LAREDO #300, 1B MONTERREY PARKS., COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
CAMPECHE	TORILLERÍA Y FERRETERÍA AAA AV. ALVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808	OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL.: 287 106 3092
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083	PUEBLA	SUCRASAL PUEBLA AV. PERIFÉRICO #2-A, SAN LORENZO ALMECTALA, C.P. 72710, CUATLACINGO, PUE. TEL.: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	SUCRASAL CHIHUAHUA AV. SILVESTRE TERRAZAS #12-111, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 614 434 0052	QUERÉTARO	ARU HERRAMIENTAS S.A. DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544
CIUDAD DE MÉXICO	FIX FERRETERÍAS EL MONSTRUO DE CORREDIGORA, CORREDIGORA # 35, COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX. TEL.: 55 5522 5031 / 5522 4861	QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL. EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL.: 984 267 3140
COAHUILA	SUCRASAL TORRÉON CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORRÉON, COAH. TEL.: 871 209 68 23	SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL.: 444 822 4341
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL.. TEL.: 314 332 1986 / 332 8013	SINALOA	SUCRASAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZURIÓ #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO. TEL.: 618 817 1946 / 618 818 2844	SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 413 2392
ESTADO DE MÉXICO	SUCRASAL CENTRO JILOTEPEC PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL.: 761 782 9101 EXT. 5/28 Y 5102	TABASCO	SUCRASAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 555 7244
GUANAJUATO	CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #25, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 617 7578 / 79 / 80 / 88	TAMAULIPAS	VM ORINGS Y REFACCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL.: 747 478 5793	TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES BOL. SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
HIDALGO	FERREPRECIOS S.A. DE C.V. LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616	VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA ESQ. HORTENSIA S/N, COL. PRIMAVERA, C.P. 93508, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
JALISCO	SUCRASAL GUADALAJARA AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL VALLE, C.P.: 45655, TLAJOMULCO DE ZÚÑIGA, JAL. TEL.: 33 3606 5285 AL 90	YUCATÁN	SUCRASAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858		

Code	Model	Brand
101520	ASP-16	 TRUPER®

Warranty. Duration: 1 year. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by Truper®. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. Phone number **800-018-7873**. Made in China. Imported by Truper, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.



Stamp of the business. Delivery date:

Sello del establecimiento comercial. Fecho de enreaga:



Garnitura. Duración: 1 año. Cobertura: pizzas, componentes y manzana de obra contra defectos de fabricación o fundicionamiento, excepto si es uso en condiciones distintas a las normales; cuando no tiene operado conforme a las instrucciones; tiene alterado o preparado por personal no autorizado por **Trumpet**. Para efectuar la garantía se presentará el recibo o factura original o recibo o comprobante que establezca la fecha de compra de producto, poliza sellada o recibo o comprobante que establezca la fecha de compra del producto que presenta la garantía, incluyendo los gastos de trasportación del producto que devuelva al fabricante para su red de servicio. Tel. 800-018-7873. Made in/Hecho en China. Importador **Trumpet, S.A. de C.V.** Parque Industrial Jiutepec, Jiutepec, Edo. Mex. C.P. 54257, Tel. 761 78 9100.

Código	Modelo	Marca	ASP-16	TRUPER.	101520
--------	--------	-------	--------	---------	--------

garantía
Poliza de

TRUPER®



AGUASCALIENTES DE TODO PARA LA CONSTRUCCIÓN	SUCRISAL TIJUANA	CALIFORNIA SUR	BAJA CALIFORNIA	CAMPECHE TORNILLO Y ERRETERÍA AÁA	CHIHUAHUA SUCRISAL CHIHUAHUA	COAHUILA SUCRISAL TORREÓN	COLIMA BOMBAS MOTORES BIMESTRA ME MÁZANILLO	DURANGO SUCRISAL AGUILA S.A DE C.V.	ESTADO DE MÉJICO SUCRISAL CENTRO INDOTEPIC
MORLOS FIX ERRETERÍAS	PUERLA SUCRISAL PUEBLA	NEVO NORTE	OAXACA SUCRISAL OAXACA	QUINTANA ROO FIX ERRETERÍAS	CHIQUILÁ SUCRISAL CHIQUILÁ	CHIHUAHUA AV SISTERRE CORREDORAS #19-11, PARQUE INDUSTRIAL	COAHUILA SUCRISAL TORREÓN	COLIMA BOMBAS MOTORES BIMESTRA ME MÁZANILLO	DURANGO SUCRISAL AGUILA S.A DE C.V.
NAVARR HERREMIENTAS DE TIPI	TAMAULIPAS SUCRISAL TAMAULIPAS	SONORA FIX ERRETERÍAS	TJALACALA SERVICIOS Y HERREMIENTAS INDUSTRIALES	TJALACALA CALLAO TEL. 993 352 7244	TJALACALA CALLAO TEL. 993 352 7244	TJALACALA CALLAO TEL. 993 352 7244	TJALACALA CALLAO TEL. 993 352 7244	TJALACALA CALLAO TEL. 993 352 7244	TJALACALA CALLAO TEL. 993 352 7244
TJALACALA CALLAO TEL. 993 352 7244	TJALACALA CALLAO TEL. 993 352 7244	TJALACALA CALLAO TEL. 993 352 7244	TJALACALA CALLAO TEL. 993 352 7244	TJALACALA CALLAO TEL. 993 352 7244	TJALACALA CALLAO TEL. 993 352 7244	TJALACALA CALLAO TEL. 993 352 7244	TJALACALA CALLAO TEL. 993 352 7244	TJALACALA CALLAO TEL. 993 352 7244	TJALACALA CALLAO TEL. 993 352 7244

En caso de tener algún problema para contactar un Centro de Servicio Autorizado Truper®, consulte nuestra página www.truper.com donde obtendrá una lista de actualizada, o llame al: 800 690-6990 o 800 018-7873 donde le informaremos.

En caso de tener algún problema para contactar un Centro de Servicio Autorizado Truper®, consulte nuestra página www.truper.com donde obtendrá una lista de actualizada, o llame al: 800 690-6990 o 800 018-7873 donde le informamos.


En caso de tener algún problema para contactar un Centro de Servicio Autorizado Truper®, consulte nuestra página www.truper.com donde obtendrá una lista de actualizada, o llame al: 800 690-6990 o 800 018-7873 donde le informamos.

En caso de tener algún problema para contactar un Centro de Servicio Autorizado Truper®, consulte nuestra página www.truper.com donde obtendrá una lista de actualizada, o llame al: 800 690-6990 o 800 018-7873 donde le informamos.

En caso de tener algún problema para contactar un Centro de Servicio Autorizado Truper®, consulte nuestra página www.truper.com donde obtendrá una lista de actualizada, o llame al: 800 690-6990 o 800 018-7873 donde le informamos.

En caso de tener algún problema para contactar un Centro de Servicio Autorizado Truper®, consulte nuestra página www.truper.com donde obtendrá una lista de actualizada, o llame al: 800 690-6990 o 800 018-7873 donde le informamos.

En caso de tener algún problema para contactar un Centro de Servicio Autorizado Truper®, consulte nuestra página www.truper.com donde obtendrá una lista de actualizada, o llame al: 800 690-6990 o 800 018-7873 donde le informamos.

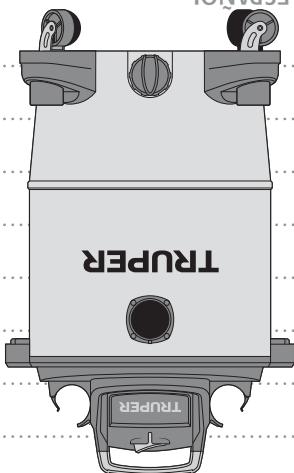

TIPO DE DAÑO	CAUSAS	SOLUCIÓN	LA SOLUCIÓN NO FUNCIONA
• El contenedor está lleno.	• No es el colocado le cartucho de filtro o reemplazado el cartucho.	• Coloque o reemplace el cartucho del filtro o está dañado.	• Sigue pudiendo el motor.
• Cables defectuosos.	• No hay energía eléctrica.	• Revise el suministro eléctrico, el cable, los interruptores de circuito, los fusibles.	• La solución no funciona.
• El contenedor está lleno.	• El cartucho de filtro.	• Vacíe el contenedor.	• El cartucho de filtro.

Solución de problemas

Cambio de carbones

carbones, báteros, etc. para la elaboración de compuestos con alto contenido de hidrógeno y bajo contenido de carbono.


Limpieza y cuidados

CARDOSES, DAIROS, ETC.



Mantenimiento

Puesta en marcha

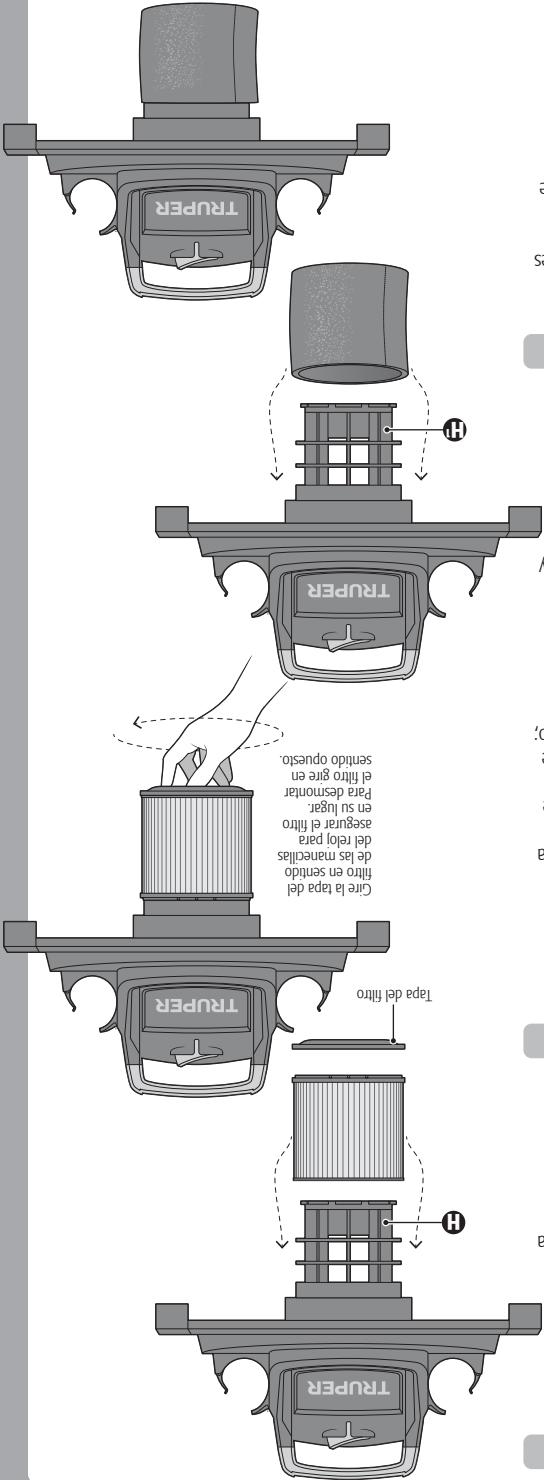

Aspirado en seco

- Abra la aspiradora como se indica en la página 7 para verifcar que el filtro para aspirado en seco esté debidamente instalado.
- De lo contrario coloque el filtro en la jaula del filtro (H) como se indica en la imagen. Después coloque la cubierta del motor en su sitio.
- De lo contrario coloque el filtro en la jaula del filtro (H) y apriete las tuercas de sujeción.
- Una vez que el filtro para aspirado en seco esté debidamente instalado, proceda con los siguientes pasos:

Aspirado de líquidos

- Abra la aspiradora como se indica en la Página 6 para instalar el filtro de espuma para aspirado de líquidos.
- Ponga la cubierta del motor boca abajo y coloque el filtro

A ATENCIÓN • Para el transporte de líquidos no tóxicos en las advertencias de seguridad de la página 5.

A ADVERTENCIA • No aspire el polvo que se libera del motor en su sitio.

Después de limpiar el motor (**H**), como se indica en la página 10, coloque el cable de la batería en la madera.


almacenan la aspiradora. Coloque el filtro de cartucho en su lugar antes de limpieza sea de interior. Retire el filtro de espuma y almacénelo en un recipiente o una bolsa plástica.

- Encendida la aspiradora.
- Llido final.
- Sostenerla firmemente el extremo de la manguera o de la tubería.
- Retirar la manguera del Puerto de aspirado y conectarla al Puerto de aspirado. Si lo requiere conectar el los tubos de aspirador.
- Aségurese de que el contenido se encuentra vacío de aspirador.

ADVERTENCIA • Lea, comprenda y aplique las advertencias de seguridad dadas en la página 5.

Sopla do

For more information about the study, please contact Dr. Michael J. Koenig at (314) 747-2100 or via email at koenig@dfci.harvard.edu.

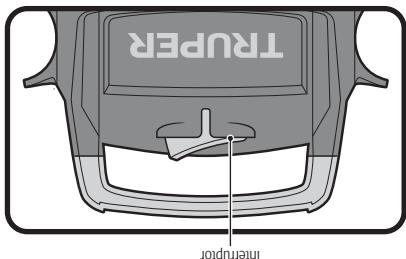



• Encienda el tomacorriente.
• Siempre verifique que el interruptor se encuentre en la posición de apagado antes de conectar el cable de suministro.

• Para apagar la aspiradora coloque el interruptor en la posición de apagado "OFF".
• Coloque el interruptor en la posición de encendido "ON".

• Coloque el interruptor en la posición de encendido "ON".
• Para encender la aspiradora conecte el cable al tomacorriente.


Encendido y apagado


Puesta en marcha

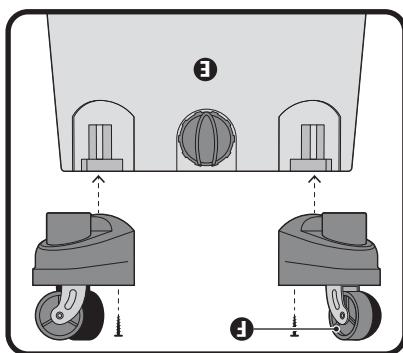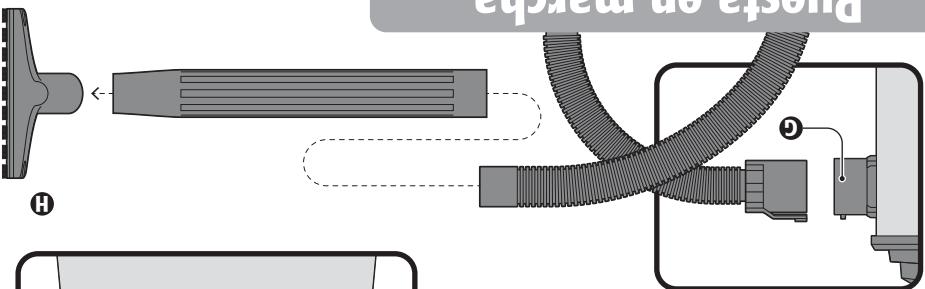

• Inserete la mangüera en el Puerto de Punto de las manecillas del reloj para asegurar en su lugar.
• De ser necesario conecte uno más tubos de extensión (G).
• Elimí la boquilla adecuada y conectela en el extremo libre en el extremo libre de la mangüera.
• De ser necesario o de ser el caso en tuubo de extensión (H).
• de la mangüera o de ser el caso en tuubo de extensión (H).

- Inserete la mangüera en el Puerto de Punto de las manecillas del reloj para asegurar en su lugar.
- Limpie la boquilla adecuada y gire en sentido de las agujas del reloj para desmontarla.
- Quite el conector (E) de la base y coloque las cubetas del motor se desprendrá la base inferior.
- Instale el filtro (F) en sus respectivas monturas en la base del aspirador con los tornillos incluidos. Gire de nuevo el conector para volver a conectarlo.
- Ponga el conector (E) de la base y coloque las cubetas del motor se desprendrá la base inferior.
- Coloque el motor (C) en el conector de la base.
- Retire todos los accesorios del interior del contenedor.
- Encienda el motor (C).
- Tire de los seguros (B) hacia afuera para levantar la cubierta del motor.
- Vuelva a poner la cubierta del motor.
- Aségúrese de que ambos mamelones se introduzcan en las bases.
- Inserete el mango en la tapa del contenedor (A).

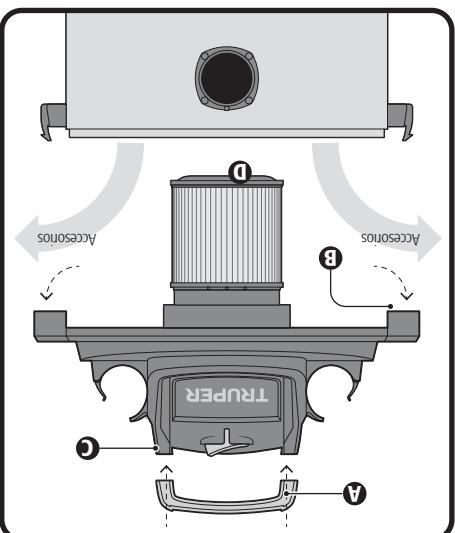

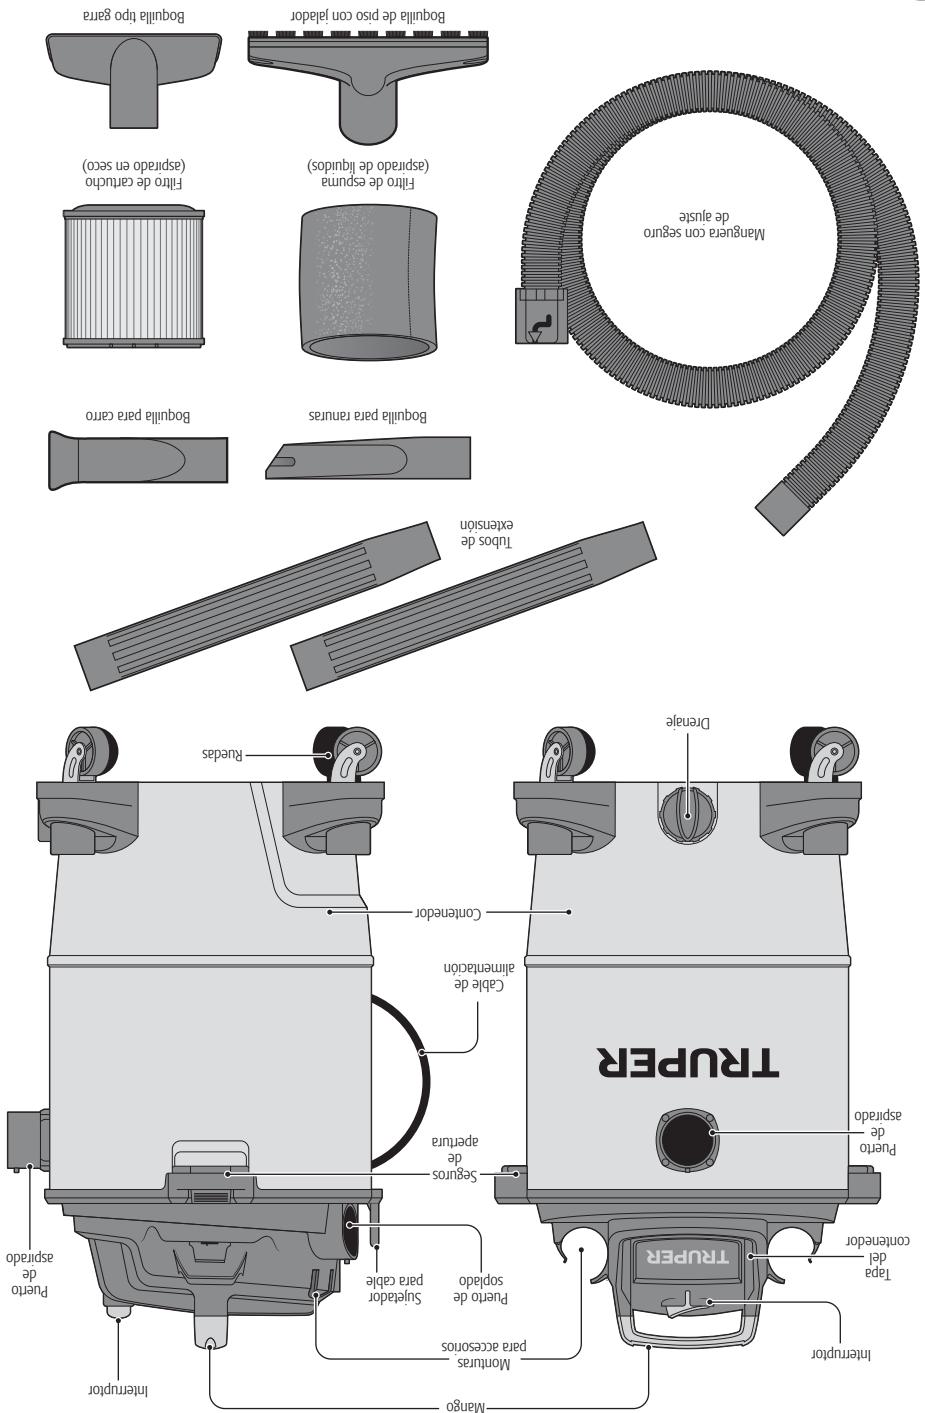



Mexicana (NOM).

con la Loma (LALA)

Está herramienta cumple

en

de

que

el

de




ADVERTENCIA Al operar herramientas eléctricas en exteriores y reducir el riesgo de sufrir una descarga eléctrica, especializada marca como "uso extremo" marca **VOLTECK**. Estas extensiones son

AWC = Clase de alambre establendose (American Wire Gauge). Referencia: NM-B-195-ANWCE.

* Se permite utilizar siempre cuando las extensiones mismas contienen con el protechon contra sobrecorriente.

de 0 A hasta 10 A	18 AWG(*)	16 AWG	14 AWG	12 AWG	10 AWG	8 AWG	6 AWG
de 10 A hasta 13 A	3 (uno a tres)	de 13 A hasta 15 A	de 15 A hasta 20 A				

ADVERTENCIA Al usar un cable de extensi^{on}, asegurese de usar el calibre suficiente para transportar la corriente que suministra su herramienta. Un cable de un calibre inferior ocasionara cables de tensiⁿ en la linea, teniendo como resultado dependencia de potencia y sobrecalentamiento del motor. La siguiente tabla muestra el tamano correcto que debe usarse dependiendo de la longitud del cable y de la amperaje de la herramienta. Si tiene

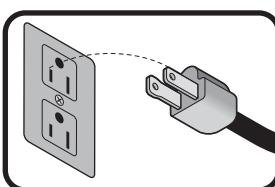

calibre o de un sistema de corriente electrica con conexiⁿ a tierra. La clas^e de alambre polarizado y solo puede conectarse de una forma. Si la clavija no cae en el contacto, volteela. Si aun no se adapta, póngase en contacto con un electricista calificado o insale un empalme polarizado. No olvide la clavija en forma alguna. El doble aislamiento elimina la necesidad de un cable polarizado. Una clavija en forma alguna no cumple con el estandar de seguridad establecido por la UL.


Redu^rimientos electricos

ADVERTENCIA Antes de obtener acceso a los terminales, todos los circuitos de alimentaciⁿ deben ser desconectados. La construcciⁿ del aislamiento electrico es esta herramienta es alterada por salpicaduras o derramamiento de liquidos durante su operaciⁿ. No le exponga a la lluvia, liquidos y/o humedad.

ADVERTENCIA Si el cable de alimentaciⁿ se daña, este debe ser reemplazado por el fabricante o Centro de Servicio Autorizado **TRUPER**, con el fin de evitar algún riesgo de descarga o cecidencia considerable.

El cable de alimentaciⁿ tiene sujetacables tipo: Y La clase de aislamiento termico de los devanados del motor: Clase F
La clase de construcción de la herramienta es: Doble aislamiento.

Codijo •	101520	Descripción •	Aspiradora seco / mojado
Corriente •	8.5 A	Potencia nominal •	1 080 W (1.4 HP)
Capacidad •	90 L (16 gal)	Presi ⁿ de aspirado •	11.7 kPa (1.7 PSI)
Presi ⁿ de aspirado •	13.8 kPa (2 PSI)	Presi ⁿ de salida •	16 AWG x 2C con temperatura de aislamiento de 105 °C
Presi ⁿ de salida •	11.7 kPa (1.7 PSI)	Clase II	Grado IP • IPX4

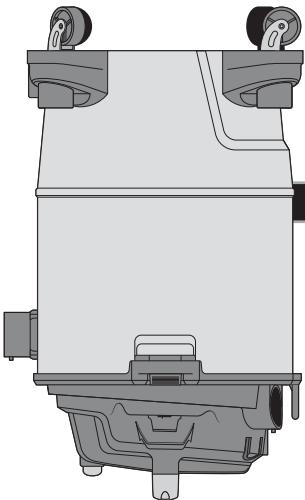

AS-P-16

Para poder sacar el máximo provecho de la herramienta, alargar su vida útil, hacer válida la garantía en caso de ser necesario y evitar riesgos o lesiones graves, es fundamental leer este instructivo por completo antes de usar la herramienta.

Guarde este instructivo para futuras referencias.

Los gráficos de este instructivo son para referencia, pueden variar del aspecto real de la herramienta.

- | | |
|----|--|
| 12 | Poliza de garantía |
| 11 | Centros de servicio autorizados |
| 10 | Notas |
| 9 | Solución de problemas |
| 8 | Mantenimiento |
| 7 | Puesta en marcha |
| 6 | Ensamble |
| 5 | Partes |
| 4 | Advertencias de seguridad para uso de aspiradoras |
| 3 | Advertencias generales de seguridad para herramientas eléctricas |
| 3 | Requisitos técnicos |
| 3 | Especificaciones técnicas |


A ATENCIÓN
Indice
TRUPER®



Lea este instructivo por completo
antes de usar la herramienta.



ATENCION

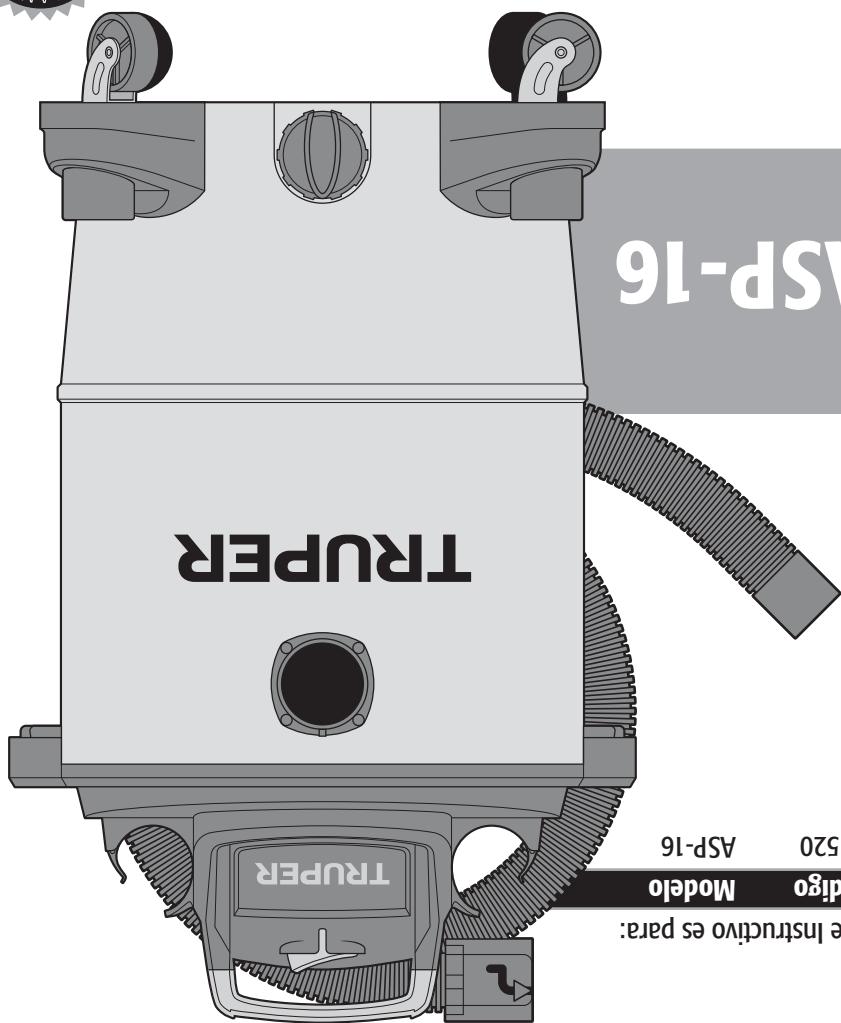

101520 ASP-16
Código Modelo

Este instructivo es para:

Capacidad
60 L
16 gal

Aspiradora seco / mojado

Instructivo de

TRUPER®

ESPAÑOL
ENGLISH