


ENGLISH
ESPAÑOL

TRUPER®
max


Manual

Cordless String Trimmer

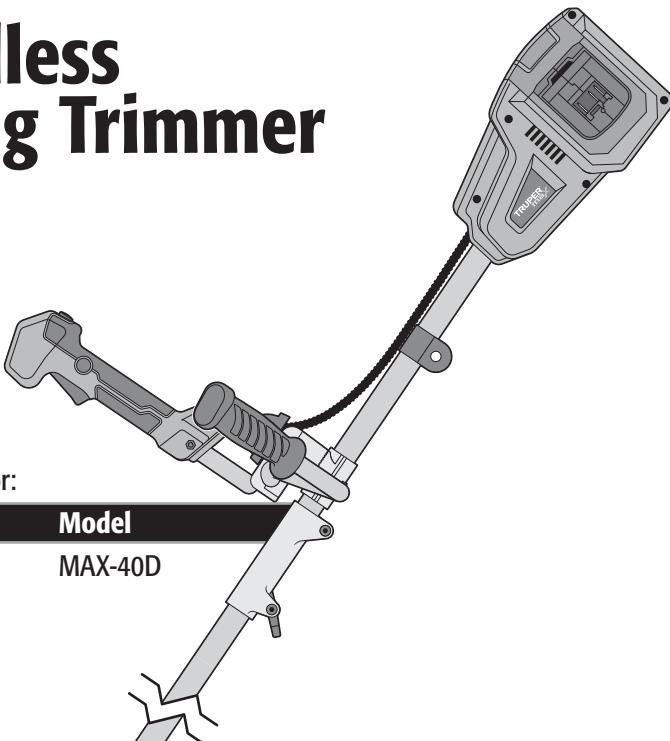

Applies for:

Code	Model
102338	MAX-40D

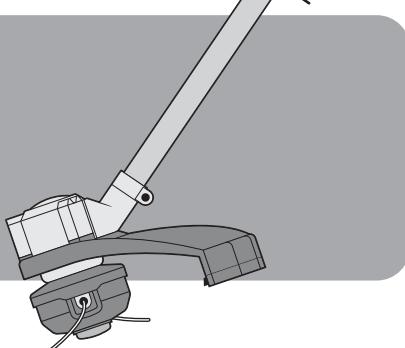

40 V = 13"
Cutting swath

CAUTION



Read this manual thoroughly
before using the tool.




Technical data	3
Power requirements	3
 General power tool safety warnings	4
 Safety warnings for the use of cordless brush cutters	5
Parts list	7
Assembly	8
Parts	9
Preparations	10
Start up	11
Troubleshooting	13
Maintenance	13
Environmental protection	13
Accessories and spare parts	14
Notes	14
Authorized service centers	15
Warranty policy	16

CAUTION

To gain the best performance of the tool, prolong the duty life, make the warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

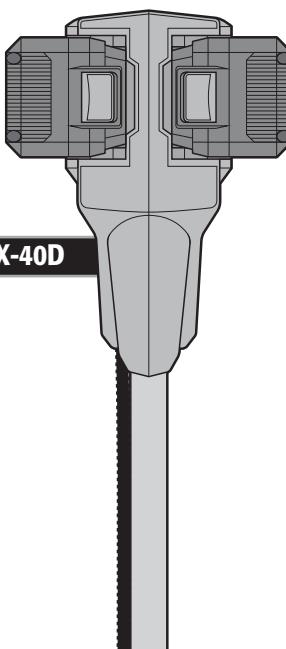

MAX-40D

Code	•	102338
Description	•	Cordless string trimmer
Cutting capacity	•	13"
Voltage	•	40 V---
Speed	•	6 500 RPM
Weight with batteries	•	12 lb
Noise level	•	< 100 dB
Cutting systems	•	Nylon thread reel and blade
Recommended thread diameter	•	0.095"
Batteries	•	Ion-lithium 20 V--- 4 Ah Charging time: 1 h 20 min approximately
Charger	•	Input: Voltage: 127 V~ Frequency: 60 Hz Current: 2 A Output: 21.5 V--- 3 A

The power cable has cable clamps type: Y
The construction class of the tool is: Class III
Charger construction class is Reinforced insulation

WARNING Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a TRUPER Authorized Service Center.

The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use.


Do not expose to rain, liquids and/or dampness.

WARNING Before gaining access to the terminals all power sources should be disconnected.



Power requirements

WARNING Tools with double insulation are equipped with a polarized plug (one prong is wider than the other). This plug will only fit in the right way into a polarized outlet. If the plug cannot be introduced into the outlet, reverse the plug. If it still doesn't fit, call a qualified electrician to install for you a polarized outlet. Do not alter the plug in any way. Double insulation eliminates the need of both a grounded third power cord with three prongs or a grounded power connection.

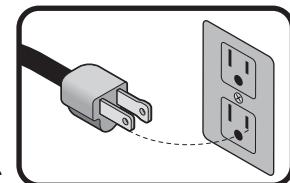

WARNING When using an extension cable, verify the gauge is enough for the power that your product needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and overheating. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

Amperage Capacity	Number of Conductors	Extension gauge from 6 ft to 49 ft	higher than 49 ft
from 0 A and up to 10 A		18 AWG(*)	16 AWG
from 10 A and up to 13 A		16 AWG	14 AWG
from 13 A and up to 15 A		14 AWG	12 AWG
from 15 A and up to 20 A	3 (one grounded)	8 AWG	6 AWG

* It is safe to use only if the extensions have a built-in artifact for over current protection.

AWG = American Wire Gauge. Reference: NMX-J-195-ANCE

WARNING When operating power tools outdoors, use a VOLTECK grounded extension cable labeled "For Outdoors Use". These extensions are especially designed for operating outdoors and reduce the risk of electric shock.



⚠️ WARNING! Read carefully all safety warnings and instruction listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. **Save all warnings and instructions for future references.**

Work area

Keep your work area clean, and well lit.

Cluttered and dark areas may cause accidents.



Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

Sparks generated by power tools may ignite the flammable material.



Keep children and bystanders at a safe distance while operating the tool.

Distractions may cause lossing control.



Electrical Safety

The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.

Modified plugs and different power outlets increase the risk of electric shock.



Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

Personal safety

Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.

A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-slip shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.



Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times.

This enables a better control on the tool during unexpected situations.

Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.

Loose clothes, jewelry or long hair may get caught in moving parts.



If you have dust extraction and recollection devices connected onto the tool, inspect their connections and use them correctly. Using these devices reduce dust-related risks.

Power Tools Use and Care

Do not force the tool. Use the adequate tool for your application.



The correct tool delivers a better and safer job at the rate for which it was designed.

Do not use the tool if the switch is not working properly.

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.

These measures reduce the risk of accidentally starting the tool.



Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.

Power tools are dangerous in the hands of untrained users.

Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.

Most accidents are caused due to poor maintenance to the tools.



Keep the cutting accessories sharp and clean.

Cutting accessories in good working conditions are less likely to bind and are easier to control.

The machine must not be used by children or persons with reduced physical, sensory or mental capacities; nor by persons with no experience or knowledge in its use, unless they are supervised by a person responsible for their safety or have received prior instructions on the use of the machine.

Children must be supervised to ensure that they do not play with the machine.

Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

Use and care of the battery-operated tool

Recharge only with the charger specified by TRUPER.

The charger specified for one battery may cause a fire hazard if used with another battery.

Use batteries specifically designed for the tool.

Use of any other battery may result in danger of fire damage.

When the battery is not in use, keep it away from any metallic object such as paper clips, coins, keys, nails, screws or any metallic object that can make a connection between the terminals.



A short circuit between the terminals can cause burns or fire.

In severe conditions, liquid may leak from the battery; avoid contact. If there is accidental contact, wash the area with water.

In case of eye contact, seek medical attention.

Spilled liquid may cause irritation or burns.

Service

Repair the tool at an Authorized TRUPER Service Center using only identical replacement parts.

To maintain the safety of the tool.



This tool is in compliance with the Official Mexican Standard (NOM - Norma Oficial Mexicana).

Safety warnings for the use of cordless brush cutters

Batteries and charger

DANGER • Use only Truper Max chargers to charge the tool battery. Using any other charger may result in fire or risk of injury.

DANGER • Use only batteries designed specifically for the tool. Other batteries may create a risk of injury or fire.

- Connect the charger to an alternating current (AC) supply only.

DANGER • Do not use the charger outdoors.

- Observe "+/-" polarity when charging.
- Never recharge a leaking battery.
- Do not use batteries or the charger for purposes other than those for which they were designed.
- Do not modify the battery or charger contacts.
- Never expose the batteries to temperatures higher than 112 °F (50 °C).

DANGER • Never expose batteries to the fire, they may explode.

CAUTION • Batteries should be kept away from any metal objects such as paper clips, coins, keys, nails, screws or any other object that could cause the terminals to make contact, coins, keys, nails, screws or any other object that could cause the terminals to make contact, as this will cause a short circuit that could cause burns or fire.

CAUTION • Under extreme conditions, the battery liquid may leak. If so, avoid any contact. If accidental contact occurs, wash with abundant water, rinse with lemon juice and vinegar. If the liquid enters in contact with the eyes, wash with abundant water during several minutes and look for medical help immediately. The liquid expelled from the batteries could cause irradiation or burns.

CAUTION • To maximize battery life, fully discharge the battery at least once a month. Do not leave the battery without recharging for more than three months. Always charge the battery to its maximum capacity. Before using the machine for the first time, charge the battery for a minimum of 1 hour 20 minutes.

- Avoid overcharging the string trimmer while mowing to prevent damage to the battery.

Before using the string trimmer

CAUTION • Read the manual carefully. Familiarize yourself with the controls and proper use of the string trimmer.

- Wear eye protection.
- Never allow children or persons unfamiliar with the string trimmer to operate it.
- Avoid using the string trimmer while people, especially children or pets, are around.
- Use the string trimmer only in daylight or when there is good lighting.
- Start the engine only when hands and feet are away from the cutting elements.
- Never assemble metal cutting elements.
- Use only manufacturer's recommended replacement parts and accessories.
- Always disconnect the string trimmer batteries when not in use and before performing maintenance or cleaning.
- Inspect and service the equipment regularly. The equipment should only be serviced by an authorized service center.
- Be careful not to injure yourself with the knife to adjust the length of the nylon line.
- Keep the string trimmer out of the reach of children when not in use.
- Carefully inspect the area to be trimmed for any obstacles and remove foreign objects that may be thrown by the string trimmer. Failure to do so may result in an accident and reduce the life of the tool.

CAUTION • The area to be trimmed must be well lit.

CAUTION • Make sure that the string trimmer has all its parts in good condition and that the cutting line guard is properly installed. Do not use the string trimmer if the guard is damaged or parts are missing.

⚠ WARNING • Use only original nylon wire, and do not replace it with metal wire for any reason.

⚠ WARNING • To avoid electric shock, avoid working in humid environments, while it is raining and/or mowing dewy grass.



While using the string trimmer

⚠ CAUTION • Do not use the string trimmer near other people, children or animals.

⚠ WARNING • Never allow the cutting head to exceed 12" in height and do not point it at people or animals.

⚠ WARNING • Use the string trimmer to cut only at ground level, never use it to cut vegetation on stones or walls.

⚠ CAUTION • Do not walk on gravel floors with the string trimmer running, the cutting line can throw gravel fragments at the operator or others causing injury.

⚠ WARNING • Keep hands and feet away from the cutting head while the string trimmer is running.

⚠ DANGER • When working near roadways, stop cutting until there are no vehicles in sight. Foreign particles that may be thrown by the string trimmer into moving vehicles can cause a serious accident.

Security alerts



Read the manual before operating the machine.



Wear hearing protection and safety glasses.



Clear the area to be mowed of objects that could be thrown. Keep people and animals away from the mowing area.



Keep out of reach of children.



In the event of damage to the power cord, disconnect the plug immediately.



Do not expose to moisture.

After using the string trimmer


⚠ WARNING • The cutting elements continue to rotate after the engine is turned off.

• Do not attempt to stop the rotating motion of the cutting line in any way other than releasing the switch. Wait for the reel to stop by itself after turning the string trimmer off, this will take a few seconds.

Parts list


TRUPER®
max

1. Straight shaft and cutting head.
2. Bicycle type handle clamp and connection to the straight shaft.
3. Bicycle type handle.
4. Lithium ion battery (x2).
5. Cable clips (x2).
6. Dual battery charger.
7. Battery holder.
8. Pin rod.
9. Hexagonal wrench.
10. Cutting head for thread.
11. Cutting blade.
12. Guard.
13. Guard extension.
14. Receiving washer.
15. Clamping washer.
16. Cutting blade retainer.
17. Nut.
18. Shoulder harness.
19. Hex key
20. Screw (x3)
21. Insulating gasket
22. Steel washer

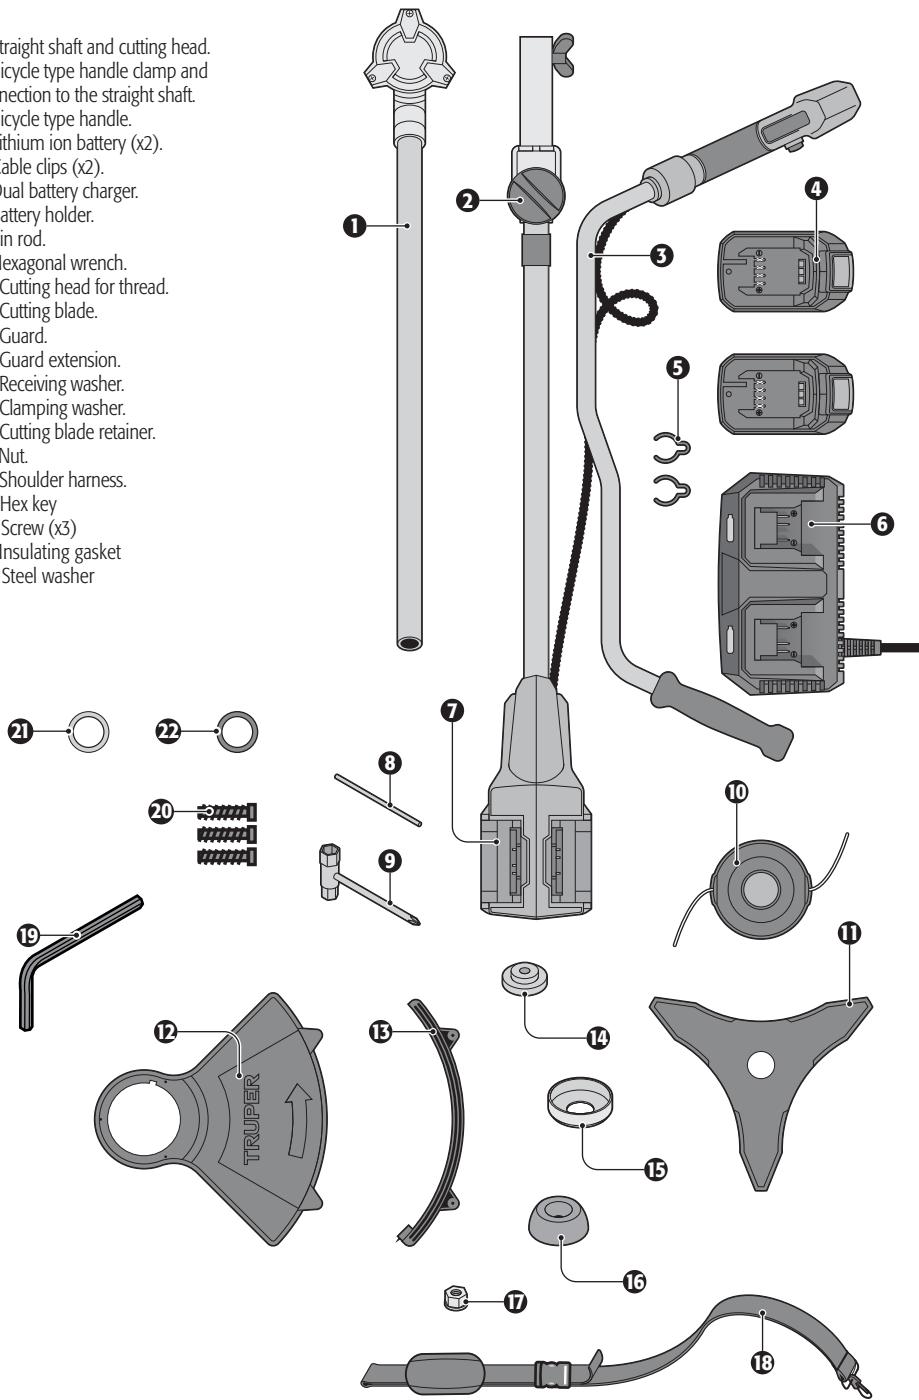

Bicycle type handle


- Loosen the knob (**A**) to open the clamp (**B**).
- Place the handle (**C**) on the clamp mount (**D**).
- Close clamp (**B**) and tighten knob (**A**) to secure in position.
- Secure the cable to the shaft with the supplied clips (**E**).

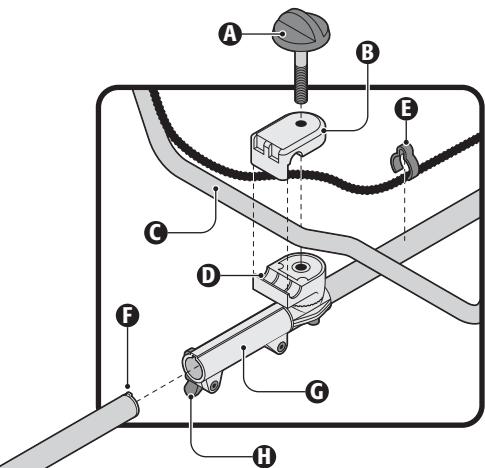**Straight shaft**


- Match the notch in the straight shaft (**F**) with the slot in the mount hole (**G**).
- Insert the straight shaft into the mounting hole as far as it will go to make the electrical connection.
- Tighten the butterfly knob (**H**) to secure the straight shaft in place.

Bicycle type handle adjustment


- To adjust the bicycle type handle (**C**), loosen the knob (**A**), move the handle to the most comfortable position for the operator and tighten the knob.

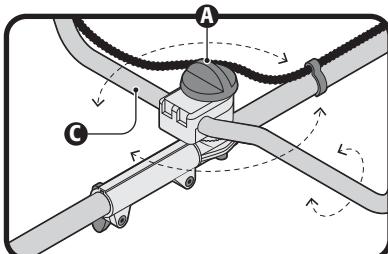**Guard**


- Match the slot in the guard (**I**) with the notch in the cutting head (**J**).
- Secure the guard to the cutting head with the three screws provided.

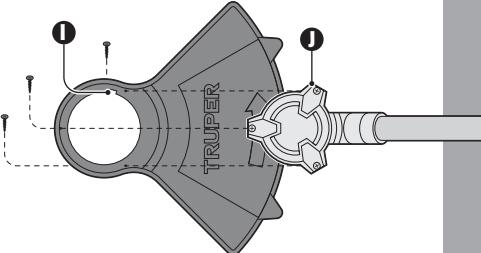

- When using the string trimmer with the string trimmer head (**K**), the guard extension (**L**) must be installed.
- Attach the extension to the guard by means of the two screws provided.

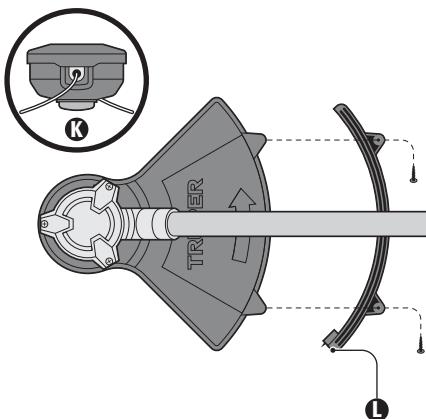
**Harness**

- Attach the harness latch to the axle eye.
- The eyelet has a screw to secure its position. Loosen the screw with the Allen wrench, run the eye along the shaft to the most comfortable position for the operator and then tighten the screw.

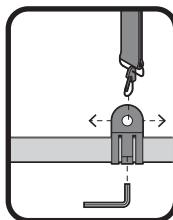


Parts

TRUPER®
max

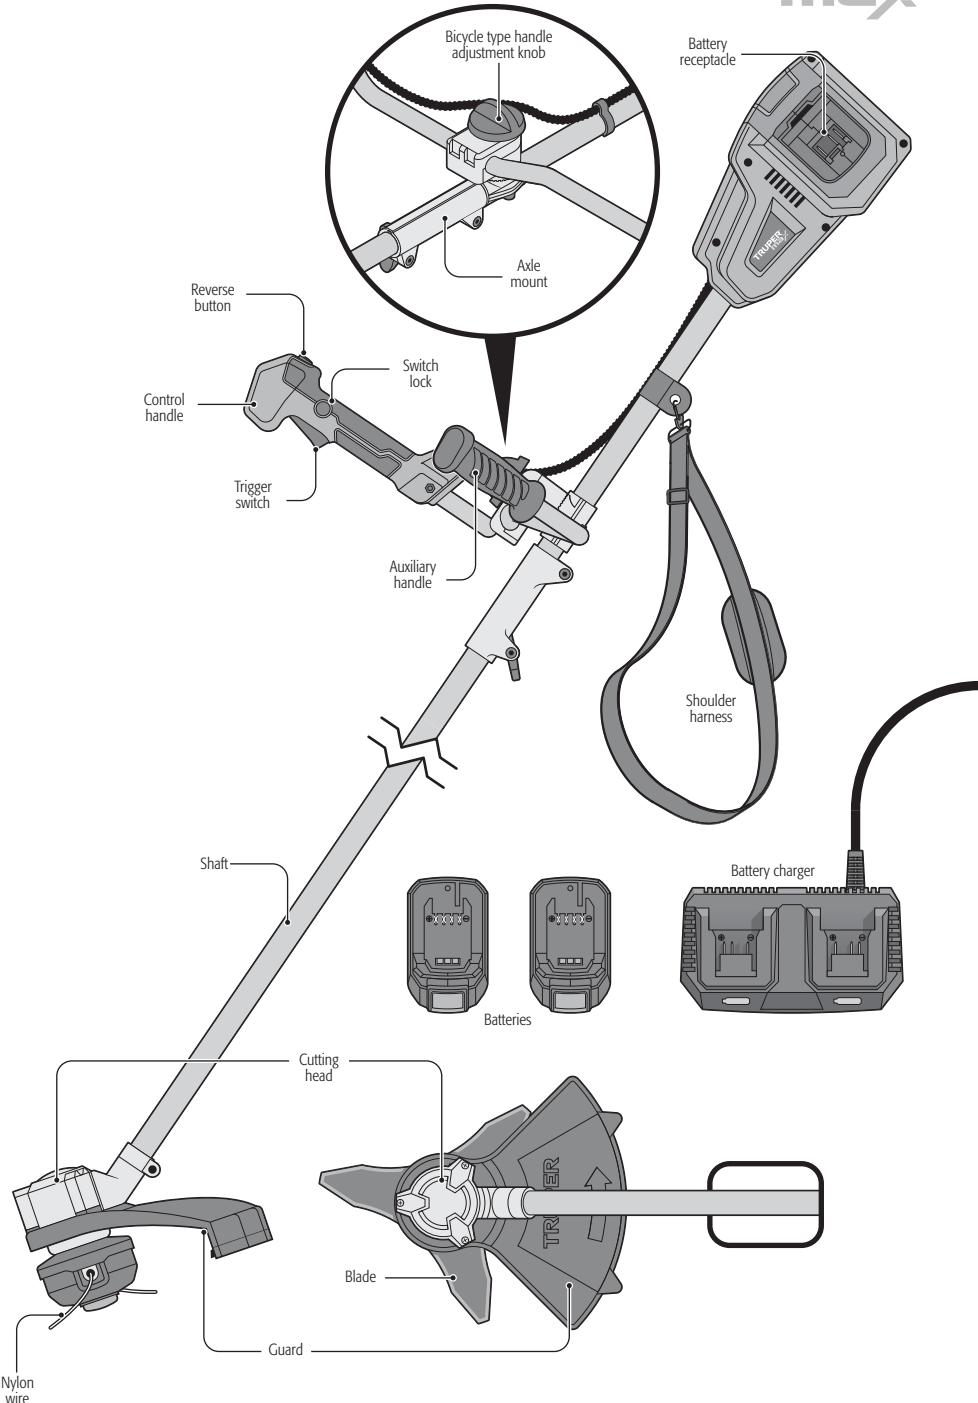


Installing the blade


- Insert the insulating gasket (**A1**) and steel washer (**A2**) into the cutting head shaft base (**C**).
- Place the receiving washer (**B**) in the spindle of the cutting head shaft (**C**).
- Align the blade (**D**) onto the receiving washer (**B**).
- Place the retaining plate (**E**) over the blade.
- Secure the blade by attaching the lock nut (**F**).
- Insert the locking pin (**G**) into the side of the receiving washer (**B**) to hold the shaft in place, then tighten the lock nut counterclockwise using the provided wrench (**H**).
- Use the guard without the extension attached. Refer to the Guard section (page 8) for more details.

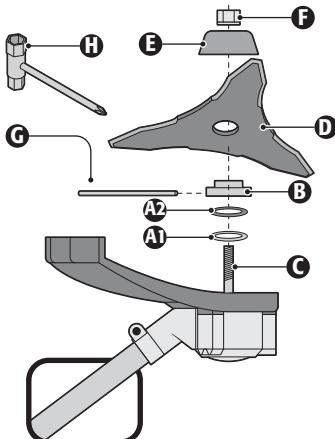**Installing the trimmer spool**

- Place the insulating gasket (**A1**) and steel washer (**A2**) into the cutting head shaft base (**C**).
- Place the receiving washer (**B**) in the spindle of the cutting head shaft (**C**).
- Position the retaining washer (**I**) over the receiving washer (**B**).
- Insert the locking pin (**G**) into the side of the receiving washer (**B**) to secure the shaft.
- Screw the threaded spool (**J**) onto the shaft by hand, turning it counterclockwise to tighten.
- Use the guard with the extension attached. Refer to the Guard section (page 8) for more details.

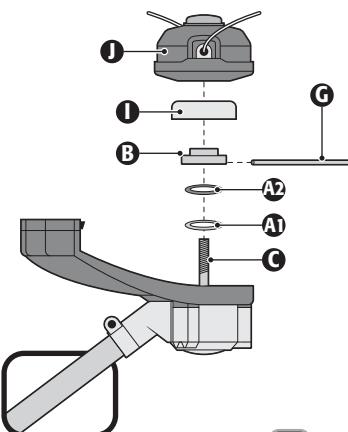**Battery charging**

1. Plug the charger plug into a 127 V~ outlet. (The green charging indicator light will turn on).
2. Insert the batteries into the charger by sliding it as shown in the picture. The green light should turn off and the red light should light up, indicating that charging has started.
 - When the battery is fully charged, the green light will turn on and the red light will turn off.
 - Disconnect the charger from the power supply when charging is complete.
 - If the red light exceeds the recommended charging time, it is a sign that the battery is defective., replace it with a new one.
 - If the red-light flashes, it is a sign that the battery temperature is below 32 °F or above 167 °F. Wait until the battery temperature is in the proper range before charging.

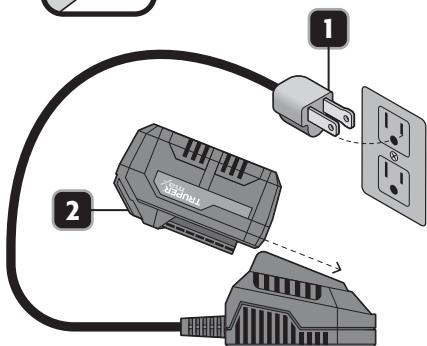**Considerations for battery use**


The battery comes DISCHARGED from the factory. You will need to charge it for approximately 1 hour 20 minutes before you can use it. The normal charging temperature is 32 °F to 113 °F. Outside this range, charging is automatically suspended until it reaches the correct temperature. The normal discharge / working temperature is 32 °F to 167 °F. If 167 °F is exceeded, the electronic control shuts off the power to the tool until the temperature reaches the optimum temperature range again. When the battery is below normal voltage during work, the tool stops working. Between each charge, give the charger 15 minutes rest. In a hot environment or after prolonged use, the battery may become too hot to be recharged. Allow the battery to cool before attempting to recharge.

Preparations

TRUPER®
max

Batteries

- Once the batteries are charged, insert them into their respective receptacles.
- Slide the battery into its receptacle until you hear a click to make sure they are correctly inserted.
- To remove the batteries, press the latch (**A**) and slide the battery out.
- To make sure the batteries are charged, press the indicator button (**B**) next to each battery. The color of the light indicates the charge level.

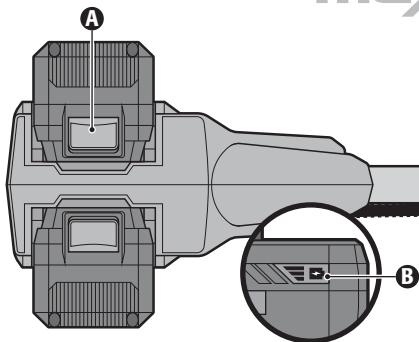

Tool/battery protection system


CAUTION • The tool is equipped with a system that automatically stops the tool to prolong both its useful life and that of the batteries, this happens in the following cases:

Overload. When the tool is forced, the batteries consume abnormally high current levels. Suspend overexertion work and turn the tool back on.

Overheating. Let the tool and batteries cool before turning it back on.

Over-discharge. The batteries level is low. In this case, remove the batteries from the tool and charge them.


Remaining battery capacity

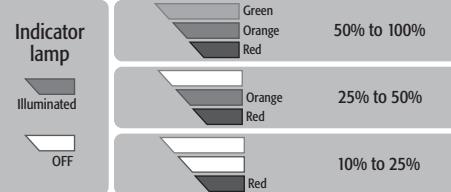

Start up

Turning on

- To start the string trimmer, hold down the switch lock (**C**) and pull the trigger switch (**D**).
- The switch lock (**C**) prevents accidental starting.
- To turn the string trimmer off, release the trigger switch (**D**).
- In case the blade gets stuck in the brush, release the switch trigger (**D**), press the reverse button (**E**) and pull the switch trigger again.

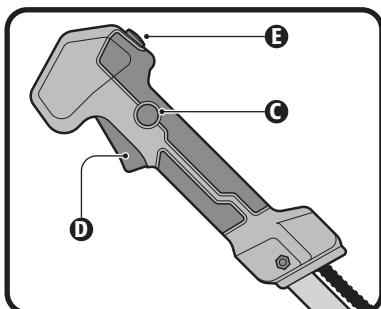


Operation

CAUTION • Remember that you as the string trimmer operator are responsible for your safety, as well as the safety of those in the vicinity of the work area. Follow all safety rules (pages 4 and 5) before operating the tool.

- Maintain a balanced stance with both feet firmly on the ground.
- Hold the string trimmer firmly in front of you with both hands so that the tool is in line with your body and pointing the cutting head 30° down, away from your feet.


DANGER • Do not start or operate the string trimmer in any other position.

- Start the string trimmer and make cuts from left to right by rotating your waist while maintaining the position of the tool.

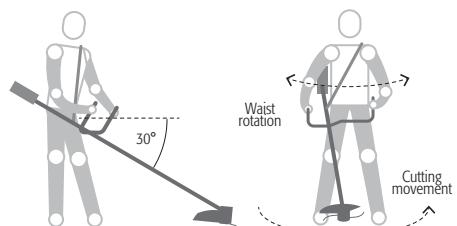




Cutting with cutting wire

- As the grass is cut, the cutting line will wear out and eventually come off. To release more line from the reel, push the string trimmer down a little so that the ground presses the retaining cap against the reel and releases more line. The excess string will be cut off by the guard blade, at this point stop pushing the string trimmer against the ground to avoid wasting string.
- When cutting tall weeds or grass, cut them gradually, do not try to cut them all at once from the base, as the residue may jam the cutting head or cause you to lose control of the string trimmer.

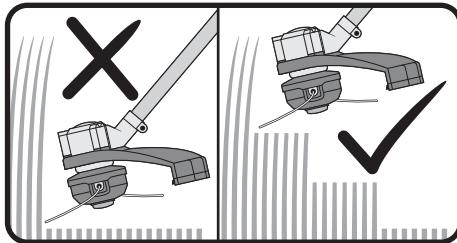

Cutting wire spool

- With the string trimmer off and the batteries removed, remove the reel retaining cap (**A**) by pressing the release buttons by hand.
- Remove the empty spool, make sure it is clean and has no damaged or worn parts.
- Cut a piece of thread 10 ft long.
- Fold the thread in half, and insert it into the notch.
- Take both threads and wind them in the direction of the arrow marked on the spool. Make sure that each piece of thread is twisted in its respective section (top and bottom). Do not tangle too much yarn, after tangling, there should be a minimum distance of 6 mm between the edge of the spool and the tangled thread.
- Leave approximately 6" of both untangled threads.
- Place the spool back in its cover (**H**) by thread the ends of each thread through the holes in the cover.
- Attach the retaining cap and push down until the two retaining latches click back.
- Recommended for use with 2.4 mm diameter cutting wire model (HDU-12-95, HTA-95B, HTA-95, HLB-95, HTR3-95)

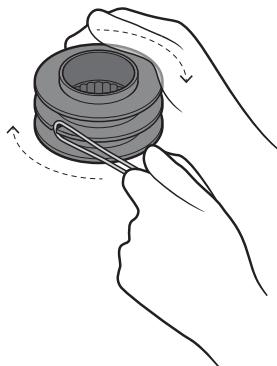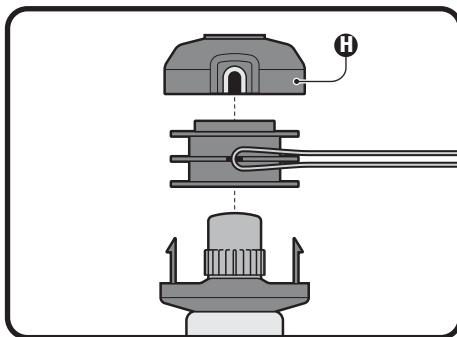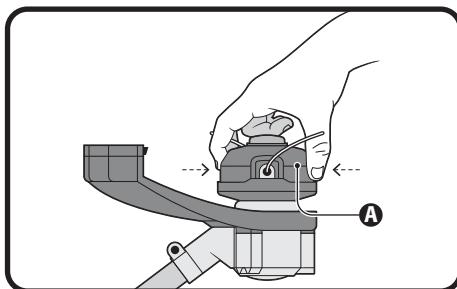

Troubleshooting

**TRUPER®
max**

Problem	Cause	Solution
String trimmer loses efficiency.	<ul style="list-style-type: none">Low battery.	<ul style="list-style-type: none">Charge the battery.
Trigger cannot be pulled.	<ul style="list-style-type: none">The switch lock is locked.	<ul style="list-style-type: none">Press the switch lock to unlock.
Trigger can be pulled but head will not rotate.	<ul style="list-style-type: none">The battery is not charged.	<ul style="list-style-type: none">Charge the battery.
The battery is leaking.	<ul style="list-style-type: none">Tiny drips may occur in extreme temperatures or after heavy use, this is normal.Heavy or very noticeable dripping is due to a damaged battery.	<ul style="list-style-type: none">Immediately clean liquid from skin or clothing with soap and water.Replace the battery immediately.
Battery does not charge and charge level indicator light does not turn on.	<ul style="list-style-type: none">Charger connection improperly installed on battery.Incorrect charger connection to the socket.	<ul style="list-style-type: none">Insert the charger connection to the battery correctly.Check that the charger plug is properly connected to the socket.
The string trimmer heats up after prolonged periods of work.	<ul style="list-style-type: none">This heating is normal.	<ul style="list-style-type: none">Allow the string trimmer to cool down for 5 minutes.
Battery heats up during operation.	<ul style="list-style-type: none">This heating is normal, as the energy extracted from the battery while the string trimmer is running causes the battery to heat up.	<ul style="list-style-type: none">Stop the string trimmer for 5 minutes to allow the battery to cool down.
Battery heats up during charging.	<ul style="list-style-type: none">This heating is normal, resulting from the chemical reactions that occur inside the battery while it is charging.	
Charger heats up during charging.	<ul style="list-style-type: none">This heating is normal, resulting from the voltage regulation.	

Maintenance

Cleaning and care

- Regularly inspect all mounting screws and make sure that they are tightened correctly. If any of the screws are loose, tighten them immediately.
- Use a clean, soft cloth to clean the tool. Never use alcohol or detergent. Remove batteries from tool before cleaning.

Service


- Tool service should only be performed at TRUPER. Service and maintenance by unqualified persons can be dangerous and may result in personal injury and void the product warranty.

Environmental protection

Electrical appliances and batteries must not be disposed of with household waste. Please deliver this appliance and its batteries with the contacts insulated with adhesive cloth to a recycling center. Check the location of the nearest center in your community.

	102338	REP-MAX-40D	Carrete con hilo y resorte
	102770	CU-MAX-40D	Cuchilla

Notes

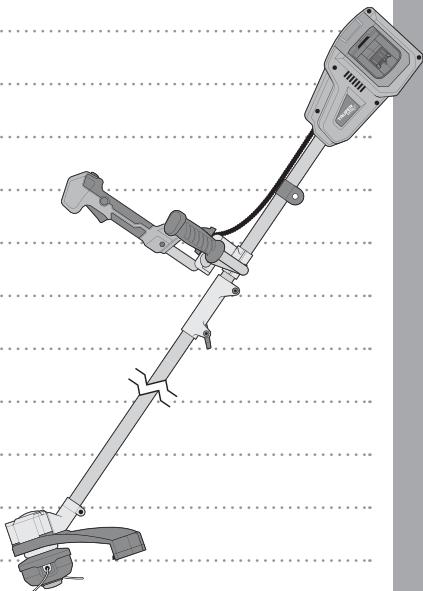

Authorized service centers

TRUPER®
max

In the event of any problem contacting a TRUPER Authorized Service Center, please see our webpage www.truper.com to get an updated list, or call our toll-free numbers **800 690-6990** or **800 018-7873** to get information about the nearest Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0537	MORELOS	FIX FERRETERÍAS CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931
BAJA CALIFORNIA	SUCURSAL TIJUANA AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100	NAYARIT	HERRAMIENTAS DE TEPIC MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540
BAJA CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ANGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115	NUEVO LEÓN	SUCURSAL MONTERREY CARRETERA LAREDO #500, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
CAMPECHE	TORNILLERÍA Y FERRETERÍA AAA AV. ÁLVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808	OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL.: 287 106 3092
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083	PUEBLA	SUCURSAL PUEBLA AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLA, PUE. TEL.: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	SUCURSAL CHIHUAHUA AV. SILVESTRE TERRAZAS #128-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL.: 614 434 0052	QUERÉTARO	ARU HERRAMIENTAS S.A. DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544
MEXICO CITY	FIX FERRETERÍAS EL MONSTRUO DE CORREGIDORA, CORREGIDORA # 35, COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX. TEL: 55 5522 5031 / 5522 4861	QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL. EJIDAL, C.P. 77110 PLAYA DEL CARMEN, Q.R. TEL.: 984 267 3140
COAHUILA	SUCURSAL TORREÓN CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL.: 871 209 68 23	SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL.: 444 822 4341
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL.: 314 332 1986 / 332 8013	SINALOA	SUCURSAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZURIJO #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO.TEL.: 618 817 1946 / 618 818 2844	SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 413 2392
ESTADO DE MÉXICO	SUCURSAL CENTRO JILOTEPEC PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL: 761 782 9101 EXT. 5728 Y 5102	TABASCO	SUCURSAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 353 7244
GUANAJUATO	CIA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 617 7578 / 79 / 80 / 88	TAMAULIPAS	VM ORINGS Y REFACCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL.: 747 478 5793	TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #152, COL . BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
HIDALGO	FERREPRECIOS S.A. DE C.V. LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616	VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA, ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
JALISCO	SUCURSAL GUADALAJARA AV. ADOLFO B. HORN # 6800, COL. SANTA CRUZ DEL VALLE, C.P.: 45655, TLAJOMULCO DE ZUÑIGA, JAL. TEL.: 33 3606 5285 AL 90	YUCATÁN	SUCURSAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858		

Code**Model****Brand**

102338

MAX-40D

TRUPER®
max

Warranty. Duration: 5 year. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by TRUPER®. To make the warranty valid, only present the product in the establishment where you bought it or in Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. The costs of transportation of the product that derive from its fulfillment of its service network are included. TRUPER will not require any proof of purchase to make the warranty effective. Phone number 800-018-7873. Made in China. Imported by TRUPER, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.



Stamp of the business. Delivery date:

Sello del establecimiento comercial. Fecha de entrega:



Garantía. Duración: 5 años. Cobertura: piezas, componentes y mano de obra contra defectos de fabricación o funcionalidad, excepto si se usó en condiciones distintas a las normales; cuando no fue operado conforme instrucción, fue llevado o preparado por persona no autorizada por TRUPER®. Para hacer efectiva la garantía trae el producto en establecimiento donde lo compró o en Corregidora 35, Centro, Querétaro, CDMX, 06060, donde también podrás adquirir partes, componentes, consumibles y accesorios. Incluye los gastos de transporte del producto que deviven de su cumplimiento de su red de servicio. TRUPER no solicita ningún tipo de comprobante de pago para hacer efectiva la garantía. Tel. 800-018-7873. Made in China Impresión tipo de comprobante de pago para hacer efectiva la garantía. Tel. 761 782 9100.

TRUPER®

Marca

102338 Modelos

Código

MAX-40D

max

Poliza de Garantía

TRUPER®

En caso de tener algún problema para contactar un Centro de Servicio Autorizado Truper®, consulte nuestra página www.truper.com donde obtendrá un listado actualizado, o llame al: 800 690 6990 u 800-018-7873 donde informarán cuál es el Centro de Servicio más cercano.

MORELOS FIX FERRERIAS
CARRILERA 1A AL 500, KM. 0.5 MONTERREY PARKS.
COLONIA UNEPTEL DE MONTERREY C.P. 66902, EDOMEX.
TEL.: 735 252 9831

NAVARA FIX FERRERIAS
MAZATLÁN 1171, COL. CENTRO, CP. 63000, TEPIC, NAY.
TEL.: 311 285 0400

QUINTANA ROO FIX FERRERIAS
CARRETERA FEDEVAL MZ. 46 LT. 3 LOCAL 2, COL. EJIDAL,
CP. 77100, TEPIC, Q.R.
TEL.: 984 267 3440

SAN LUIS POTOSÍ SAN LUIS POTOSÍ, S.L.P. TEL.: 444 282 4341
AV. UNIVERSIDAD #180, COL. EL PASO, CP. 78320.
TEL.: 667 173 1319 / 173 8400

TAMAULIPAS CALLÉ HELIO LÓTE 1, 2 Y 3 MZ #, COL. INDUSTRIAL,
2A ETAPA, CP. 86901, VILLAHERMOSA.
TEL.: 933 355 7244

TAJAMULCAS CALLÉ ROSINI #57 ENTRE DO NOVIMBRE Y GRAL.
RODRIGUEZ, CP. 88780, REYESLA.
TEL.: 999 926 7552

VERACRUZ BLVD PRIMAVERA E/S 300, PBLD MOL. MONTE, TAB.
CP. 90970, SAN MIGUEL DE ALLENDE, GUANAJUATO.
TEL.: 222 771 7502

YUCATÁN CALLE 100 #609, LOCALIDAD TINACABA Y MULAYA,
CP. 97390, MERIDA, YUC.
TEL.: 782 282 800 / 282 8484

SUCURSAL MERIDA CALLE 100 #609, LOCALIDAD TINACABA Y MULAYA,
CP. 97390, MERIDA, YUC.
TEL.: 782 282 800 / 282 8484

MICHOCÁN AV. ADOCUA B. HORN # 800, COL. SANTA CRUZ DEL
VALLE, CP. 45530, TLAZULCO CU DE ZUNIGA, MEX.
TEL.: 33 3605 2585 AL 90

ESTADO DE MÉXICO AV. PASEO DE LA REPÚBLICA #310-A, COL.
EL PASEO, CP. 43000, TLAZULCO CU DE ZUNIGA, MEX.
TEL.: 775 735 6615 / 775 755 6616

CUAUHATLÁN CLLE PRIMERA MZ 11, COL. SANTA FE, CP. 39010.
TEL.: 775 735 6615 / 775 755 6616

HIDALGO CLLE PRIMERA MZ 11, COL. SANTA FE, CP. 39010.
TEL.: 775 735 6615 / 775 755 6616

GUERRERO CLLE PRIMERA MZ 11, COL. SANTA FE, CP. 39010.
TEL.: 761 178 2910 EX. 57284 0120

CHIAPAS CLLE PRIMERA MZ 11, COL. SANTA FE, CP. 39010.
TEL.: 761 178 2910 EX. 57284 0120

COAHUILA CLLE PRIMERA MZ 11, COL. SANTA FE, CP. 39010.
TEL.: 761 178 2910 EX. 57284 0120

BOMBYAS BYMTESA DE MANIZALE CLLE PRIMERA MZ 11, COL. SANTA FE, CP. 39010.
TEL.: 761 178 2910 EX. 57284 0120

MÉJICO CLLE PRIMERA MZ 11, COL. SANTA FE, CP. 39010.
TEL.: 761 178 2910 EX. 57284 0120

ESTADO DE DURANGO CLLE PRIMERA MZ 11, COL. SANTA FE, CP. 39010.
TEL.: 761 178 2910 EX. 57284 0120


ESTADO DE COAHUILA CLLE PRIMERA MZ 11, COL. SANTA FE, CP. 39010.
TEL.: 761 178 2910 EX. 57284 0120

ESTADO DE MÉJICO CLLE PRIMERA MZ 11, COL. SANTA FE, CP. 39010.
TEL.: 761 178 2910 EX. 57284 0120

ESTADO DE GUERRERO CLLE PRIMERA MZ 11, COL. SANTA FE, CP. 39010.
TEL.: 761 178 2910 EX. 57284 0120

ESTADO DE HIDALGO CLLE PRIMERA MZ 11, COL. SANTA FE, CP. 39010.
TEL.: 761 178 2910 EX. 57284 0120

ESTADO DE MICHIGÁN CLLE PRIMERA MZ 11, COL. SANTA FE, CP. 39010.
TEL.: 761 178 2910 EX. 57284 0120




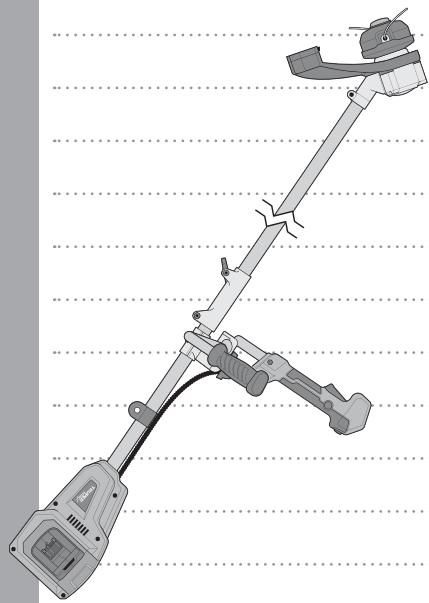


Notas

102770	CU-MAX-40D Cuchilla	RE-P-MAX-40D Carrete con hilo y resorte	
--------	------------------------	--	--

Accesorios y repuestos

TRUPER

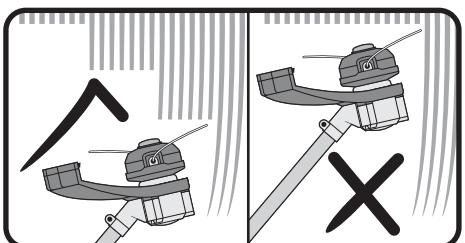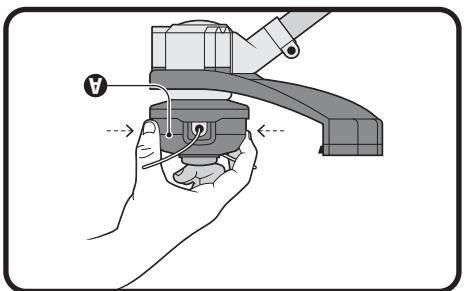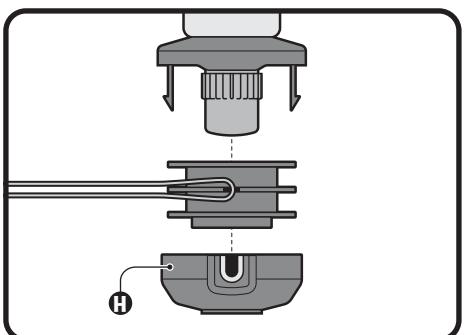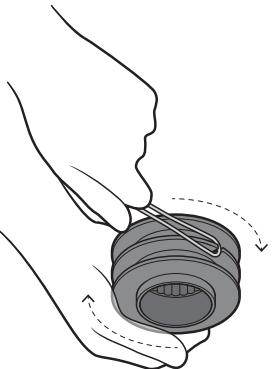

Carril de hilo de corte


- Conforme se realice el corte de peso si el hilo de corte se desgasasta y termina por desprendese. Para liberar más hilo del carrete presione un poco la desgasadora hacia abajo para que el peso del sollo presione la tira de retención contra el carrete.
- Para cortar materiales pesados como la base, pases los botones de liberación con la mano.
- Con la desgasadora apagada y las baterías retiradas, retire la tira de retención del carrete (A) apretando los tornillos de liberación con la mano.
- Quite una pieza de hilo de 3 m de longitud.
- Retire el carrete vacío, asegúrese de que este limpio y que no tenga partes dañadas o gastadas.
- Tome ambos hilos y enrredelos en el sentido horario sobre el carrete. Asegúrese de que cada pieza de hilo se enrrede en su posición respetiva (superior e inferior). No enrrede hilos entre sí.
- Deje sin enrredar aproximadamente 6" (15 cm) de ambos hilos entre ellos.
- Coloque el nuevo el carrete en su ubicación (H) haciendo que los seguros de retención hagan clic.
- Coloque la tira de retención y empújela hacia arriba hasta que los extremos de cada hilo por los orificios de la cubierta.
- Se recomienda utilizar con hilos de corte de 2.4 mm de diámetro modelo HDU-12-95, HTA-95B, HTA-95, HLB-95, HTR-95.

Corte con hilo de corte

Puesta en marcha

TRUPER[®] **max**

ESPAÑOL

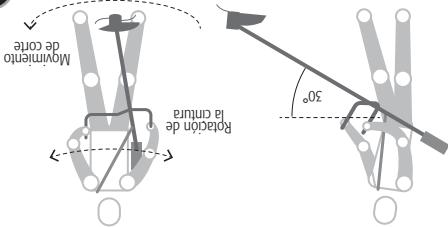

Posición de la herramienta.

izquierdada a derecha rotando su chisura mantenerlo a la izquierda a la derecha rotando y realice los cortes de en cuadrado otra posición.

APELICRO • No encienda ni opere la desbrozadora hasta abajo, lejos de sus pies.

alineada a la izquierda o la derecha para el corte de 30°. alineada a la izquierda o la derecha para el corte de 30°. ambas manos, de manera que la herramienta quede


• Sostenga la desbrozadora con firmeza frente a usted con apoyos firmemente en el piso.

• Mantenga una postura equilibrada con ambos pies

siguiendo las normas de seguridad (páginas 4 y 5) antes de operar la herramienta.

Siguiendo las normas de seguridad (páginas 4 y 5) antes como de quitarlos es responsabilidad del área de trabajo. de la desbrozadora es responsabilidad de su seguridad, así de operar la herramienta.

A ATENCIÓN • Recuerde que usted como operador

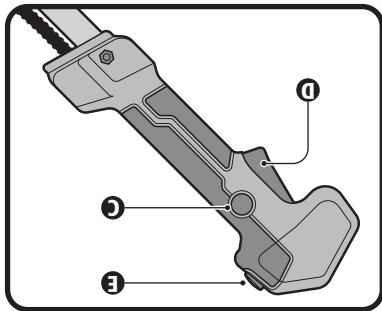


- Para apagar la desbrozadora suelte el gatillo inversor.
- En caso de que la cuchilla quede atascada en la madera, seguramente el interruptor (C) y accione el gatillo inversor (D).
- Si se apaga el interruptor (C) evite encenderlos accidentalmente.
- Siempre encienda la desbrozadora aparte de suelte el gatillo inversor (E) y apriete de nuevo el gatillo inversor.

Operación

Encendido

Puesta en marcha

NOTA: Seguir las condiciones de uso y la temperatura ambiente, la indicación puede diferir ligeramente de la especificada real.

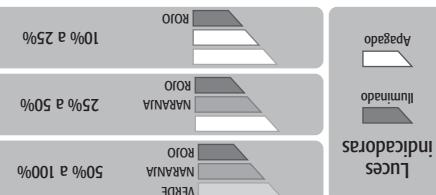

Capacidad restante de la batería

Sobredescarga. El nivel de las baterías no se refleja en este caso, retire las baterías de la herramienta y cargue las baterías.

Sobrelentamiento. Deje que la herramienta y las baterías se enfríen antes de volver a encenderla.

Sobrecarga. Cuando se juntan la herramienta y las baterías consumen niveles de corriente anormalmente altos. Suspender el trabajo de acuerdo a las recomendaciones de la herramienta.

Sobrepeso. La herramienta es ligera la herramienta y las baterías se enfrían más rápidamente que las baterías de peso medio en niveles de corriente altos.

A ATENCIÓN • La herramienta está equipada con un sistema que detiene automáticamente la herramienta para prolongar tanto su vida útil como la de las baterías, esto sucede en los siguientes casos:

Sistema de protección herramienta / batería

- Para asegurarse de que las baterías estén cargadas color de la batería en níquel de carga.
- Presione el botón indicador (B) al lado de cada batería. El clic para activar las baterías presione el seguno (A) y deslice la batería hacia afuera.
- Para retirar las baterías presione el seguno (A) y deslice la batería hacia afuera.
- Deslice la batería en el receptor hasta escuchar un clic para activar las baterías de este bien colocadas.
- Una vez cargadas las baterías, insertelas en sus respectivos receptáculos.

Baterías


Preparación

TRUPER®

La batería viene DESCARGADA de fábrica. Seña necesita cargarla que la carga por proximidad dura 1 hora 20 minutos antes de poder usarla. La temperatura nominal de recarga se 0 °C a 45 °C. Una vez que la recarga es completa la temperatura de descarga / recarga se 0 °C a 75 °C. Si lo hace que la temperatura cae rápidamente y se pierde la memoria de la batería.


Consideraciones para el uso de la batería

- Si la luz solar parpadeará es señal de que la temperatura de la batería es menor a 0 °C o mayor a 75 °C. Espera a que la temperatura de la batería se encuentre en el rango adecuado para poder cargarla.

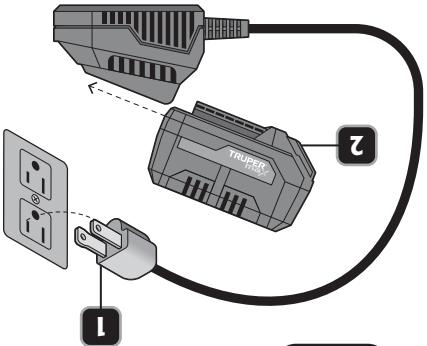


1. Conecte la clavij^a del cargador en un tomacorriente de 12V ~ (la luz verde del indicador de carga se encenderá)
 2. Inserte las baterías en el cargador deslizándolas como se muestra en la imagen. La luz verde se apagará y la luz roja destellará encendida. Indicando que el cargador ya está listo para ser usado.
 3. Descuelgue el cargador de la corriente una vez concluida la carga.
 4. Si la luz roja supera el tiempo de carga recomendado es señal de que la batería está defectuosa, reemplácela por otra.

Carga de las baterías

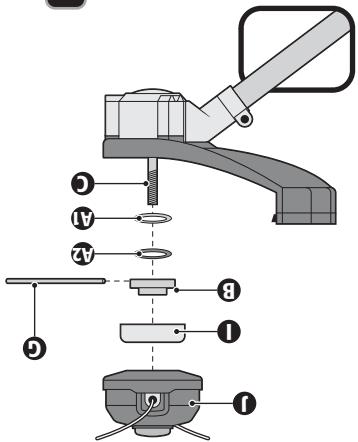


- Utilice la guarda con la extensión. Consulte el apartado mano en sentido contrario.
 - Coloque el recocido (f) en el eje y apriete con la arandela de la guarda del recocido (g).
 - Inserte la varilla del pasador (g) en el costado de la recepción (b).
 - Coloque la arandela de sujeción (f) sobre la arandela de recepción (b).
 - Coloque la arandela de sujeción (f) sobre la arandela de recepción (b) en el eje del capuz de corte (c).
 - Inserte la junta distritiva (h) y la fundición del acero (h2) en la base del eje del capuz de corte (c).

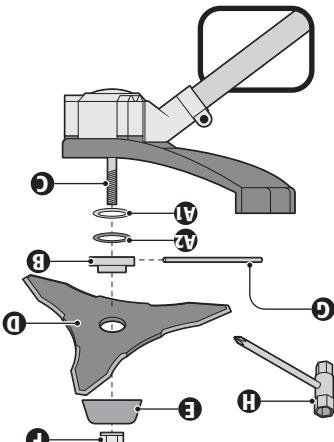


- Coloque la arandela de recepción (**B**) en el eje del cable de corte (**C**).
• Coloque la base del eje del capellón (**A**) y la tomaña de aluminio (**H**) en la base del eje del capellón de corte (**C**).
• Coloque la cubillita (**D**) sobre la arandela de recepción (**B**).
• Coloque la cubillita (**E**) sobre la arandela de recepción (**B**).
• Coloque la varilla del selector (**G**) en el costado de la arandela de recepción (**B**).
• Inserte la junta distorsionante (**I**) y la tomaña de aluminio (**H**) entre la base del eje del capellón (**A**) y la cubillita (**E**).
• Inserte la cubillita (**E**) en la extensión. Consulte el apartado de **Usticke la gaveta sin la extensión.**
 - Utilice la gaveta sin la extensión. Consulte el apartado de **Usticke la gaveta sin la extensión.**

Instalación del carrete de hilo


Instalación de la Cuchilla

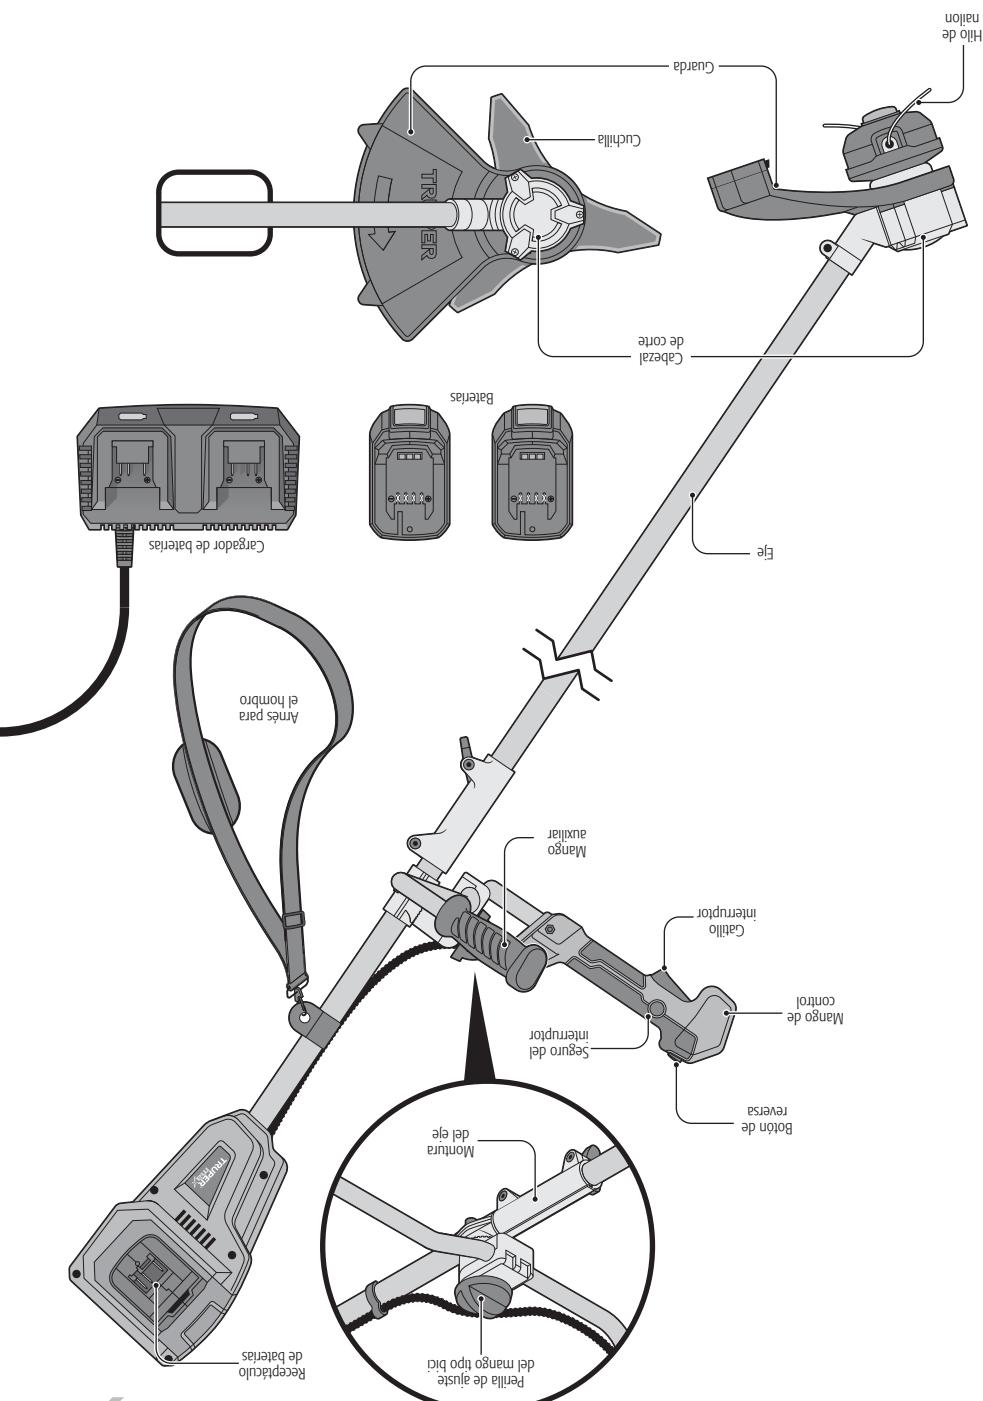

- La argolla tiene un tornillo para fijar su posición. Algo de tornillo con la llave alien, recorra la argolla por el eje la posición más cómoda Para el operador y luego apriete el tornillo.

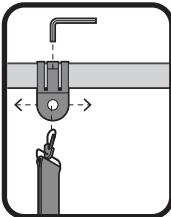


Arnes

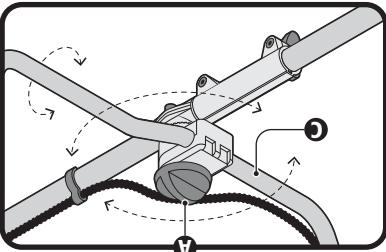

Ajuste del mango tipo bici

- Para ajustar el mango tipo bici (C), afloje la perilla (A), muerva el mango a la posición más cómoda para el operador y apriete la perilla.

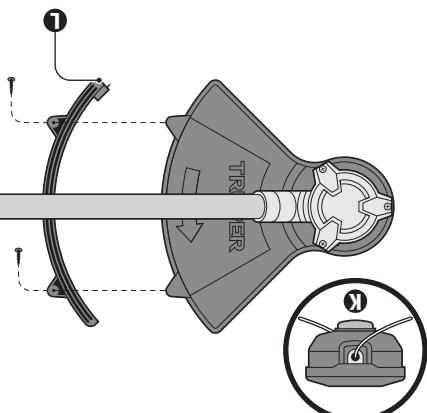


Eje recto


- Haga clic en la casilla de verificación **(4)** con la ranura del artículo de la muestra.
 - Introduzca en la red el artículo de la muestra **(5)**.
 - Introduzca en la red el tipo de muestra **(6)** hasta el tope para realizar la conexión eléctrica.
 - Apriete la perilla de mariposa **(H)** para asegurar el eje recto en su lugar.

LORILLIUS INCUBOS.

- En caso de utilizar la desfricadora con el cabezal de corté de helio (**M**), la extensión de la guarda (**L**) deberá ser instalarla.
 - FILE la extensión a la guarda por medio de los dos tornillos incluidos.

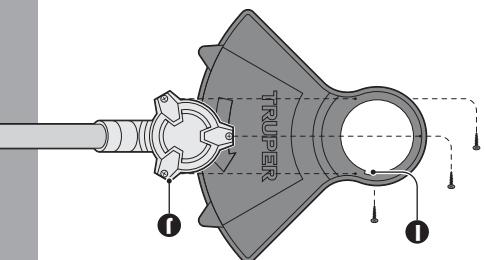


pp | ppn

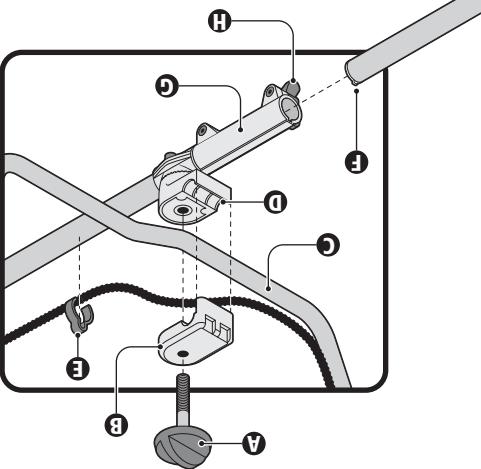

- Añade la Perilla (A) para dar la abrazadera (B).
 - Coloque manglego (C) en la montura de la abrazadera (D).
 - Cierre la abrazadera (B) y apriete la Perilla (A) para asegurar su posición.
 - Asegure el cable al eje con los clips incluidos (E).

Manggo tipo Dic

Ensemble

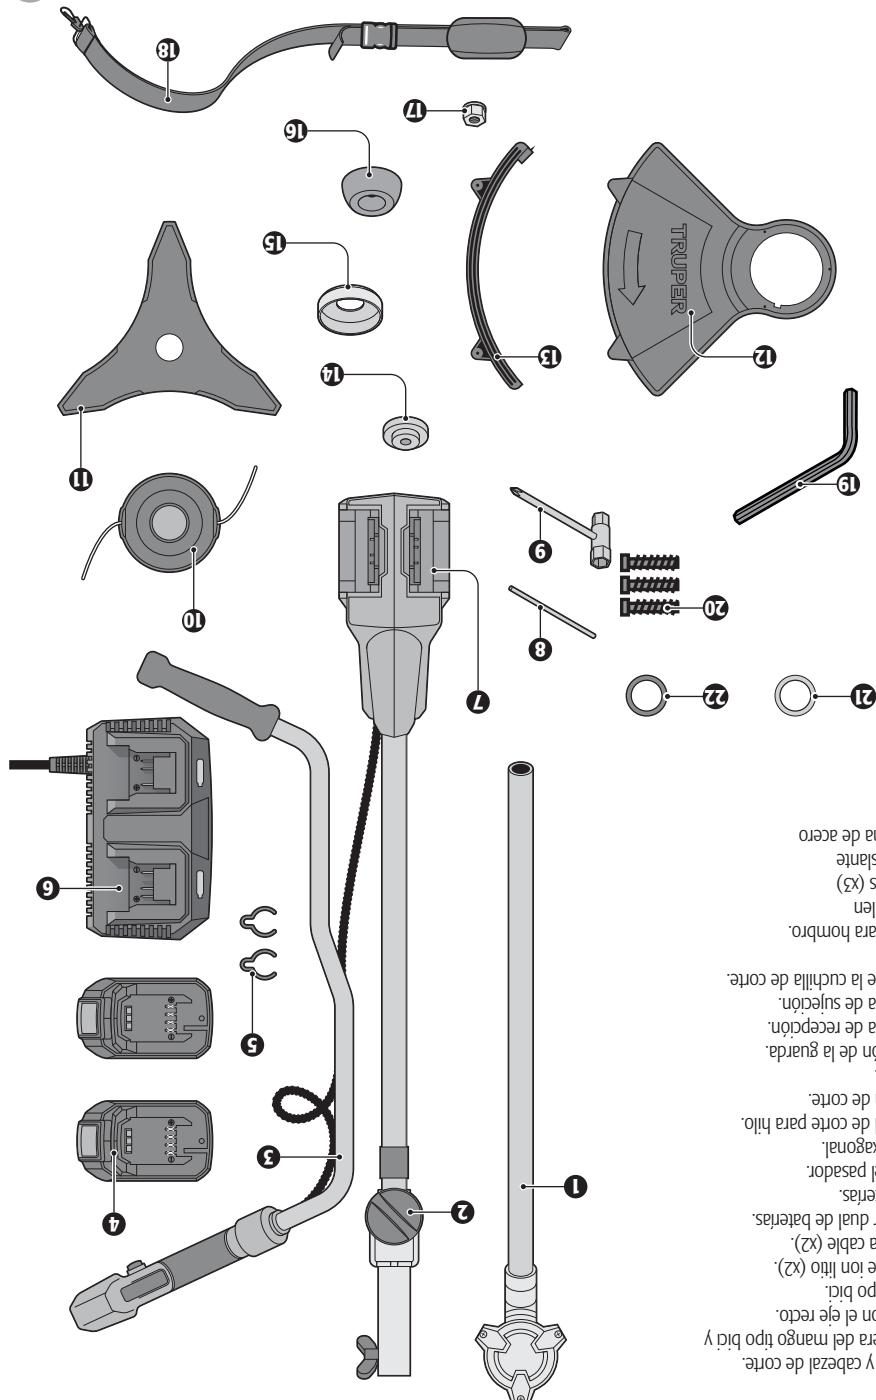

Listado de partes

Advertencias de seguridad

para uso de desbrozadoras eléctricas

TRUPER **mex**

Mantenras utiliza la desbrozadora

Alertas de seguridad



Las de instrucción de uso antes de operar la máquina.



Use protección auditiva y lentes de seguridad.



Despegar el ala donde vaya a cortarse a personas y animales.



No se debe al alcance de los niños.



En caso de derrame el cable de alimentación desconecte inmediatamente la clavija.



No se expone a la humedad.



Evitar que el cable de alimentación toque el agua.

accidente grave.

vehículos en movimiento. Pueden desencadenar un

puedan ser lanzadas por la desbrozadora hacia los

vehículos a la vista. Ya que las partes extrañas que

viven de tracción suspendidas el corto hasta que no haya

funcionamiento.

A PELIGRO • En caso de realizar trabajos cerca de

pies al lado del corto mientras la desbrozadora está

en marcha, por sus pies de grapa con

lazos fraguados que se rompen al operador u otras personas

provocando lesiones.

A ADVERTENCIA • No acerque las manos a los

pies al lado del corto vegetación fundida, el hilo de corto puede

utilizar fragmentos de corto vegetación sobre piedras o piedras.

A ATENCIÓN • No camine por suelos de grapa con

cortar trinchera a nivel del piso, por ningún motivo la

cortar trinchera a nivel del piso, por ningún motivo la

desbrozadora para cortar vegetación sobre piedras o piedras.

A ADVERTENCIA • Utilice la desbrozadora para

personas o animales.

de corto sobre raspe 30 cm de altura y lo diríja a

otras personas, niños o animales.

A ADVERTENCIA • Nunca permita que el cabecero

de corto sobre raspe a 30 cm de altura y lo diríja a

llueva y/o cortar césped con rocío.

evite realizar trabajos en ambientes húmedos, mientras

A ADVERTENCIA • Para evitar descargas eléctricas

metálica.

orgánica, y por ningún motivo remolqueado por hilo de

A ADVERTENCIA • Utilice únicamente hilo de nailon

de apagar la desbrozadora, esto demorará unos segundos.

Espere a que el corto se detenga por si mismo después

corte de ninguna otra forma que solamente el interruptor.

• No intente desenrollar el movimiento giratorio del hilo de

contaminante girando después de apagar el motor.

A ADVERTENCIA • Los elementos de corte

después de utilizar la desbrozadora

• **A ATENCIÓN** • Asegúrese de que la desbrozadora esté lista para su uso. La desbrozadora es un dispositivo que genera una fuerza de arrastre muy fuerte. Si se pierde el control, puede causar lesiones graves.

• **A ATENCIÓN** • El área que se va a recortar debe estar perfectamente iluminada. Una lámpara de trabajo debe iluminar la zona de trabajo.

• **Cuidado** • Utilice la desbrozadora manteniendo las manos del alance de los niños.

• **Tenga cuidado** • No lastimarse con la navaja para separarlos. El equipo solo debe prepararse en un centro de mantenimiento o limpieza.

• **Limpieza** • Siempre desconecte las partes de la desbrozadora antes de limpiarla.

• **Utilice solamente elementos de corto de metal distantes** • Nunca ensambe elementos de los elementos de corto.

• **Encienda el motor solo cuando las manos y los pies se encuentren en la máquina.** • Nunca encienda la máquina sin una llave de corto.

• **Utilice la desbrozadora para la fibra tómica.** • Nunca utilice la desbrozadora para la fibra tómica.

• **Evite el uso de la desbrozadora en interiores.** • Nunca permita que los niños o personas no familiares usen la desbrozadora.

• **Utilice protección para los ojos.** • Nunca permita que los niños o personas no familiares usen la desbrozadora.

• **Apriete el tornillo de la desbrozadora.**

A ATENCIÓN • Lea las instrucciones cuidadosamente. Familiarícese con los controles y el uso

antes de utilizar la desbrozadora.

• **Evite sobrecargar la desbrozadora mientras corta el césped, para evitar daños a la batalla.**

• **A ATENCIÓN** • Para maximizar la vida útil de la batería irrealizada o quemadas.

• **A ATENCIÓN** • El líquido expulsado de las baterías podría dañar la piel.

• **A ATENCIÓN** • Los baterías deben mantenerse dentro de su recipiente original.

• **A ATENCIÓN** • Nunca exponga las baterías al fuego, agua o calor excesivo.

• **Nunca modifique los contactos de la batería ni del cargador para los cables de tierra.**

• **No use baterías o cables para propósitos distintos** • Nunca recargue una batería que no sea.

• **Respete la polaridad "+/-" al cargar.** • No use el cargador a la intemperie.

• **Conecte el cargador directamente a un suministro de corriente eléctrica (CA).** • Carga la batería para la hora siguiente. Otras baterías específicamente diseñadas para la hora siguiente.

• **Max para cargar la batería en incendio.** • Use inmediatamente baterías diseñadas para proteger contra incendios de los riesgos de explosión.

• **Apriete los tornillos o clavijas metálicas como clips, monedas, llaves, clavos, etc.**

• **Evite el uso de la desbrozadora en interiores.** • Nunca utilice la desbrozadora en interiores.

• **Utilice protección para la hora inmediata.** • Use baterías específicamente diseñadas para la hora inmediata.

• **Recargue solo con el cargador especificado por TRUPER.** • Evite el uso de la desbrozadora en interiores.

• **Usa Y cuidado de la hora inmediata a la baterías.** • Recargue solo con el cargador especificado por TRUPER.

A ATENCIÓN • Lea las instrucciones

Baterías y cargador

Advertencias de seguridad para uso de desbrozadoras eléctricas



Para mantener la seguridad de la hora inmediata.

TRUPER se adhiere en un Centro de Servicio Autorizado para la hora inmediata en un Centro de Servicio Autorizado.

Sírvase de la hora inmediata en un Centro de Servicio Autorizado.

Evite el uso de la hora inmediata a la batería.

En condiciones severas, puede derribar la batería.

Si hay contacto con los ojos, lave la zona con agua.

Un cortocircuito entre los terminales puede causar quemaduras o incendio entre las terminales.

Cuando la batería no esté en uso, mantenga la alejada de la hora inmediata.

Evite el uso de la batería para la hora inmediata.

Si el uso de la batería para la hora inmediata.


Si el uso de la batería para la hora inmediata.



Alimentizada marcadá como "Uso exterior", marca **VOLTECK**. Estas extensiones son especiales para el uso en exteriores y reducen el riesgo de sufrir una descarga eléctrica.

ADVERTISING

UNA DEDICACIÓN A un usuario de ejercicio, se le pide que complete la siguiente tabla para describir su experiencia con el ejercicio.

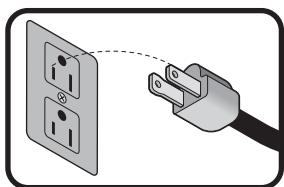

Reduquerimientos eléctricos

ADVERTENCIA	Si el cable de alimentación se daña, sólo debe ser reemplazado por el fabricante o Centro de Servicio Autorizado TRUPER, con el fin de evitar algún riesgo de descarga o accidente considerable.
ADVERTENCIA	Antes de obtener acceso a las terminales, todos los circuitos de alimentación deben ser desconectados.

- E capibe de alimenación del perro grande que se come carne de pollo y pescado.
- La clase de construcción de la heramíneña es: Clase III
- La clase de construcción del perro grande que se come carne de pollo y pescado.
- La clase de construcción del perro grande que se come carne de pollo y pescado.
- Incluir baterías


Código	102338	Capacidad de corte	13" (33 cm)
Descripción	Desbrozadora inalámbrica	Tensión	40 V=
Capacidad de corte	13" (33 cm)	Tensión	6 500 r/min (RPM)
Velocidad	5.4 kg	Peso con baterías	Pequeño
Nivel de ruido	< 100 dB	Sistemas de corte	Carrizo de hilo de nailon y cuchilla
Diametro de hilo recomendado	2.4 mm (0.095")	Baterías	Ión-litio 20 V = 4 Ah Tiempo de carga: 1 h
Cargador	Entrada: 127 V~ Salida: 21.5 V= 3 A		Corriente: 0.6 Hz

MAX-40D

Especificaciones técnicas

PER
PER

MAX-40D

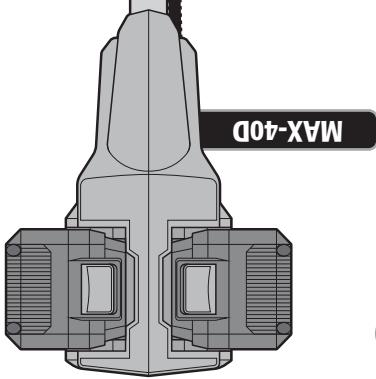

Para poder sacar el máximo provecho de la herramienta, alargar su vida útil, hacer válida la garantía en caso de ser necesario y evitar riesgos o lesiones graves, es fundamental comprender antes de usar la herramienta.

Guarde este instructivo para futuras referencias.

Los gráficos de este instructivo son para referencia, pueden variar del aspecto real de la herramienta.

A ATENCIÓN

Indice

- | | |
|----|--|
| 16 | Póliza de garantía |
| 15 | Centros de servicio autorizados |
| 14 | Notas |
| 14 | Accesorios y repuestos |
| 13 | Protección ambiental |
| 13 | Mantenimiento |
| 13 | Solución de problemas |
| 11 | Puesta en marcha |
| 10 | Preparación |
| 9 | Partes |
| 8 | Ensamble |
| 7 | Listado de partes |
| 5 | Advertencias de seguridad para uso de desplazadores inalmbricas eléctricas |
| 4 | Advertencias generales de seguridad para herramientas eléctricas |
| 3 | Requisimientos técnicos |
| 3 | Especificaciones técnicas |



Lea este instructivo por completo
antes de usar la herramienta.

ATENCIÓN




Capacidad de corte

40 V = 13"
33 cm

102338 MAX-40D
Codiggo **Modelo**

Este instructivo es para:

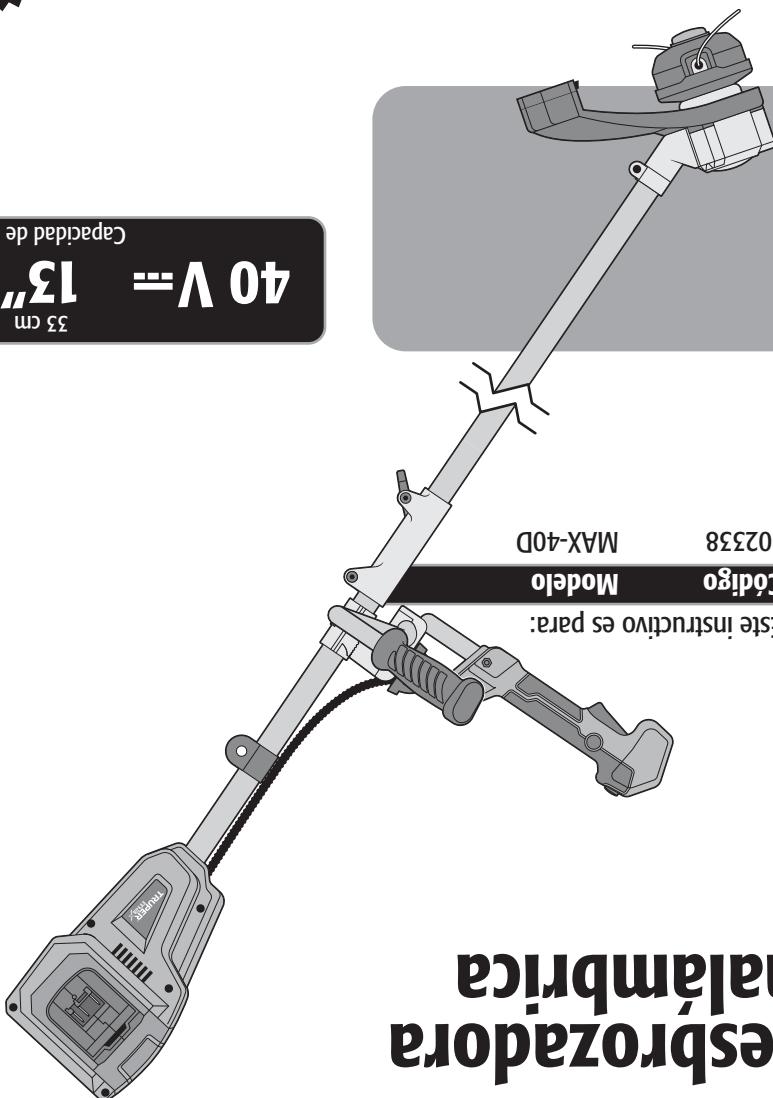

Desbrozadora inalámbrica

Instructivo de

TRUPER®

ESPAÑOL
ENGLISH