



Manual

Blower / Vacuum

800 W
Power


Applies for:

Code

102415

Model

SOPLA-800

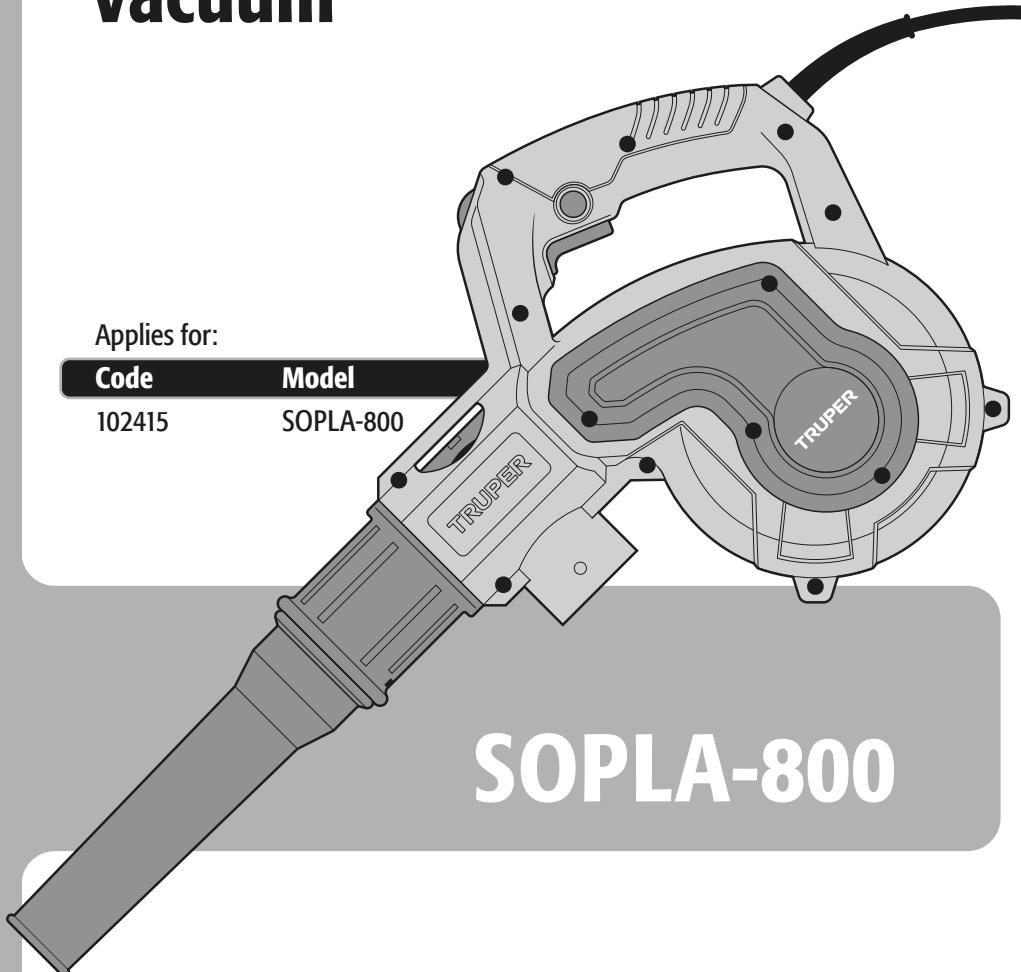

SOPLA-800



Read this manual thoroughly
before using the tool.




Technical Data	3
Power requirements	3
 General power tool safety warnings	4
 Safety warnings for blowers	5
Parts	6
Assembly	6
Start up	7
Maintenance	8
Troubleshooting	8
Authorized Service Centers	9
Warranty policy	10

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

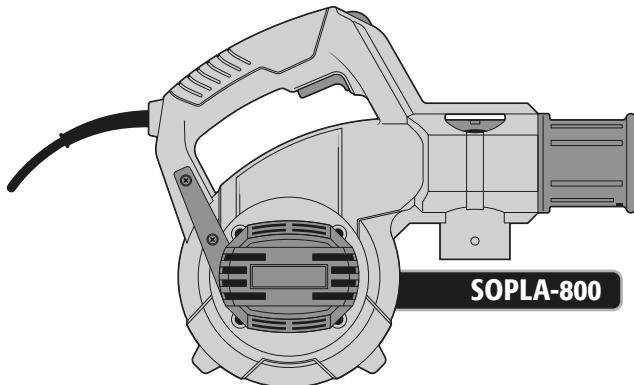

SOPLA-800

Code	•	102415
Description	•	Blower / Vacuum
Voltage	•	127 V~
Frequency	•	60 Hz
Current	•	6 A
Power	•	800 W
Speed	•	15 000 RPM
Air speed	•	67 MPH - 169 MPH
Air volume	•	106 CFM
Weight	•	4.4 lbs
Work cycle	•	30 min of work for 15 min of rest. Maximum 3 hours per day.
Insulation	•	Class II
		IP Grade • IP20

The construction class of the tool is: Double insulated.
Thermal insulation class of the motor windings: Class E


WARNING Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a TRUPER® Authorized Service Center. The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use. Do not expose to rain, liquids and/or dampness.

WARNING Before gaining access to the terminals all power sources should be disconnected.



Power requirements

WARNING Tools with double insulation and reinforced insulation are built with a polarized plug (one prong is wider than the other) This plug fits in any polarized outlet and can only be connected one way. If the plug does not fit completely into the outlet, reverse the plug. If it is not fitting, call a qualified electrician or install a polarized outlet. Do not alter the plug in any way. Double insulation eliminates the need of a three-prong grounded power plug or a grounded electric system.

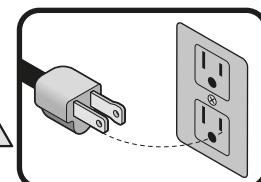

WARNING When using an extension cable, make it has sufficient gauge to carry the current your tool will draw. A lower gauge cable will cause voltage drop in the line, resulting in power loss and the motor will overheat. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

Ampere Capacity	Number of Conductors	Extension Gauge
From 0 and up to 10 A		From 6 ft to 49 ft Higher than 49 ft
From 10 and up to 13 A		18 AWG 16 AWG
From 13 and up to 15 A		16 AWG 14 AWG
From 15 and up to 20 A	3 (one grounded)	14 AWG 12 AWG
		8 AWG 6 AWG

* It is safe to use only if the extensions have a built-in artifact for over current protection.

AWG = American Wire Gauge. Reference: NMX-J-195-ANCE

WARNING When using power tools outdoors use VOLTECK grounded extension cable labeled "Outdoors Use". These extension cables are specially manufactured for outdoors use and reduce the risk of electric shock.





General power tool safety warnings



⚠️ WARNING! Read carefully all safety warnings and instructions listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. **Save all warnings and instructions for future references.**

Work area

Keep your work area clean, and well lit.

Cluttered and dark areas may cause accidents.



Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

Sparks generated by power tools may ignite the flammable material.



Keep children and bystanders at a safe distance while operating the tool.

Distractions may cause loss of control.



Electrical Safety

The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.



Modified plugs and different power outlets increase the risk of electric shock.

Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

Personal safety

Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.

A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.



Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times.

This enables a better control on the tool during unexpected situations.

Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.

Loose clothes or long hair may get caught in moving parts.



If you have dust extraction and collection devices connected onto the tool, inspect their connections and use them correctly.

Using these devices reduce dust-related risks.

Power Tools Use and Care

Do not force the tool. Use the adequate tool for your application.



The correct tool delivers a better and safer job at the rate for which it was designed.

Do not use the tool if the switch is not working properly.

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.

These measures reduce the risk of accidentally starting the tool.

Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.



Power tools are dangerous in the hands of untrained users.

Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.

Most accidents are caused due to poor maintenance to the tools.



Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

Service

Repair the tool in a TRUPER® Authorized Service Center using only identical spare parts.

This will ensure that the safety of the power tool is maintained.

Children or people with reduced physical, sensory or mental capabilities shall not operate the tool, neither inexperienced people or without knowledge in the use of the tool, unless supervised by a person responsible of their safety or if receiving previous instructions about the tool operation.



Children shall be kept under supervision to double-check they will not play with the tool. Tight supervision shall be used with children or disabled persons to prevent from using or being close to any household tool.



This tool is in compliance with
the Official Mexican Standard
(NOM - Norma Oficial Mexicana).

Safety warnings for blowers



Before operating the blower

- DANGER** • Never operate the tool when you are tired, ill, or under the influence of drugs, alcohol or medication.
- Wear appropriate clothing to operate the tool: tight fitting clothing, heavy pants, non-skid safety boots, heavy-duty protective gloves, hearing protection, and safety glasses with side shields per ANSI Z87.1, as well as a dust mask or face shield to prevent breathing in harmful debris.



- WARNING** • Remove any loose clothing or accessories that could be caught in the motor. Pull your hair back so that it is above shoulder level.
- Make sure the tool is in perfect condition. Do not start if it is improperly adjusted or not fully assembled so that it will operate safely.
- Make sure the tool is clean, dry and free of oil.
- Make sure the work area is in an open, well-ventilated area.
- In extreme temperatures check for ice formation or condensation on the tool.
- Ensure that visibility and light conditions are adequate to see clearly, otherwise do not use the tool.

When operating the blower


- WARNING** • Make sure the nozzle is not pointed at any person or animal before starting the engine. Never point the blower at people or animals.
- Hold the blower properly and with both feet firmly on the ground.
- Keep the tool away from flammable materials.
- Do not attempt to make adjustments to the tool with the motor running.
- Do not attempt to remove material clogged inside the tubes or blower with the motor running. Switch off before removing material.
- Be aware of hazards in your environment, the noise of the tool may prevent you from noticing them.

After operating the blower


- WARNING** • Shut off the motor before idling the tool. DO NOT leave the engine running unattended.
- WARNING** • Do not leave the blower with the engine running on dirty surfaces or on grass, as it could pick up debris that may later be thrown at the operator or others, causing serious injury.
- CAUTION** • Service and repair of the tool should only be performed by a **TRUPER**® Authorized Service Center.

Assembly recommendations

- WARNING** • If parts are missing, do not operate the tool until they are replaced. Failure to do so may result in serious personal injury.
- WARNING** • Do not attempt to modify the tool or fabricate accessories not recommended for the tool. Failure to do so may result in injury and may invalidate the warranty.

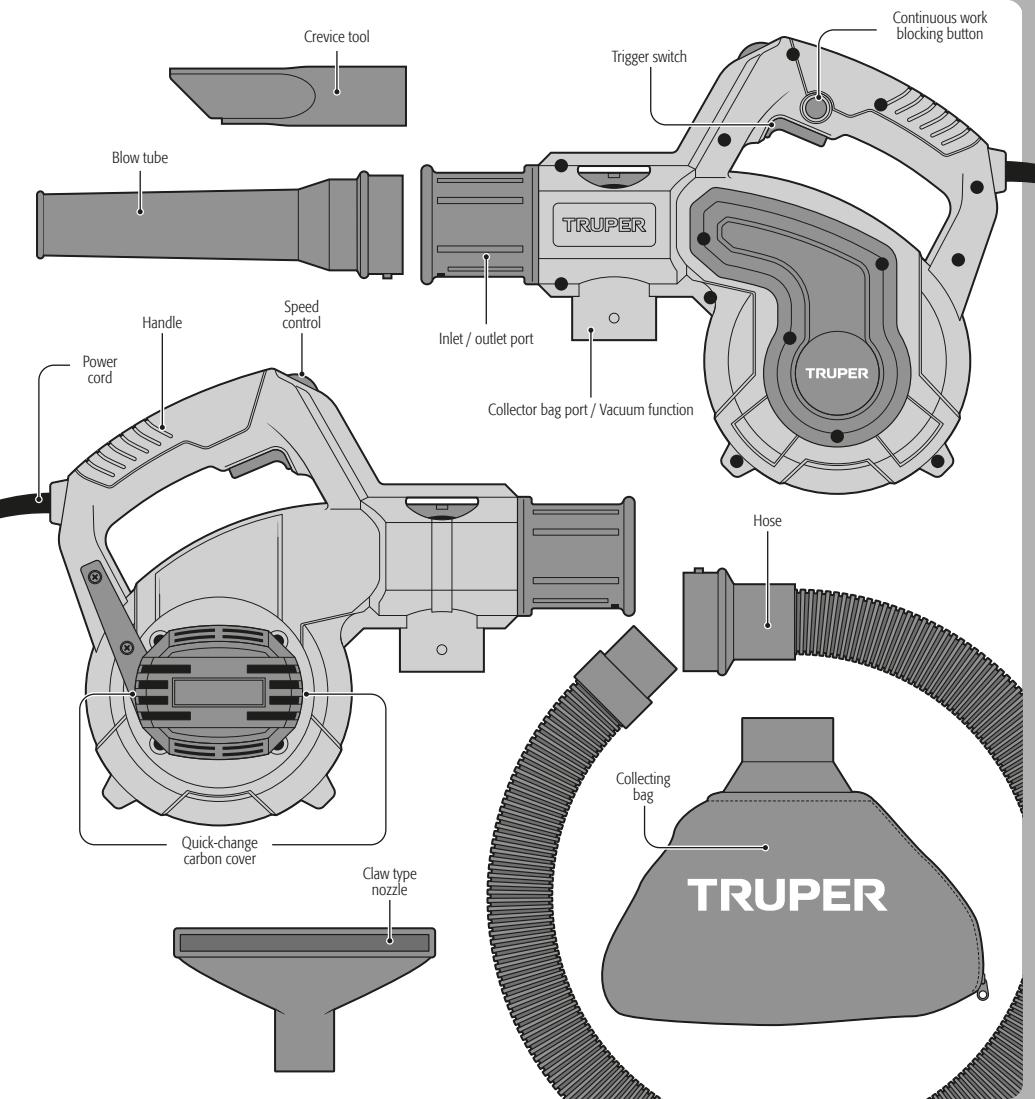

Assembly

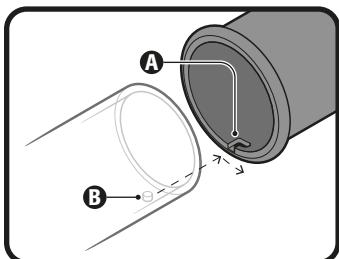


- To assemble the blower tube, hose and collecting bag, match the internal grooves of the female fittings (A) with the stops of the male fittings (B), connect and twist to secure the connection.

According to your needs, install the claw type nozzle or crevice tool by inserting them into the free end of the hose.


Configurations

- To configure the equipment as a blower (1) or as a vacuum cleaner (2), turn the output / input port (3) until one of the symbols is at the top of the port.
- When configuring the unit as a vacuum cleaner, connect the collecting bag to the air outlet.
- CAUTION** • When configuring the unit as a blower, do not attach the collecting bag.

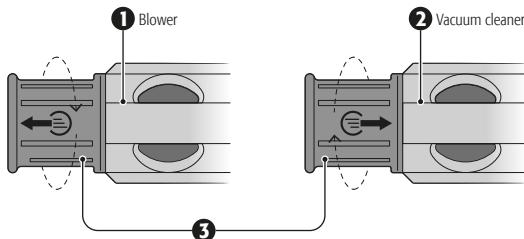


Power on

- Connect the end of an extension cord to the power cord of the blower.
- Stretch the extension cord tightly.
- Connect the extension cord to an outlet that has the voltage specified on the blower.
- To turn the equipment on: press the switch (A) to start the equipment.
To interrupt use, release the switch.
- If you wish to operate the machine continuously, press the lock button (B) while holding down the triggers (A). This allows you to release the trigger pressure while working.
- The tool can be operated at 7 different speed levels which can be selected with the speed control knob (C).

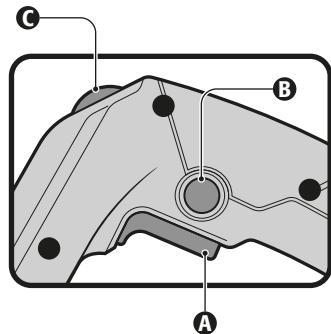

Operation

- With both feet firmly on the ground and your body well balanced, hold the equipment by the handle.
- With the blower nozzle pointing down and away from your feet, turn on the equipment.
- Make side-to-side motions by turning at the waist so that the air expelled from the nozzle pushes the debris to be swept.
- Push the debris into a pile.
- To avoid scattering the debris in the pile, blow around the outer edges of the debris pile. Do not blow toward the center of the pile.
- To reduce noise levels, limit the number of blowers used at the same time.
- Use the blower at reasonable times to avoid disturbing others with noise.
- After using the blower, dispose of the waste properly.
- If the equipment is used as a vacuum cleaner, install the collecting bag and hose between the inlet port and the vacuum nozzle.

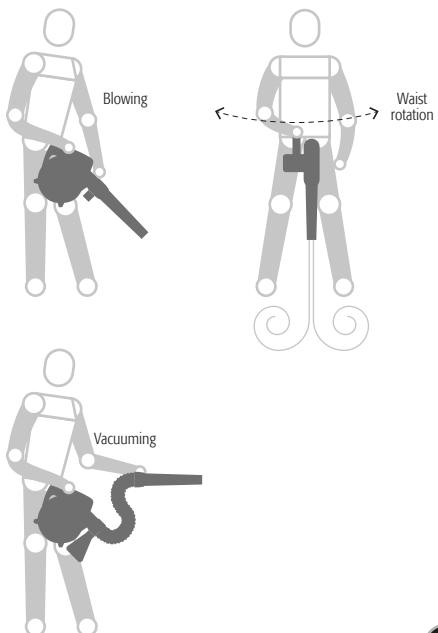

Cleaning

- Cleaning the blower after each use will keep it in top condition and prolong its life.
- For cleaning use a cloth dampened with warm water and a soft brush.
- After each use disassemble all parts of the tool and remove all particles from them. Pay special attention to the internal ventilation impeller.
- Clean the ventilation slots of the blower thoroughly to keep them free of any obstructions.

Change of carbons

- It is necessary to replace worn carbon brushes (burnt, broken or smaller than 5 mm long) with new carbon brushes.
- When replacing carbon brushes always replace both.
- Remove the worn carbon brushes from the carbon brush holder and remove with compressed air the dust accumulated.
- Insert the new carbons in reverse order. The carbons should drop into the holders easily.
- After inserting the new carbons, allow the blower to run for a few minutes without a workload to give the carbons a better fit.
- Only genuine  **TRUPER®** replacement carbons, specifically designed with the proper hardness and electrical resistance for each motor type, should be used. Out-of-specification carbons can damage the motor.

Storage

- Clean the tool before storing to prevent mildew.
- Store the blower in a dry and lukewarm place, away from sun light (preferably dark) and away from the reach of children.
- Avoid storing the blower in plastic bags, otherwise the humidity generated could damage it.
- Keep the tool away from corrosive agents like chemical substances and anti-freeze salts..

Maintenance

- Any type of repairs or maintenance shall be carried out in a  **TRUPER®** Authorized Service Center.

Environment Protection

- After the machine is worn out, the materials such as packaging, damaged parts or the tool shall not be handled like garbage. Take those materials to a recycling facility to be treated according to the environment standards.

Troubleshooting

Problem

The blower is not working.

Cause

- There is no power supply.
- The plug is not connected.
- The extension cable is damaged.
- Worn carbon brushes.
- The switch is damaged.
- The motor is defective.

The blower runs intermittently.

- The switch is damaged.
- The internal cabling is defective.
- The ventilation driver is blocked with foreign matter.

Solution

- Check the power supply.
- Connect the plug.
- Replace the extension cable.
- Go to a  **TRUPER®** Authorized Service Center.

- Go to a  **TRUPER®** Authorized Service Center.
- Turn OFF and disconnect the blower to remove the foreign matter.

Authorized Service Centers



In the event of any problem contacting a **TRUPER®** Authorized Service Center, please see our webpage www.truper.com to get an updated list, or call our toll-free numbers **800 690-6990** or **800 0187-873** to get information about the nearest Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0537	MORELOS	FIX FERRETERÍAS CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931
BAJA CALIFORNIA	SUCURSAL TIJUANA AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100	NAYARIT	HERRAMIENTAS DE TEPIC MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540
BAJA CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ANGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115	NUEVO LEÓN	SUCURSAL MONTERREY CARRETERA LAREDO #500, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
CAMPECHE	TORNILLERÍA Y FERRETERÍA AAA AV. ÁLVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808	OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL.: 287 106 3092
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083	PUEBLA	SUCURSAL PUEBLA AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLA/CINGO, PUE. TEL.: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	SUCURSAL CHIHUAHUA AV. SILVESTRE TERRAZAS #128-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 614 434 0052	QUERÉTARO	ARU HERRAMIENTAS S.A. DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544
CIUDAD DE MÉXICO	FIX FERRETERÍAS EL MONSTRUO DE CORREGIDORA, CORREGIDORA # 22, COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX. TEL: 55 5522 5031 / 5522 4861	QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL. EJIDAL, C.P. 77110 PLAYA DEL CARMEN, Q.R. TEL.: 984 267 5140
COAHUILA	SUCURSAL TORREÓN CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL.: 871 209 68 23	SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL.: 444 822 4341
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL.: 314 332 1986 / 332 8013	SINALOA	SUCURSAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZURIÓ #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO.TEL.: 618 817 1946 / 618 818 2844	SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 415 2392
ESTADO DE MÉXICO	SUCURSAL CENTRO JILOTEPEC PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL: 761 782 9101 EXT. 5728 Y 5102	TABASCO	SUCURSAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 353 7244
GUANAJUATO	CIA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 617 7578 / 79 / 80 / 88	TAMAULIPAS	VM ORINGS Y REFACCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL.: 747 478 5793	TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #152, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
HIDALGO	FERREPRECIOS S.A. DE C.V. LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 45600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616	VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA, ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
JALISCO	SUCURSAL GUADALAJARA AV. ADOLFO B. HORN # 6800, COL. SANTA CRUZ DEL VALLE, C.P.: 45655, TLAJOMULCO DE ZUÑIGA, JAL. TEL.: 33 3606 5285 AL 90	YUCATÁN	SUCURSAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858		

Warranty policy

Code	Model	Brand
102415	SOPLA-800	 TRUPER®

Warranty. Duration: 1 year. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by **Truper®**. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 22, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. . Phone number **800-018-7873**. Made in China. Imported by Truper, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.



Stamp of the business. Delivery date:

Póliza de Garantía

AÑO



Sello del establecimiento comercial. Fecho de entrega:

Garanzia. Duración: 1 año. Cobertura: plazas, componentes y mano de obra contra defectos de fabricación o fundicionamiento, excepto si se uso en condiciones distintas a las normales; cuando no fue operado conforme instrucciones, fue alterado o preparado por persona no autorizada por Truper®. Para hacer efectiva la garantía presentar el producto, poliza sellada o factura o recibo o comprobante, en el establecimiento donde lo compró o en Corregidora 22, Centro, Querétaro, CDMX, 06060, donde también podrá adquirir partes, componentes, consumibles y accesorios, incluye los gastos de transporte del producto que devien de su cumplimiento de su red de servicio. Tel. 800-018-7873. Made in Hecho en China. Importador: Truper, S.A. de C.V. Parque industrial 1, Parque Industrial Jiutepec, Jiutepec, Edo. de Méx. C.P. 54257, Tel. 761 782 9100.

Código	Modelo	Marca	SOPLA-800	TRUPER®	102415
--------	--------	-------	-----------	---------	--------

En caso de tener algún problema para contactar un Centro de Servicio Autorizado **TRUPER®**, consulte la siguiente página www.truper.com donde obtendrá un listado actualizado, o llame al:

NAART HERMANNETS DE TEPIC
TEL: 331 282 0500

NEUVO LENO CARRETERA LAREDO #500, 1B MONTERREY PARKS.

NAACIA FIX FERRERIAS
TEL: 287 106 5092

PUEBLA SUCURSAL PUEBLA
TEL: 222 282 282 / 88 / 89 / 96

QUERETARO ARU HERMANNETS SA DE C.V.
TEL: 984 274 4544

QUINTANA ROO FIX FERRERIAS
TEL: 984 271 3140

SAN LUIS POTOSI SAN LUIS POTOSI
TEL: 667 293 159 / 73 8400

SINALOA SUCURSAL CULIACAN
TEL: 644 353 7244

SONORA SONRA FIX FERRERIAS
TEL: 667 293 159 / 73 8400
AV. JESUS KUMATE SUR #301 COL. HACIENDA DE LA
MOYA C.P. 80143, CULIACAN, SIN.
SAN LUIS POTOSI, SLP. TEL: 444 822 4341

DURANGO SUCURSAL VILLAHOMOSA
TEL: 993 262 5522

TAMAULIPAS TAMAULIPAS OMAR REYNOSA
TEL: 889 262 5522
CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL.
RODRIGUEZ, P.R.M.C. REYNOSA, C.P. 88780, REYNOSA,
TAM. TEL: 889 262 5522

TLAXCALA TLAXCALA SERVICIOS HERMANNETS DISTRIBUIDORES
TEL: 222 271 5202
C.P. 90970, SAN PABLO DEL MONTE, TLAX.

VERACRUZ VERACRUZ CASA DISTRIBUIDORA TRUPER
TEL: 782 8300 / 826 8484

MICHOACAN SUCURSAL MEXICO
TEL: 999 912 2451
CALLE 33 #600 100, LOCAL 100, LOCAL 100, MEXICO, C.P.
57390, TECALITLAN, MEXICO

GUANAJUATO CLARA FERRERIAS NUEVO MUNDO SA DE CV.
TEL: 477 478 0000, COL. INDUSTRIAL C.P. 38010,

HIDALGO FERRERIAS SA DE CV.
TEL: 747 478 0000, COL. INDUSTRIAL C.P. 38010,

CHIAPAS FERRERIAS ECLIPSE
TEL: 661 671 7593 / 79 / 80 / 88

COAHUILA CALLERIA GDL SA DE CV.
TEL: 872 910 100, COL. LUIS ENFRESCO, C.P. 54257

GUERRERO CALLERIA GDL SA DE CV.
TEL: 747 478 0000, COL. INDUSTRIAL C.P. 38010,

COLIMA BOMBAS Y MOTORES BYMETSA DE MANZANILLO
TEL: 322 1986 / 322 8013

MAZATLÁN BOMBAZUL CENTRAL INDUSTRIAL
TEL: 662 1946 / 618 182 844

ESTADO DE MEXICO BOMBAZUL CENTRAL INDUSTRIAL
TEL: 222 1946 / 6060, COL. LUIS ENFRESCO, DURANGCI.

CHIAPAS TORNILLOS AGUILA SA DE CV.
TEL: 747 478 0000, COL. INDUSTRIAL C.P. 38010

GUERRERO FERRERIAS S.A DE C.V.
TEL: 775 753 6615 / 775 753 6616

MICHOACAN AV. PASEO DELA REPUBLICA #340 A, COL.
TEL: 443 334 6858

AGUASCALIENTES DE TECO PARA LA CONSTRUCCION
TEL: 449 994 0537

CALIFORNIA SUR AGUASCALIENTES
TEL: 664 696 5100

BAJA CALIFORNIA FLORIDA II, P.R.D. INDUSTRIAL
TEL: 664 696 5100

AGUASCALIENTES DE TECO PARA LA CONSTRUCCION
TEL: 449 994 0537

AGUASCALIENTES DE TECO PARA LA CONSTRUCCION
TEL: 664 696 5100

AGUASCALIENTES DE TECO PARA LA CONSTRUCCION
TEL: 664 696 5100

AGUASCALIENTES DE TECO PARA LA CONSTRUCCION
TEL: 664 696 5100

AGUASCALIENTES DE TECO PARA LA CONSTRUCCION
TEL: 664 696 5100

AGUASCALIENTES DE TECO PARA LA CONSTRUCCION
TEL: 664 696 5100

Mantenimiento

TRUPER®

Limpieza

Cambio de carbonos

- La sopladora no hace suministro eléctrico.
 - Revise el suministro eléctrico.
 - Conecte la clavija.
 - Reemplace el cable de extensión.
 - Acuda a un centro de servicio autorizado.
 - El interruptor está dañado.
 - Motor está defectuoso.
 - El interruptor está dañado.
 - Cambiones gastados.
 - El cable de extensión está dañado.
 - La clavija no está conectada.
 - La sopladora funciona.
 - La sopladora fundona.
 - La sopladora fundona.
 - El cableado interno está dañado.
 - El cableado interno es de calidad extraña.
 - Apague y desconecte la sopladora para retirarla del objeto extraño.
 - E impulseur de ventilation está bloqueado con un objeto extraño.
 - E impulsor de ventilación está defectuoso.
 - La sopladora fundona

Solución

Causa

La sopladora no
funciona.

Solución de problemas

- E mediante el desarrollo de la retroalimentación como se muestra en la figura 10.10.
- Si se impide que las señales de retroalimentación entran en el sistema, se pierde la retroalimentación.

Protección ambiental

- Cumpliendo estrictamente con los mandamientos de servicio establecidos en el Código de Conducta del Centro de Servicio.
 - Autorizado únicamente en un Centro de Servicio.

Mantenimiento




Almacenaje

- Solo se despliega para que los carbonos leargan en menor superficie.
 - Despliega el colador durante algunos minutos sin cargar de carbones nuevos, permitiendo la deshidratación.
 - Coloque los carbonos nuevos invertidos en orden. Los carbones deben estar en los portacarbones fácilmnte.
 - Coloque los carbonos nuevos invertidos en orden. Los carbones deben estar en los portacarbones fácilmnte.
 - Retire el polvo acumulado con aire comprimido.
 - Retire los carbonos desgastados del portacarbones y cambíelos por otros.
 - Cambíe el carbón de camboí de carbones siemre dependiendo de su duración.
 - Si es necesario reemplazar los carbones desgastados (quemados), tolos o de menos de 5 mm de largo), con carbones nuevos.

- Limpie la hermafometa sinutes de gurardula para evitar enmohocheamiento.
 - Almancen la sopladora en un lugar seco y templado, lejos de la luz del sol (de preferencia un lugar oscuro) y lejos de la humedad.
 - Utilice del la sopladora el dia que no sea necesario.
 - Evite almacenar la sopladora en bolsas de plástico, dentro de la cual se acumula condensación.
 - Mantenga la herramienta alejada de agentes corrosivos como agua salada o alcohol.

Cambio de carbonos

- En caso de utilizar el equipo como aspiradora, instale la bolsa recicadora y la manijera entre el Puerto de aspirada y la boquilla de aspirado.

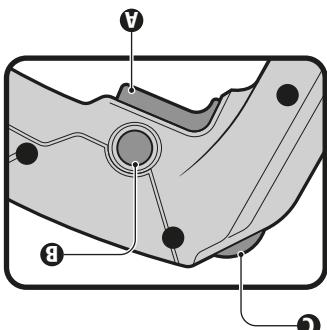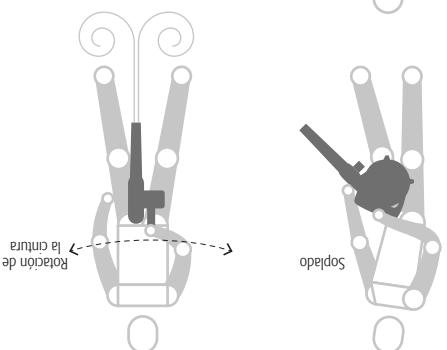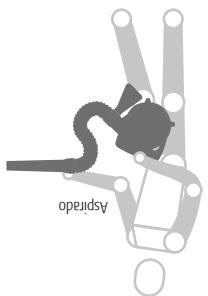

- La harinera puede operarse a 7 niveles distintos de velocidad los cuales pueden ser seleccionados con la perilla de control de velocidad (C).

• La harinera puede operarse a 7 niveles distintos de velocidad los cuales pueden ser seleccionados con la perilla de control de velocidad (C).

• Realice movimientos de lado a lado girando la Clinton para que el aire expulsado por la boquilla empape los residuos a borde.

• Realice movimientos de lado a lado girando la Clinton para que el aire expulsado por la boquilla empape los residuos a borde.

• Con la boquilla sopradoraspruntando hacia abajo y bien equilibrado sostenga el equipo por el mango.

• Con ambos pies firmemente en el piso y su cuerpo bien equilibrado sostenga el equipo por el mango.

Operación

- Si deseja operar la máquina de forma continua, presione el botón de bloqueo (B) mientras mantiene presionado el gatillo (A). Esto le permitirá liberar la presión del gatillo.

• Para encender el equipo: presione el interruptor (A) para hacer que el equipo empiece a funcionar.

• Para apagar el equipo: presione el interruptor (A) para interrumpir su uso. Suelte el interruptor.


• Presione la tensión específica para la sopradora.

• Conecte la extensión eléctrica al cable de extensión.

• Estire preferadamente el cable de extensión.

• Conecte el extremo de una extensión al cable de alimentación de la sopradora.

Encendido

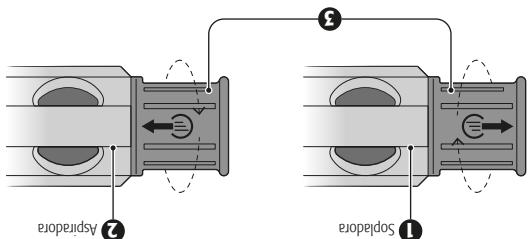


- Al configurar el equipo como sopradora conecte la boquilla recicadora en la salida de aire.
- Al configurar el equipo como aspiradora conecte la boquilla recicadora en la parte superior del Puerto.


• Para configurar el equipo como sopradora (1) o como aspiradora (2), gire el Puerto de salida / entrada (3) hasta que

Configuraciones

- Para ensamblar el tubo soplander, la mangueira y bolsa recicletora, haga coincidir las ranuras mientras las conexiones hembra (A) con los topes de las conexiones macho (B), conecte y gire para asegurar la conexión.
- De acuerdo a sus necesidades instale la boquilla tipo grapa o para ranuras.
- Insertando las ranuras en el extremo libre de la mangueira.

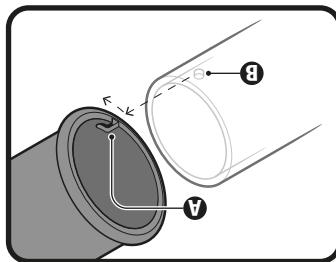

Montaje

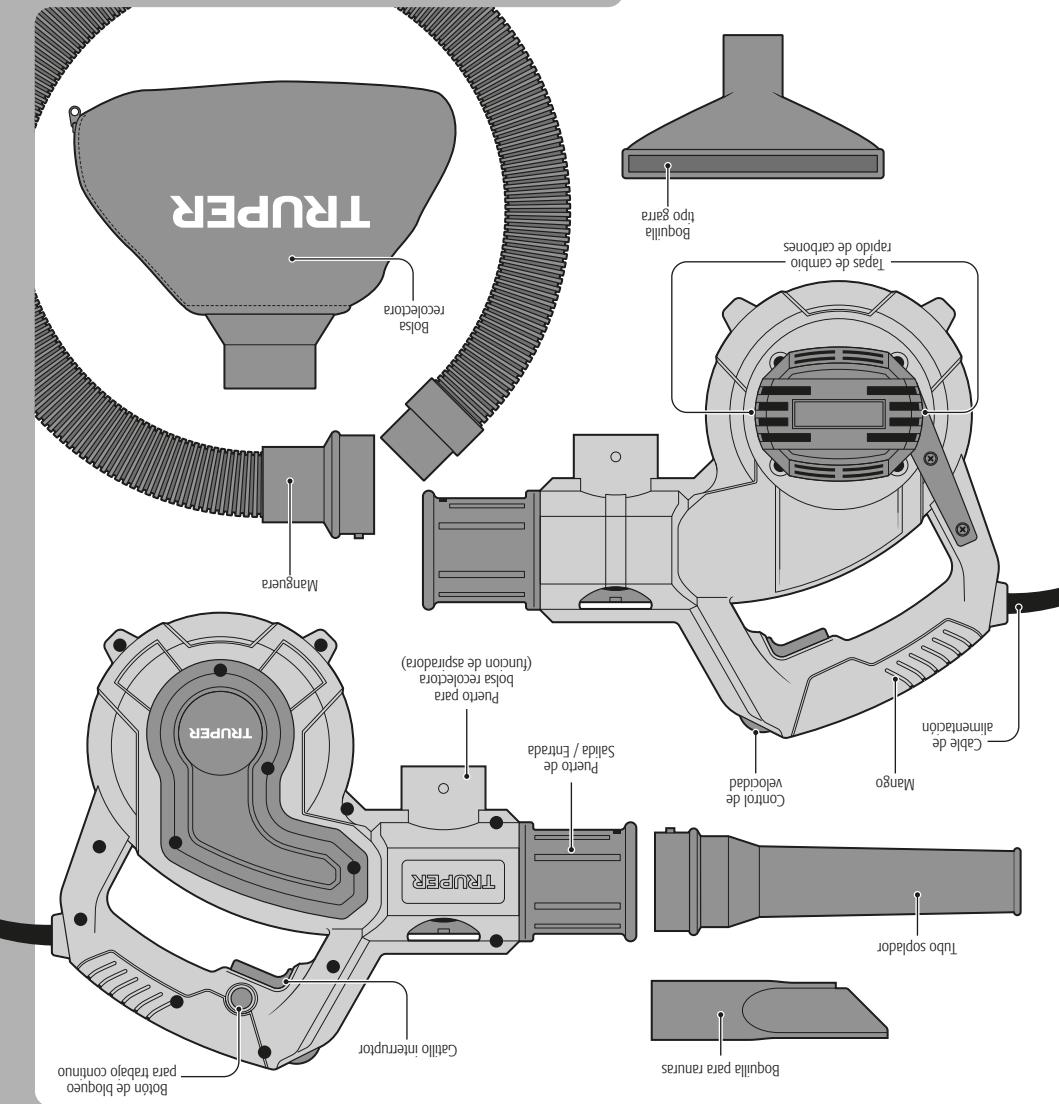

Partes

TRUPER®

A ADVERTENCIA • En caso que la heladera海aga ruidos o vibraciones, no la utilice. De lo contrario se podrían dañar las piezas y el motor. Si continúa el problema, llame al servicio técnico.

A ADVERTENCIA • No intente modificar la temperatura de los compartimentos. De lo contrario puede causar lesiones personales serias.

A ADVERTENCIA • No intente modificar la temperatura de los compartimentos. De lo contrario puede causar lesiones personales serias.

A ADVERTENCIA • No intente modificar la temperatura de los compartimentos. De lo contrario puede causar lesiones personales serias.

Recomendaciones de ensamblado

Después de operar la sopladora

- **ADVERTENCIA** • Asegúrese de que la bocanilla no esté expuesta a algún persona o animal antes de arrancar el motor. Nunca apunte la soplaadura a personas o animales.
- Sostenga la soplaadura debidamente y con ambos pies separados firmemente en el piso.
- Mantenga alejada la herramienta de materiales inflamables en marcha.
- No intente hacer ejercicios a la herramienta con el motor encendido.
- Nunca use la soplaadura para limpiar el interior de los tubos o la sopladora con el motor encendido.
- Desconecte las partes de exterior del material.
- Esté alerta a riesgos en su entorno, el ruido de la herramienta podría volarle los oídos.

Al operar la sopradora

Advertencias de Seguridad para Sopladores

Antes de operar la sopladora

Algunas drogas alcohólicas a menudo causan efectos de este carácter, enfermos, o se encuentre bajo los efectos de alcohol o medicamentos.

residues dahlins.

rope susitada, rope de cedro para la herramienta;
elásticas con roperas de madera y metal para el taller.

የመጀመሪያ ስርዓት አስፈላጊ

esté cansado, enfermo, o se encuentre bien los efectos de

PELIGRO • Nunca utilice la herramienta cuando

respostas na unidade ou comunitária

[Antes de operar a sopadora](#)

For more information about the study, please contact Dr. Michael J. Hwang at (319) 356-4000 or email at mhwang@uiowa.edu.

www.scholarone.com

[para los padres](#)

לעומת נסיך אֶל-מִנְדָּר

નોંધ કરી શકતું હોય

Advertencias de Seguridad para Sopladores

Advertencias de Seguridad para Sopladores


especiales para el uso en exteriores y reducen el riesgo de sufrir una descarga eléctrica.



* Se permite utilizarlo siempre y cuando las extensiones de los mismos cumplan con el establecido en la norma NMX-J-19-5-ANCE

quadas use el siguiente código más abajo.

ADVANTAJES Al usar un cable de extensión, se asegura que el receptor de señal se coloca en la misma distancia que se suministra su alimentación. Un cable de extensión, por lo tanto, no tiene que ser tan largo como el cable de alimentación del motor. La siguiente tabla muestra la tasa de corriente que dependiendo de la longitud del cable y la capacidad de amperes indicada en la placa de datos de la herramienta. Si tiene

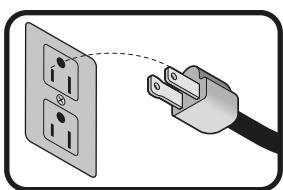

A) ADVERTENCIA Las herramientas de doble islamismo y antisemitismo reforzado están equipadas con una delgada polarizada que pasa por el más grueso de la fibra óptica. Esta delgada lámina es capaz de atravesar la fibra óptica y eliminar la información en forma de código de matrícula de los dispositivos de comunicación.

ADVERTENCIA Las herramientas con una parte polietileno (una parte es más dura que la otra). Esta espuma evita las caídas de objetos y suelos roturados.

Redes de suministro eléctricos

A D V E R T E N C I A Antes de obtener acceso a los terminales, todos los circuitos de alimentación deben ser desconectados.



Autotrizado TRUPER, con el fin de evitar algún riesgo de descarga o accidente considerable.


La clase de aislamiento térmico de los devanados del motor: Clase E

- | | | | | | | | | | | | | | | | | | | | | | | | |
|--------|--------|-------------|------------------------|---------|--------|------------|-------|-----------|-----|----------|-------|-----------|-------------|--------------------|--|------------------|---------------------------------|------|----------------|------------------|---|-------------|------|
| Código | 102415 | Descripción | Sopladora / Aspiradora | Tensión | 127 V~ | Frecuencia | 60 Hz | Corriente | 6 A | Potencia | 800 W | Velocidad | 15000 r/min | Velocidad del aire | 108 km/h - 273 km/h (67 MPH - 169 MPH) | Volumen del aire | 3 m ³ /min (106 CFM) | PEso | 2 kg (4.4 lbs) | Ciclo de trabajo | 30 min de trabajo por 15 min de descanso. Máximo 3 horas diarias. | Aislamiento | IP20 |
|--------|--------|-------------|------------------------|---------|--------|------------|-------|-----------|-----|----------|-------|-----------|-------------|--------------------|--|------------------|---------------------------------|------|----------------|------------------|---|-------------|------|

SOPLA-800

Especificaciones técnicas

TRUPER®

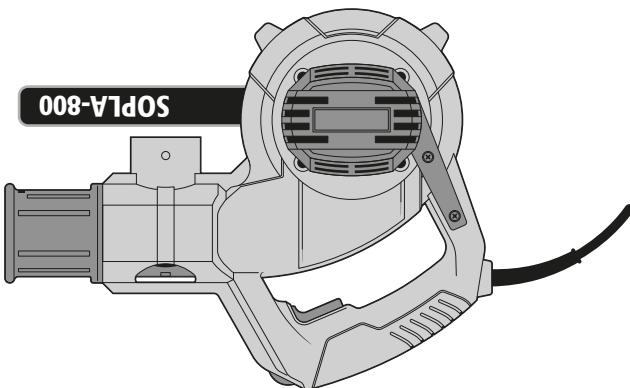**S0PLA-800**

- 10** Poliza de Garantía
- 9** Centros de Servicio Autorizados
- 8** Solución de problemas
- 7** Mantenimiento
- 6** Puesta en marcha
- 5** Montaje
- 4** Advertencias de Seguridad para herramientas eléctricas
- 3** Requerimientos eléctricos
- 3** Especificaciones técnicas
- Para poder sacar el máximo provecho de la herramienta, alargar su vida útil, hacer válida la garantía en caso de ser necesario y evitar riesgos o lesiones graves, es fundamental leer este instructivo por completo antes de usar la herramienta.
- Guarde este instructivo para futuras referencias.
- Los gráficos de este instructivo son para referencia, pueden variar del aspecto real de la herramienta.

ATTENCIÓN
Indice
TRUPER®




Lea este instructivo por completo
antes de usar la herramienta.

ATENCIÓN



SOPLA-800

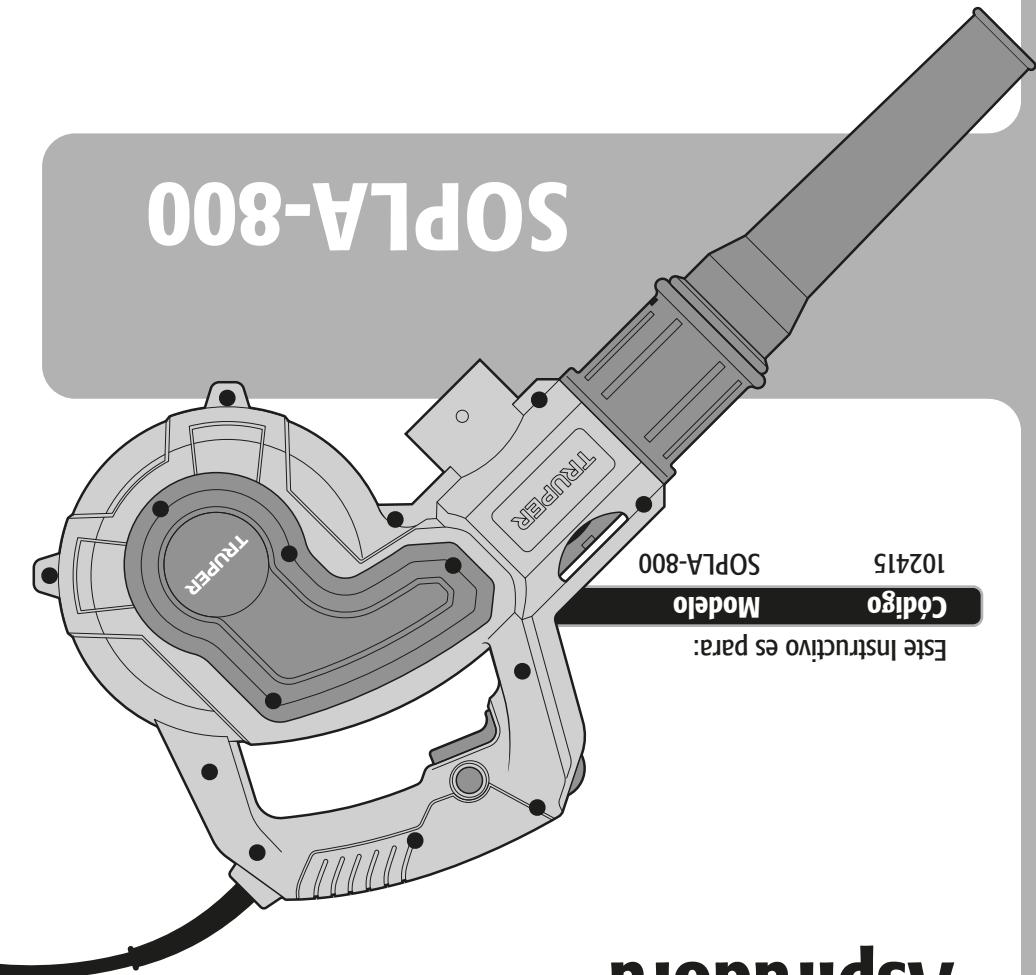

Este instructivo es para:

Código **Modelo**
102415 SOPLA-800

800 W
Potencia

Aspiradora / Sopladora

Instructivo de

TRUPER®

ESPAÑOL
ENGLISH