

Manual

Random orbit sander

0.34 Hp 5"

Power

Sanding disc


Applies for:

Code

102466

Model

LIRO-5A-2

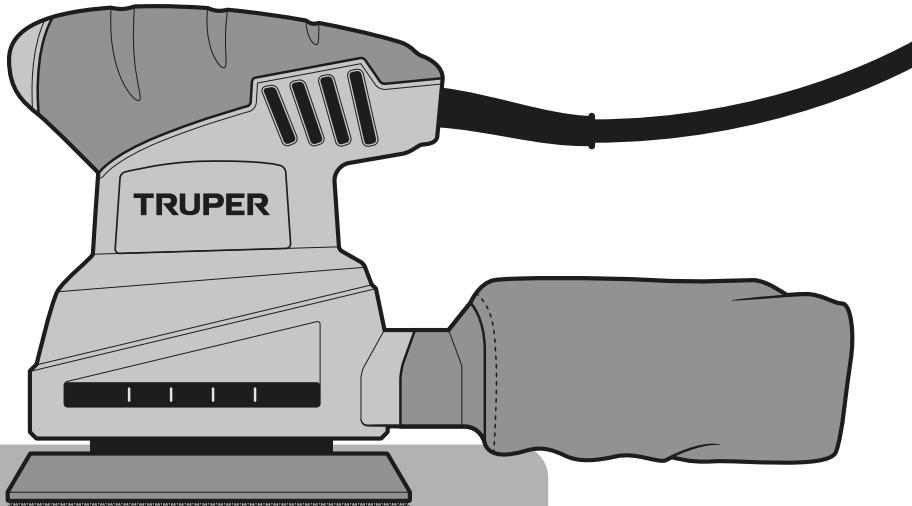

LIRO-5A-2

! CAUTION



Read the user's manual thoroughly
before operating this tool.




Technical data	3
Power requirements	3
 General power tool safety warnings	4
 Safety warnings for orbit sanders	5
Parts	5
Start up	6
Maintenance	8
Authorized Service Centers	9
Warranty policy	10

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

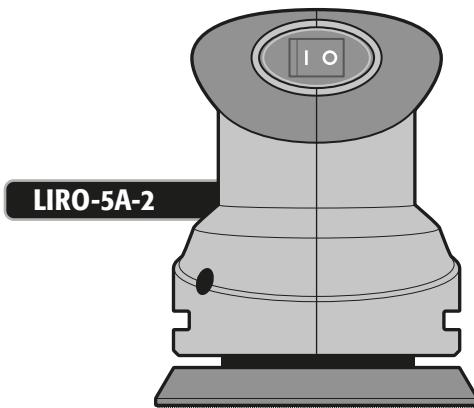

LIRO-5A-2

LIRO-5A-2

Code	•	102466			
Description	•	Random orbit sander			
Base	•	5"			
Voltage	•	220 V~			
Frequency	•	50 Hz / 60 Hz			
Current	•	1.2 A			
Power	•	0.34 Hp			
Speed	•	13 000 OPM			
Dust collection	•	Yes			
Duty cycle	•	30 minutes work per 15 minutes idle. Maximum 3 hours per day.			
Conductors	•	H05VV-F x 2C with insulating temperature of 221 °F			
Insulation	•	Class II	IP Grade	•	IP20
Orbit Diameter	•	0.1"	Eccentricity	•	0.05"

Power cord grips used in this product: Type "Y".

Build quality: Reinforced insulation.

Thermal insulation on motor winding: Class B.

WARNING Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a TRUPER® Authorized Service Center. The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use. Do not expose to rain, liquids and/or dampness.


WARNING Before gaining access to the terminals all power sources should be disconnected.



Power requirements

WARNING Tools with double insulation and reinforced insulation eliminate the need of a grounded power cord with three prongs or a grounded power connection.

WARNING When using an extension cable, verify the gauge is enough for the power that your product needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and overheating. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

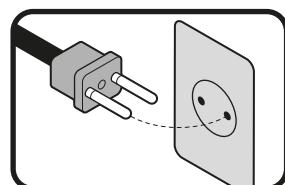

Ampere Capacity	Number of Conductors	Extension gauge from 5.9' to 49.2'	Extension gauge higher than 49.2'
from 0 A and up to 11 A		18 AWG(*)	16 AWG
from 11 A and up to 15 A		16 AWG	14 AWG
from 15 A and up to 17 A	3	14 AWG	12 AWG
from 17 A and up to 23 A		10 AWG	8 AWG

* It is safe to use only if the extensions have a built-in artifact for over current protection.

AWG = American Wire Gauge. Reference: NMX-J-195-ANCE

General power tool safety warnings

⚠️ WARNING! Read carefully all safety warnings and instructions listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. **Save all warnings and instructions for future references.**

Work area

Keep your work area clean, and well lit.

Cluttered and dark areas may cause accidents.



Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

Sparks generated by power tools may ignite the flammable material.



Keep children and bystanders at a safe distance while operating the tool.

Distractions may cause loss of control.



Electrical Safety

The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.



Modified plugs and different power outlets increase the risk of electric shock.

Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

Personal safety

Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.

A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.



Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times.

This enables a better control on the tool during unexpected situations.

Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.

Loose clothes or long hair may get caught in moving parts.



If you have dust extraction and recollection devices connected onto the tool, inspect their connections and use them correctly.

Using these devices reduce dust-related risks.

Power Tools Use and Care

Do not force the tool. Use the adequate tool for your application.

The correct tool delivers a better and safer job at the rate for which it was designed.



Do not use the tool if the switch is not working properly.

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.

These measures reduce the risk of accidentally starting the tool.



Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.

Power tools are dangerous in the hands of untrained users.

Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.

Most accidents are caused due to poor maintenance to the tools.



Keep the cutting accessories sharp and clean.

Cutting accessories in good working conditions are less likely to bind and are easier to control.

Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

Service

Repair the tool in a **TRUPER® Authorized Service Center** using only identical spare parts.

This will ensure that the safety of the power tool is maintained.

Safety warnings for orbit sanders

 **TRUPER®**

CAUTION • Observe the applicable regulations when sanding painted surfaces. Use special care when the paint is lead-based.

- Remove dust and any other type of debris to assure a safe working environment. When possible use a vacuum cleaner or a dust extractor.

CAUTION • To be protected against dust and smoke generated when sanding everybody in the work area should wear a professional breathing mask.

- Do not use this tool for sanding pieces containing magnesium.
- After long work cycles the metallic outer parts and accessories may get hot.

CAUTION • Wear  TRUPER® professional breathing mask and cartridges suited for paint dust and vapors. Regular painter masks do not offer the right protection.

WARNING • Do not allow children and pregnant women enter the work area.


WARNING • Remove the dust bag before sanding metal. Sparks may ignite dust and the inner pouch.

- Do not use worn or ripped sanding sheets.
- Do not touch the sandpaper when moving.
- Before sanding, double-check all foreign objects such as nails or screws are removed from the work piece.

WARNING • Hold the tool by the insulated grip, as the sander could make contact with its own power cord.

Contact with a power cord makes the metal parts of the tool also have current and may result in a shock to the operator.

Parts

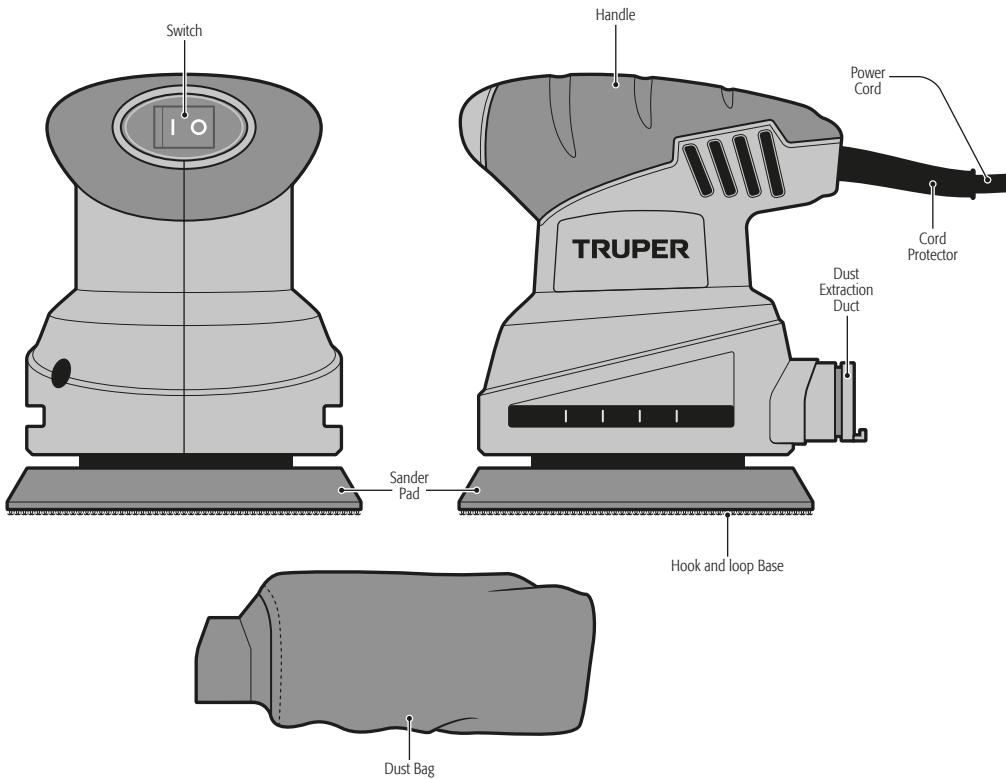



Sanding Disc Selection

- Grains available vary from very coarse to very fine.
- Coarse grain is used to sand rough surfaces, medium grain, for light work and fine grain is for smooth finish.
- It is advisable to carry out tests over a disposable piece to determine the adequate grain for a particular job.
- Do not use the same disc for wood and for metal. Metal particles can get embedded in the sanding and ill-treat a wooden surface.

Grain	Type
60 or lower	very coarse
80 - 100	coarse
120 - 150	medium
180 - 220	fine
240 or higher	very fine


Installing a Sanding Disc

- ⚠ WARNING** Always double check the sander is off and disconnected from the power supply before installing the sandpaper.
- Select the right sanding grain.
 - Remove dust and debris from the pad and it hook and loop base (**A**).
 - Align the sanding disc orifices with the orifices in the pad. Press firmly.
 - To remove the sanding disc tear it out from its base (**B**).
- ⚠ CAUTION** • Clean regularly dust accumulated in the hook and loop base. Do not wait for the disc to be completely worn out before replacing it. Otherwise, the hook and loop base can get damaged and will lose adherence with the sandpaper.
- ⚠ CAUTION** • The hook and loop base is considered as a consumable and is not covered by the Warranty.

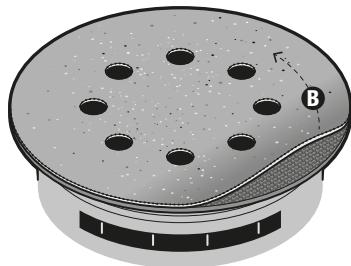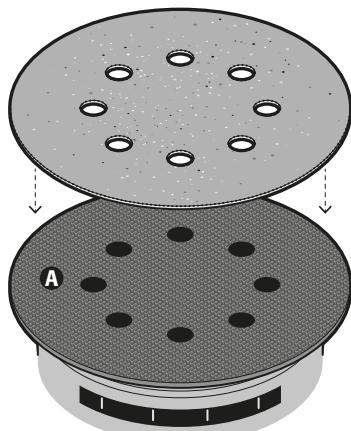

Switch On

- Connect the plug into the power outlet.
 - To start the tool, press switch (**C**) into the ON position (**I**).
 - To shut off the tool, press the switch to the opposite side.
- ⚠ CAUTION** Do not start the tool when the sander surface is onto the work piece.
- ⚠ CAUTION** Before shutting off the machine, keep it away from the work piece.

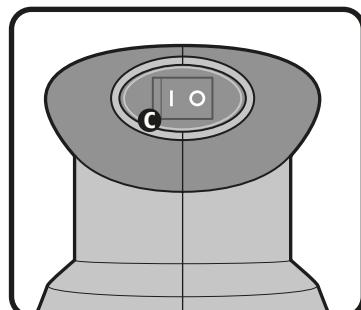


Start up



This sander was designed to sand wood, metal, plastic and similar materials. Can be used for repetitive sanding jobs and finishing. Due to its size, is ideal for final jobs.


Dust Extraction

- Before connecting the tool to the power supply, adjust the dust bag into the dust extraction duct in the rear or the sander (**D**).
- To get an optimal dust extraction, remove and empty the dust bag when is half-full.
- Use the dust bag when sanding wood. Do no use when sanding metal. The metal particles could ignite the residual wood dust or the inner pouch.
- Make sure to regularly clean the dust accumulated in the dust bag and the hook and loop base.

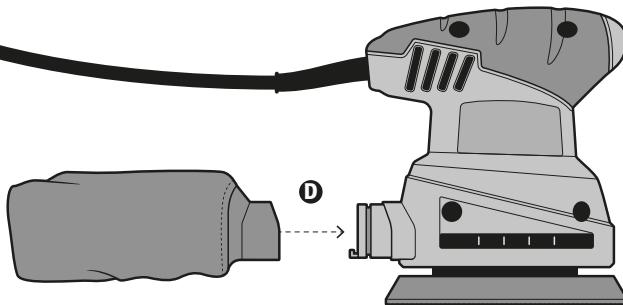

Sander Operation

- Switch on the sander before setting it onto the work piece.
- Keep the sander base parallel to the work piece surface.
- Press lightly downwards onto the work piece. Make circular movements. Be sure the full sanding area is supported on the work piece.
- Ensure the pressure is moderated. Do not force the sander. Make it work at a reasonable speed. If too much pressure is applied, the motor speed could be slower due to overheating. It could cause insufficient sanding and damage to the motor.
- If after sanding, the surface is still showing marks, sand again with a coarser grain to eliminate the marks. Replace the sanding disc with the next one and finish sanding. Or, replace the worn sanding disc with a new one.
- Do not let the sanding disc be totally worn out. Replace it before this happens.

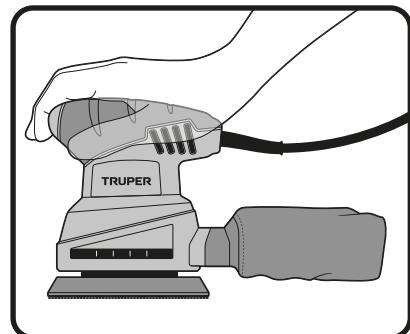

Cleaning and Care

Always keep the ventilation slots in the motor housing clean and free of obstructions. After each use apply compressed air.

In the event of malfunctioning go only to a  **TRUPER®** Authorized Service Center.

Carbon Brush Replacement

- Carbon brushes need to be checked regularly and when worn, replaced in a  **TRUPER®** Authorized Service Center.
- After the carbons have been replaced, ask the technician to inspect if they run freely in the carbon housing and to let run the machine 5 minutes to make even the contact of carbon and commutator.
- Use only  **TRUPER®** original spare carbon brushes, designed specifically with the strength and electric resistance fit for each type of motor. Carbon brushes that are out of specifications may damage the motor.
- When replacing carbon brushes always change both pieces.

Authorized Service Centers



In the event of any problem contacting a Truper Authorized Service Center, please see our webpage www.truper.com to get an updated list, or call our toll-free numbers **800 690-6990** or **800 018-7873** to get information about the nearest Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0537	MORELOS	FIX FERRETERÍAS CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931
BAJA CALIFORNIA	SUCRASAL TIJUANA AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100	NAYARIT	HERRAMIENTAS DE TEPIC MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540
BAJA CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ANGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115	NUEVO LEÓN	SUCRASAL MONTERREY CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
CAMPECHE	TORNILLERÍA Y FERRETERÍA AAA AV. ALVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808	OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL.: 287 106 3092
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083	PUEBLA	SUCRASAL PUEBLA AV PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLACINGO, PUE. TEL.: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	SUCRASAL CHIHUAHUA AV. SILVESTRE TERRAZAS #12-111, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTEMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL.: 614 434 0052	QUERÉTARO	ARU HERRAMIENTAS S.A DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544
CIUDAD DE MÉXICO	FIX FERRETERÍAS EL MONSTRUO DE CORREGIDORA, CORREGIDORA # 22, COL. CENTRO, C.P. 06060, CUAUHTEMOC, CDMX. TEL: 55 5522 5031 / 5522 4861	QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL. EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL.: 984 267 3140
COAHUILA	SUCRASAL TORRÉON CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORRÉON, COAH. TEL.: 871 209 68 23	SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL.: 444 822 4341
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28259, MANZANILLO, COL. TEL.: 314 332 1986 / 332 8013	SINALOA	SUCRASAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZURIÓN #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO. TEL.: 618 817 1946 / 618 818 2844	SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 413 2392
ESTADO DE MÉXICO	SUCRASAL CENTRO JILOTEPEC PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL.: 761 782 9101 EXT. 5728 Y 5102	TABASCO	SUCRASAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 353 7244
GUANAJUATO	CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 671 758 / 79 / 80 / 88	TAMAULIPAS	VM ORINGS Y REFACCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRIGUEZ, FRACC. REYNOSA, C.P. 87870, REYNOSA, TAMS. TEL.: 899 926 7552
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL.: 747 478 5793	TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
HIDALGO	FERREPRESIOS S.A. DE C.V. LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616	VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA ESQ. HORTENSIA S/N, COL. PRIMAVERA, C.P. 93308, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
JALISCO	SUCRASAL GUADALAJARA AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL VALLE, C.P.: 45655, TLAJOMULCO DE ZÚÑIGA, JAL. TEL.: 33 3606 5285 AL 90	YUCATÁN	SUCRASAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA LUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858		

Code	Model	Brand
102466	LIRO-5A-2	 TRUPER®

Warranty. Duration: 2 year. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by Truper®. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 22, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. . Phone number **800-018-7873**. Made in China. Imported by Truper, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.



Stamp of the business. Delivery date:

Sello del establecimiento comercial. Fecha de entrega:



Parque Industrial Jilotepec, Jilotepec, Edo. de Mex. C.P. 54257, Tel. 761 782 9100.
su red de servicios. Tel. 800-018-7873. Hecho en China. Importador Truper, S.A. de C.V. Parque Industrial 1,
consumibles y accesorios, incluye los gastos de transporte del producto que deviene de su cumplimiento de
o en Corregidora 22, Centro, Cuautitlán, CDMX, 06060, donde también podrá adquirir partes, componentes,
presente el producto, pague sellada o factura o recibo o comprobante, en el establecimiento donde lo compró
instalativo, fue elaborado o preparado por persona no autorizada por Truper®. Para hacer efectiva la garantía
funcionamiento, excepto si se uso en condiciones distintas a las normales; cuando no fue operado conforme
Garantía. Duración: 2 años. Cobertura: piezas, componentes y mano de obra contra defectos de fabricación o

• TRUPER.

LIR0-5A-2

Marca

102466

Código

Modelo

Garantía
Poliza de

• TRUPER®

MORELOS FIX FERRERIAS CP 69100, CEMEXICO #99, ESC. JOSE PEREZ, COL. CP 69124, CUAUTLA, MOR. TEL.: 755 552 9831 NAYARIT HEBRAMIENTAS DE TEPIC MAZATLAN #11, COL. CENTRO, CP 63000, TEPIC, NAY. TEL.: 311 258 0540 NUEVO LEÓN SCURSAL MONTERRÉ CERREJERA LARGO #500, SAN NICOLAS ALMECTA, CP 66055, ISCOBEDO, GUANAJUATO, TEL.: 81 8352/890 OAXACA FIX FERRERIAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, CP 68300, TUXTEPEC, OAX TEL.: 287 106 5092 PUEBLA SCURSAL PUEBLA AV. SILENTIALES #27, COL. SAN LORENZO ALMECTA, CP 77170, CUAUTLA/CIUDAD, PUE. TEL.: 934 2742 QUINTANA ROO FIX FERRERIAS Avenida 100, KM. 11, COL. EL PRADO, Q.R. TEL.: 472 268 5544 QUINTANA ROO FIX FERRERIAS SAN LUIS POTOSÍ SAN LUIS POTOSÍ, SL.P., TEL.: 444 822 4341 TEL.: 667 173 1939 / 173 8400 SINALOA SCURSAL CULIACÁN AV. JESÚS REYES #190, COL. HAGENDA DELA MORA, CP 80443, CULIACÁN, SIN. TEL.: 661 713 1939 / 173 8400 SONORA FIX FERRERIAS CALLE 5 DE FEBRERO #51, SUR LT. 25, 10, COL. CEN. DR. DEBOGO, CP 88000, CDMX, D.F. TEL.: 644 333 2392 TABASCO SCURSAL VILLAHORMOSA CALLE HELO ILOTES 1, 2 Y 3 MZ #, COL. INDUSTRIAL, ZA EAPAL, CP 88010, VILLAHORMOSA, TAB. TEL.: 993 355 7244 TAMAULIPAS VIS ORIGENES Y REFRACCIONES CALLE 52 DE ENERO #272 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRIGUEZ, SAN JUAN DEL MONTE, TAMAULIPAS, TEL.: 90970, SAN JUAN DEL MONTE, TAMAULIPAS, TEL.: 222 71 752 TLAZACALA SERVICIOS Y HERMANITAS INDUSTRIALES AV. ADOFO HORN #8900, COL. SANTO CRUZ DEL VALLE, CP: 43600, CULIACÁN, SINALOA, COL. TEL.: 33 3606 5285 AL 90 VERACRUZ L.A CASA DISTRIBUIDORA TUPPER Blvd. PRIMAVERA ESQ. HORTELINA S/N, COL. PRIMAVERA, CP: 33360, POZA RICA, VER. TEL.: 782 823 0000 / 826 8484 YUCATÁN SCURSAL MERIDA CALLE 33 #600 602 LOCAL 10, LOCALIDAD ITZINCA Y MUSA YUCATÁN TEL.: 999 912 2451 MPD, UMA, CP: 73790, MERIDA, YUC. TEL.: 999 912 2451	AGUASCALIENTES DE TODO PARA LA CONSTRUCCIÓN C.R. BL. BARRAGÁN #120, COL. GRIMAL, CP 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0537 CALIFORNIA SUR FIX FERRERIAS FLORES II, C.P.22244, TIJUANA, B.C. TEL.: 664 996 5100 BAJA SCURSAL TIJUANA AV. LA ENCANTADA LOTE #5, PARQUE INDUSTRIAL EL CUCALON, TEL.: 81 8352/890 CAMPECHE TORNIERAS Y FERRERIA AAA AV. ALVARO OBREGÓN #27, COL. ESPERANZA CP. 24080, CAMPACHE, CAMPE. TEL.: 981 815 2080 CHIAPAS SCURSAL CHIHUAHUA TAPACHULA, CHIS. TEL.: 962 118 4083 CHIHUAHUA SCURSAL CHIHUAHUA AV. SILENTIALES #27, COL. CENTRO, CP. 30700, CHIHUAHUA, CHIH. TEL.: 614 434 0052 COAHUILA SCURSAL TRENES CALLE 100, KM. 11, PARQUE INDUSTRIAL ORIZATE, CP. 22282, TORREON, COAH. TEL.: 871 209 68 23 COLUMIA BOMBYA Y MOTORES BYMTESA DE MANZANILLO SEPTIMBRE CP 28239, MANZANILLO, COL. DEPARTAMENTO DE MARÍA #190, COL. 16 DE MAYO, TEL.: 769 728 1910 EXT 57284 1502 DURANGO TORNILERA S.A. DE C.V. MAZATLÁN #200 COL. LUIS CARRASQUILLA, DURANGO, DGO. TEL.: 618 817 1946 / 618 818 2844 ESTADO DE MÉJICO SURCARIAL FERTRONIO MOLTEC MEXICO #200 COL. LUIS CARRASQUILLA, DURANGO, DGO. TEL.: 618 817 1946 / 618 818 2844 GUANAJAUTO CIA FIX FERRETERIA NUVO MUNDO S.A. DE C.V. JALISCO FEERPRECCOS S.A. DE C.V. CHIAPACONDO, C.P. 39010, TEL.: 747 478 5793 GUERRERO CENTRO DE SERVICIO ECLIPSE CHIAPACONDO, C.P. 39010, TEL.: 747 478 5793 HIDALGO FEERPRECCOS S.A. DE C.V. ROBLEDO, C.R. 43600, CULIACÁN, SINALOA, COL. TEL.: 775 753 6695 / 775 753 6696 JALISCO SURCARIAL GUADALAJARA AV. ADOFO HORN #8900, COL. SANTO CRUZ DEL VALLE, CP: 43600, TIJUAMA/CUACO #310-A, COL. TEL.: 33 3606 5285 AL 90 MICHOACÁN FIX FERRERIAS EJE 1A SUR, C.P. 58050, MORELIA, MICHOACÁN, TEL.: 445 344 1658
---	---

En caso de tener algún problema para contactar un Centro de Servicio Autorizado Tupper®, consulte la página www.tupper.com donde obtendrá un listado actualizado, o llame al: **800 690-6990** ó **800 018-7873** donde le informarán cuál es el Centro de Servicio más cercano.

Cambio de carbonos


• TRUPER. Mantenga siempre las aberturas de ventilación del cárter del motor. Despues de cada uso aplique aceite compimido. En caso de falla repara unicamente a un Centro de Servicio Autorizado que cumple con las normas establecidas.

Limpieza y cuidados

Mantenimiento


• TRUPER.

- Los carbonos deben revisarse periódicamente, ya sea después de que haya sido reemplazado el servicio autorizado.
- Los carbonos deben revisarse periódicamente, ya sea después de que haya sido reemplazado el servicio autorizado.
- Solo se deben usar carbonos de repuesto de los carbonos y el consumo de combustible.
- TRUPER. originales, diseñados específicamente para el consumo de motor. Los carbonos fueran de especificaciones cada tipo de motor.
- Cuando se hace el cambio de carbonos siempre deben tener en cuenta la resistencia eléctrica adecuadas para el conector de la batería y la resistencia eléctrica adecuadas para el contacto de la batería.
- Reemplazar los carbonos los dos carbonos.

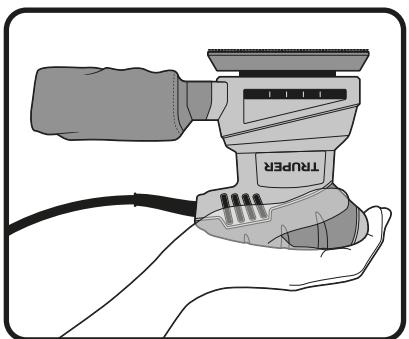

- Tres veces la base de la liladora paralela a la superficie de trabajo.
 - Mantenga la base de la liladora paralela a la superficie de trabajo.
 - Realice la operación de lijado sobre la pieza de trabajo.
 - Realice la operación de lijado sobre la pieza de trabajo.
 - Asegúrese de que sea una presión moderada. No force el motor demasiado presionando la velocidad.
 - Si después de haber lijado insuficiente y daños al motor.
 - Supereficie, lijé de nuevo con un grano más grueso para eliminar las marcas.
 - Si después de haber lijado persisten marcas en la superficie, lijé de nuevo con un grano más grueso para eliminar las marcas.
 - El lijado. O cambie la lijadora por una nueva.
 - No déle que la lijadora antes de que esa suceda.


Operación de la lujadora

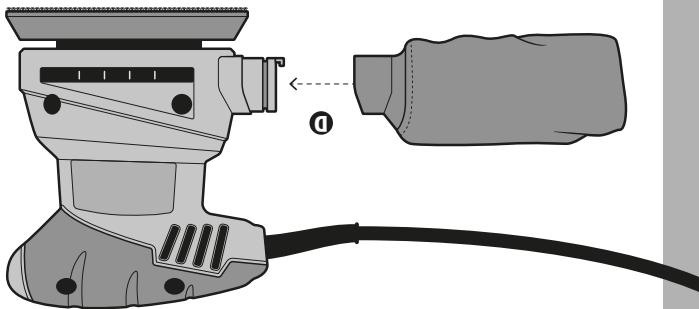

- Asegúrese de limpiar regularmente el polvo acumulado en la boleta recocletora de polvo y la base hook and loop.
 - Asegúrese de limpiar regularmente el polvo acumulado en la boleta recocletora de polvo y la base hook and loop.
 - Utilice la boleta recocletora de polvo cuando lleve madera.
 - Utilice la boleta recocletora de polvo cuando lleve madera.
 - Para una óptima extracción del polvo, remueva y vacíe la boleta recocletora de polvo cuando se encuentre llena a la mitad.
 - Para deshacerse de la lija/dora (**D**)


Extracción de polvo

Esta lijadura ha sido diseñada para lijar madera, metal, plástico y materiales similares. Puede utilizarla para lijados repetitivos y acabados finos. Por su tamaño, es ideal para trabajos finales.

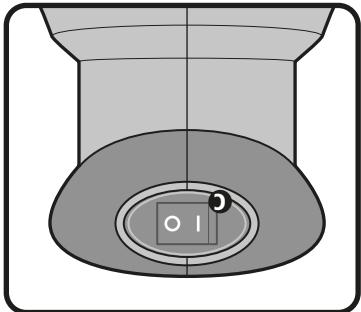


- Colocar la rejilla al tomacorriente.
- Para encender la herramienta, presione el interruptor (C) a la posición de encendido (I).
- Para apagar la herramienta, presione el interruptor (C) a la posición de apagado (II).
- A ATENCIÓN** No encienda la herramienta cuando la superficie de la pieza esté sobre la mesa de trabajo.
- A ATENCIÓN** No encienda la herramienta, presione el interruptor (C) a la posición de encendido (I).

Encendido

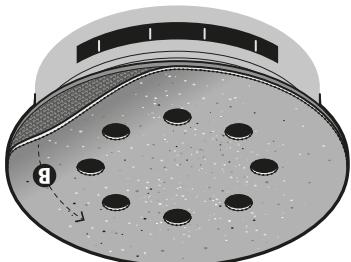

- Seleccione la rejilla deseada para la base (B).
- Para retirar el disco de la base (B), presione con firmeza.
- Alinee los orificios del disco de la rejilla con los orificios de la almohadilla y presione con firmeza.
- Retire el polvo de los orificios de la rejilla y su base hook and loop.
- Seleccione la rejilla deseada para la base hook and loop.
- A ATENCIÓN** • Limpe con regularidad el polvo acumulado en la base hook and loop para reemplazarlo. De lo contrario la base hook and loop se completa para reemplazarlo. De lo contrario la base hook and loop se pierde durante el uso.
- A ATENCIÓN** • La base hook and loop se considera consumible no es esta cubierta por la garantía.

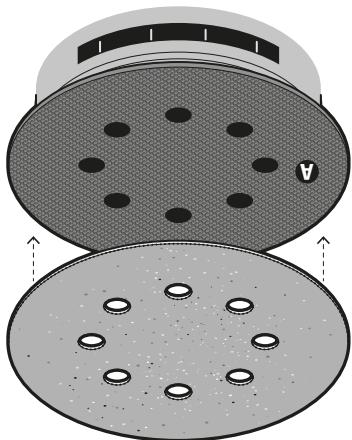

Instalación del disco de la rejilla


Tipo	Grano	Muy fino
60 o menos	muy grueso	
80 - 100	grueso	
120 - 150	mediano	
180 - 220	fino	
240 o más	muy fino	

Puestas en marcha

- Los granos disponibles varían de muy grueso a muy fino.
- El grano grueso se usa para la rejilla superficies ásperas, el mediano para tablas de madera y fino para acabados.
- Es recomendable leer a cabo una prueba sobre una pieza desechar el grano grueso que la rejilla no logra desgajar.
- No utilice el mismo disco para madera y para metal. Las partículas de metal pueden incrustarse en la rejilla y maltratarán la rejilla.
- Es recomendable usar una rejilla para metal.

Selección del disco de la rejilla

CTRUPER®

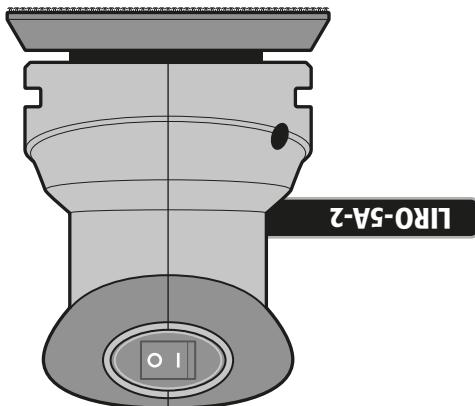

- A ATTENCIÓN**
- Indice
- Especificaciones técnicas 3
 - Requerimientos eléctricos 3
 - Advertencias Generales de Seguridad 4
 - Para herramientas eléctricas 4
 - Advertencias de Seguridad 5
 - Partes 5
 - Puesta en marcha 6
 - Mantenimiento 8
 - Centros de Servicio Autorizados 9
 - Poliza de Garantía 10
- Guarda este instructivo para futuras referencias.
- Los gráficos de este instructivo son para referencia, pueden variar del aspecto real de la herramienta.
- Leer este instructivo por lesiones graves, es fundamental que sea necesario y evitar riesgos o la garantía en caso de ser alargar su vida útil, hacer validar el poder sacar el máximo provecho de la herramienta.
- Para poder sacar el máximo provecho de la herramienta, probarla su vida útil, hacer validar la garantía en caso de ser necesaria y evitar riesgos o lesiones graves, es fundamental leer este instructivo por completo antes de usar la herramienta.




Lea este instructivo por completo.
Antes de usar la herramienta.

ATENCIÓN



LIRO-5A-2

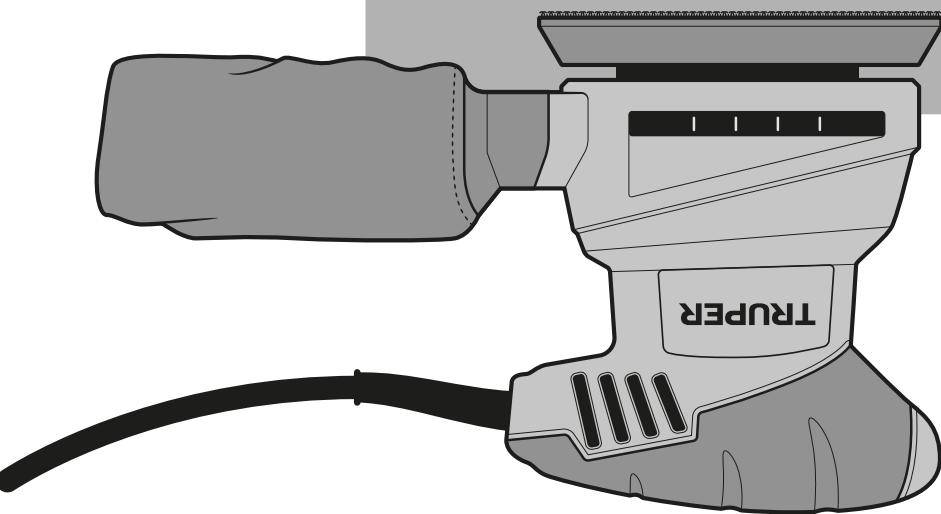

102466 LIRO-5A-2

Código Modelo

Este instructivo es para:

5" (12.5 cm)
Potencia
Disco de lijado

260 W

lijadora
rot-o-orbital
Instructivo de

TRUPER®

ESPAÑOL
ENGLISH