

ENGLISH  
ESPAÑOL

TRUPER®

Manual

# Canister vacuum

1.8 L

0.4 gal  
Capacity


Applies for:

**Code**

103190

**Model**

ASD-150

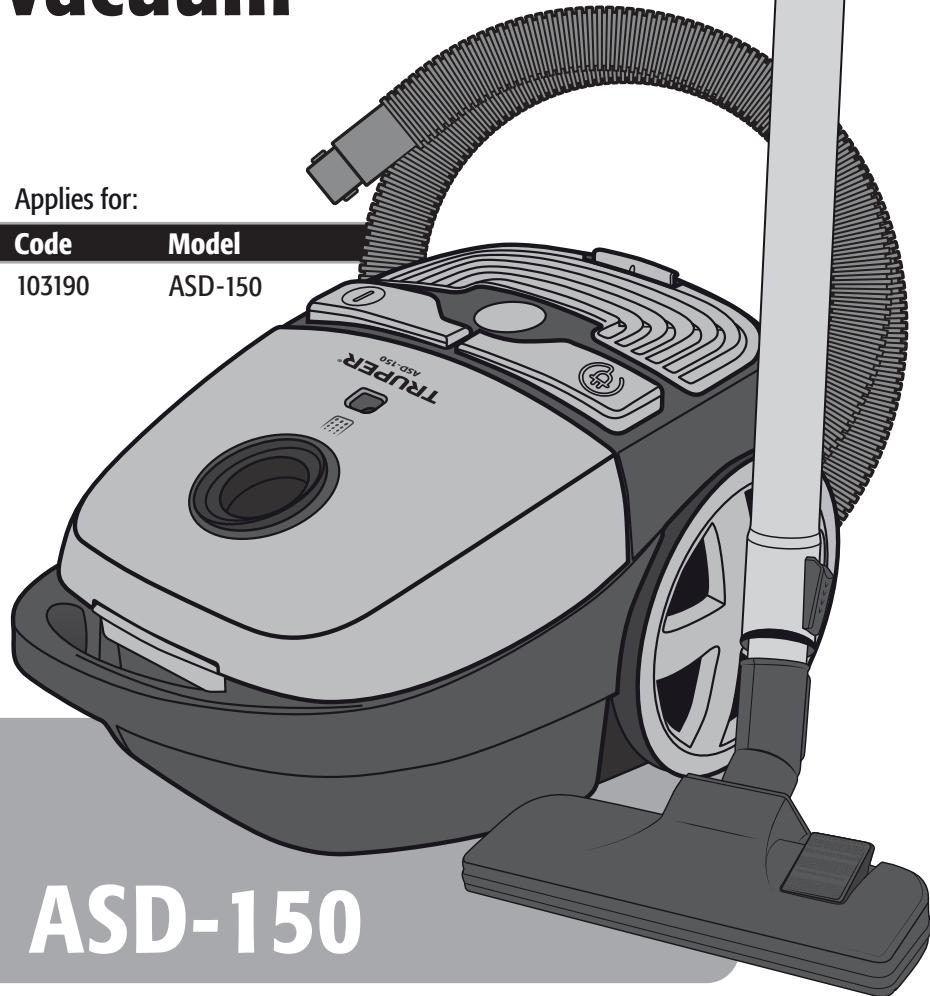

# ASD-150

**CAUTION**



Read this manual thoroughly  
before using the tool.




|   |    |
|---|----|
| Technical data .....  | 3  |
| Power requirements .....  | 3  |
|  General safety warnings<br>for electric tools .....     | 4  |
|  Safety warnings for the use<br>of vacuum cleaners ..... | 5  |
| Parts .....   | 6  |
| Assembly .....  | 6  |
| Start Up .....  | 7  |
| Maintenance .....   | 8  |
| Troubleshooting .....   | 9  |
| Notes .....   | 10 |
| Authorized service centers .....  | 11 |
| Warranty policy .....   | 12 |

 **CAUTION**

To get the most out of the tool,  
extend its lifespan, claim the  
warranty if necessary, and avoid  
serious risks or injuries, please  
read this manual thoroughly  
before using the tool.

Please keep this manual for future references.

The illustrations in this manual are for reference  
only and may differ from the real appearance of  
the tool.

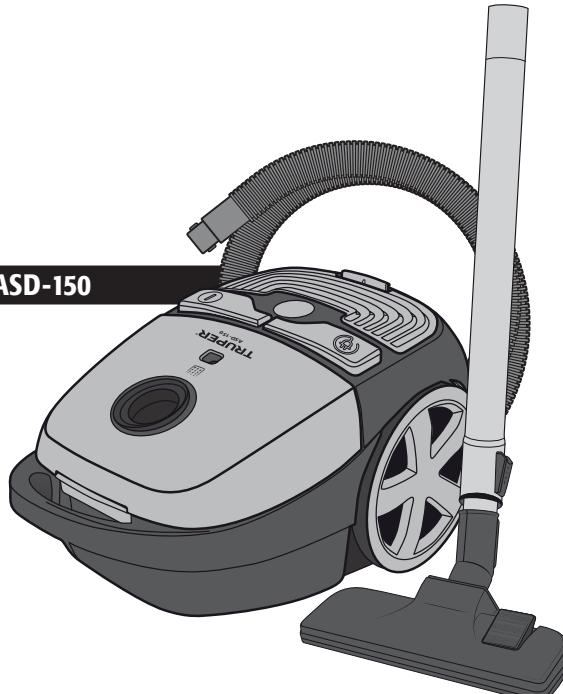

## ASD-150

|                        |   |                        |
|------------------------|---|------------------------|
| <b>Code</b>            | • | 103190                 |
| <b>Description</b>     | • | Canister vacuum        |
| <b>Voltage</b>         | • | 127 V~                 |
| <b>Frequency</b>       | • | 60 Hz                  |
| <b>Current</b>         | • | 10 A                   |
| <b>Rated power</b>     | • | 1200 W (1.6 Hp)        |
| <b>Capacity</b>        | • | 0.4 gal (1.8 L)        |
| <b>Vacuum pressure</b> | • | 17.2 kPa (2.5 PSI)     |
| <b>Conductors</b>      | • | 18 AWG x 2C            |
| <b>Insulation</b>      | • | Class II               |
|                        |   | <b>IP grade</b> • IPX0 |

The power cable has cable ties type: Y  
 The construction class of the tool is: Reinforced insulation  
 The thermal insulation class of the motor windings: Class B


**WARNING** If the power cable is damaged, it must be replaced by the manufacturer or a TRUPER Authorized Service Center to prevent any risk of electric shock or significant accidents. The electrical insulation of this tool is altered by splashes or spillage of liquids during its operation. Do not expose it to rain, liquids, and/or moisture.



**WARNING** Before accessing the terminals, all power circuits must be disconnected.

## Power requirements

**WARNING** Tools with reinforced insulation are equipped with a polarized plug (one prong is wider than the other). This plug fits into any polarized outlet and can only be connected in one way. If the plug does not fit into the outlet, turn it over. If it still does not fit, contact a qualified electrician or install a polarized outlet. Do not alter the plug in any way. Double-insulation tools eliminate the need for a 3-wire grounded power cord or a grounded electrical system.

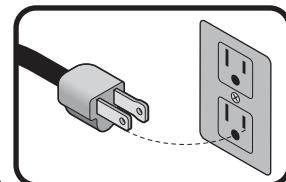

**WARNING** When using an extension cord, ensure to use a gauge to carry the current that the tool will consume. A lower gauge cord will cause voltage drops in the line, resulting in power loss and motor overheating. The following table shows the correct size to be used depending on the cable length and the amperage capacity indicated on the tool's data plate. If in doubt, use the next higher gauge.

| Capacity<br>in amperes | Number<br>of conductors | Extension gauge                        |
|------------------------|-------------------------|--|
| From 0 A to 10 A       |                         | From 1.8 m to 15 m   Greater than 15 m |
| From 10 A to 13 A      |                         | 18 AWG(*)   16 AWG                     |
| From 13 A to 15 A      | 3 (one to ground)       | 16 AWG   14 AWG                        |
| From 15 A to 20 A      |                         | 14 AWG   12 AWG                        |
|                        |                         | 8 AWG   6 AWG                          |

\* It is allowed to use it if the extensions themselves have an overcurrent protection device.

AWG = American Wire Gauge. Reference: NMX-J-195-ANCE.

**WARNING** When operating electric tools outdoors, use a VOLTECK® grounded extension cord marked as 'Outdoor Use'. These extensions are specially designed for outdoor use and reduce the risk of electric shock.



**⚠ WARNING!** Read all safety warnings and all instructions listed below carefully. Failure to follow any of them may result in electric shock, fire, and/or serious injury. Keep the warnings and instructions for future reference.

**Work area**

Keep your work area clean and well-lit.

Cluttered and dim areas can lead to accidents.



**Do not operate the tool in explosive atmospheres, such as in the presence of flammable liquids, gas, or dust.**



The electric tools produce sparks that can ignite flammable material.

**Keep children and other individuals at a safe distance while using the equipment.**



Distractions can cause loss of control and lead to accidents.

**Electrical safety**

**Electrical tool plugs must match the outlet. Never modify the plug in any way. Do not use adapters with grounded electrical tools.**



Unmodified electrical tools and matching plugs will reduce the risk of electric shock.

**Avoid bodily contact with grounded surfaces, such as pipes, radiators, stoves, and refrigerators.**

There is an increased risk of electric shock if your body is grounded.

**Do not expose the tool to rain or humid conditions.**

Water entering the tool increases the risk of electric shock.

**Do not force the cable. Never use the cable for carrying, lifting, or disconnecting the tool. Keep the cable away from heat, oil, sharp edges, or moving parts.**

Damaged or tangled cables increase the risk of electric shock.

**When operating an electrical tool outdoors, use an extension cord suitable for outdoor use.**

The use of a suitable outdoor-rated cable reduces the risk of electric shock.

**If it is unavoidable to operate an electrical tool in a damp location, use a power source protected by a Ground Fault Circuit Interrupter (GFCI).**

The use of a Ground Fault Circuit Interrupter (GFCI) reduces the risk of electric shock.

**Personal safety**

Be alert, watch what you are doing, and use common sense when handling a tool. Do not use it if you are tired or under the influence of drugs, alcohol, or medication.

A moment of distraction while using the tool can cause personal injury.

**Use safety equipment. Always wear eye protection.**

The use of safety equipment such as safety glasses, dust mask, slip-resistant shoes, helmet, and ear protection in appropriate conditions significantly reduces the risk of personal injury.



**Avoid accidental starts. Ensure the switch is in the "off" position before connecting to the power source and/or the battery or transporting the tool.**

Carrying power tools with your finger on the switch or connecting power tools with the switch in the "on" position can cause accidents.

**Remove any wrenches or adjusting tools before starting the power tool.**

Wrenches or tools left on the rotating parts of the tool can cause personal injury.

**Do not exceed your range of motion. Keep both feet firmly planted on the ground and always maintain balance.**

This allows better control of the tool in unexpected situations.

**Dress appropriately. Do not wear loose clothing or jewelry. Keep your hair, clothing, and gloves away from moving parts.**



Loose clothes, jewelry, or long hair can get caught in moving parts.

**If dust extraction and collection devices are available for the tool, check their connections and use them correctly.**

The use of these devices reduces risks associated with dust.

**Tool use and care**

**Do not force the tool. Use the appropriate tool for the task at hand.**



The right tool performs better and is safer when used at the intended pace.

**Do not use the tool if the switch is not functioning.**

Any power tool that cannot be turned on or off is dangerous and must be repaired before operation.

**Disconnect the tool from the power source and/or battery before making any adjustments, changing accessories, or storing it.**

These measures reduce the risk of accidentally starting the tool.

**Store the tools out of the reach of children and do not allow them to be handled by individuals unfamiliar with the tools or their instructions.**

Power tools are dangerous in untrained hands.

**Maintain the tool. Ensure that the moving parts are not misaligned or jammed, and that there are no broken parts or other conditions that may affect its operation. Repair any damage before using the tool.**

Many accidents are caused by inadequate tool maintenance.

**Use the tool, its components, and accessories in accordance with these instructions and as intended for the type of tool, in appropriate working conditions.**

Using the tool for applications other than those for which it is designed could cause a hazardous situation.

**Service**

**Repair the tool at an Authorized TRUPER Service Center using only identical replacement parts.**

To maintain the safety of the tool.

**This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.**

Children should be supervised to ensure that they do not play with the appliance. Strict supervision should be applied with children or disabled individuals to prevent them from using or being near any household tool.

This tool is in compliance with the Official Mexican Standard (NOM - Norma Oficial Mexicana).

4

ENGLISH

# Safety warnings

for the use of vacuum cleaners

**TRUPER®**

## Hazardous materials

**⚠ WARNING** • Do not vacuum or use the vacuum cleaner near flammable liquids, gases, or explosive vapors such as gasoline or other fuels, lighter fluid, hot liquids, cleaners, oil-based paints, natural gas, hydrogen, or explosive powders such as coal dust, magnesium dust, grain dust, or gunpowder. Sparks inside the motor can ignite flammable vapors or powders.

**⚠ WARNING** • Do not vacuum anything that is burning or producing smoke, such as cigarettes, matches or hot ashes.

**⚠ CAUTION** • Do not vacuum masonry dust or chimney soot, as it is very fine dust and will not be trapped by the filter causing damage to the motor. When vacuuming fine dust, use a special dust filter (sold separately).

## Cable

- Do not pull the vacuum cleaner or move it with the cord, do not use the cord as a handle, do not close doors on the cord, do not pass the cord over sharp edges or corners.
- Keep the cord away from hot surfaces.
- Do not unplug the vacuum cleaner by pulling the cord. To unplug, grasp the plug, not the cord.
- Do not use the vacuum cleaner with a damaged cord or plug.
- Do not vacuum over the cord.
- Do not handle the plug or vacuum cleaner with wet hands.
- To reduce the risk of injury from accidental starts, disconnect the power cord before changing or cleaning the filter.

## While operating the vacuum cleaner

**⚠ WARNING** • Do not vacuum liquids.


**⚠ CAUTION** • Keep hair, loose clothing, fingers, and any other body parts away from openings and moving parts.

- Do not use or store near hazardous materials.
- Do not leave the vacuum cleaner unattended when operating.
- Do not leave the vacuum cleaner unattended when plugged in.
- Do not place any object on the ventilation openings.
- Do not operate the vacuum cleaner with blocked ventilation openings; keep them free of dust, lint, hair or anything else that may restrict airflow.
- Do not use the vacuum cleaner with a broken or missing filter.
- To reduce the risk of falls, use extreme caution when cleaning stairs.
- If the vacuum cleaner is not working properly, is missing parts, has been dropped or damaged, has been left outdoors or dropped into water, take it to an Authorized TRUPER Service Center.
- Turn off the vacuum cleaner before unplugging it.
- Unplug it from the power outlet when not in use or before servicing.
- Do not allow it to be used as a toy. Particular attention should be paid when children use it or are nearby.
- Do not expose the vacuum cleaner to rain. Store indoors.
- Use ear protection when performing services with noise levels exceeding 85 dB.



**⚠ WARNING** This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.



**⚠ CAUTION** Children should be supervised to ensure that they do not play with the appliance. Strict supervision should be applied with children or disabled individuals to prevent them from using or being near any household tool.

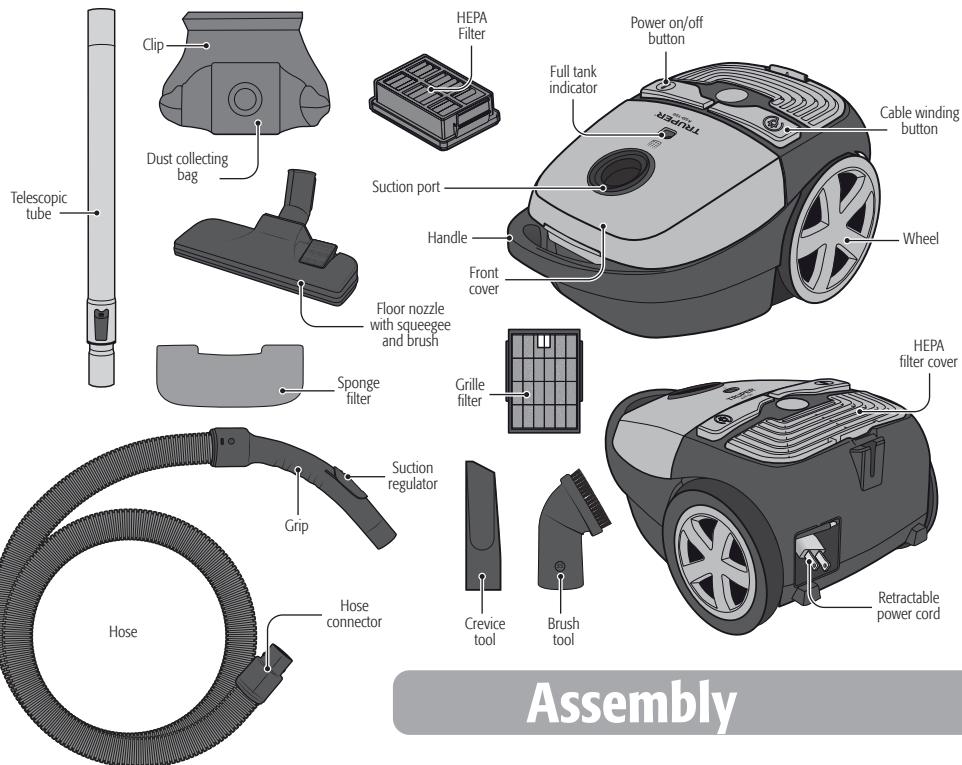

## Assembly

- Insert the hose connector (**A**) into the suction port (**B**). Ensure proper alignment of the notches. Rotate the hose clockwise to secure it to the machine.
- Insert the handle (**C**) into the wider end of the telescopic tube (**D**).
- Select the accessory according to the type of vacuuming you wish to perform and insert it into the free end of the telescopic tube.

**⚠ CAUTION** Press the latch (**E**) and pull the telescopic tube to extend it.

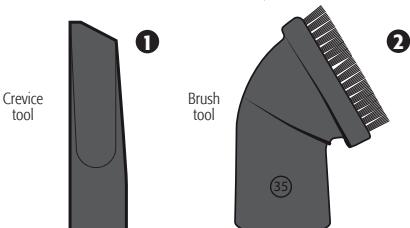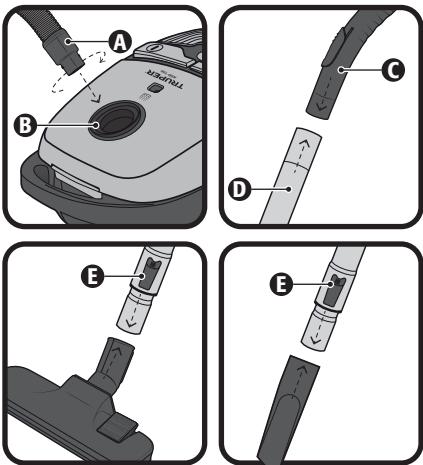


# Start up

**TRUPER®**


## On and off

- Pull out the cable to the desired length (**A**).
  - Press the power on/off button to turn on the vacuum cleaner (**B**).
  - When cleaning is done, disconnect the plug from the power outlet and lightly press the power cord rewind button (**C**).
- CAUTION** • Always ensure that the switch is in the OFF position before plugging the cable into the power outlet.

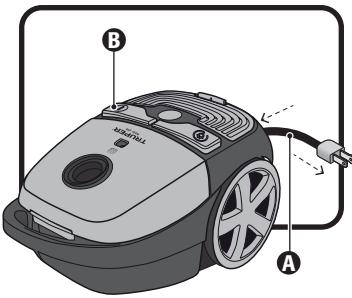


## Usage of the vacuum cleaner

- Ensure that the dust collecting bag and the motor filter are correctly placed.
  - You can adjust the airflow with the suction regulator located on the handle (**E**); slide it up or down.
  - If the red float of the full tank indicator (**D**) moves to the center of the little window, check if the dust collecting bag is full or if there is any obstruction. If the bag is full, replace or clean the dust container (page 8).
- CAUTION** • Cleaning or changing the dust collecting bag will maintain motor power and extend the lifespan of the vacuum cleaner. It is recommended to change the bag approximately every 6 months.

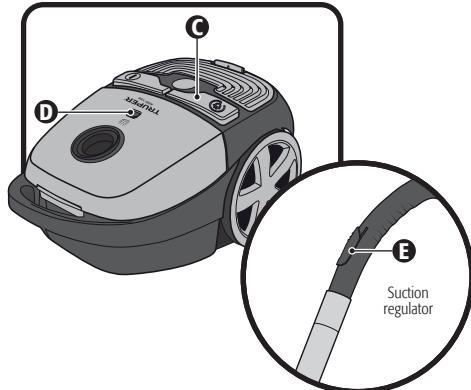

## Accessories

- To achieve greater cleaning efficiency, always keep the accessories clean.
- Before using the floor nozzle with squeegee and brush, ensure that the button position (**F**) matches the type of surface to be cleaned:
  - a) Lower the brush to vacuum floors.
  - b) Use it without the brush to vacuum carpets.
- Use the suction regulator (**E**) to quickly reduce suction power; this is recommended when vacuuming delicate surfaces and objects.
- With the crevice tool, you will reach difficult-to-access corners.
- Use the brush tool for sofas, bookshelves, curtains, and furniture.

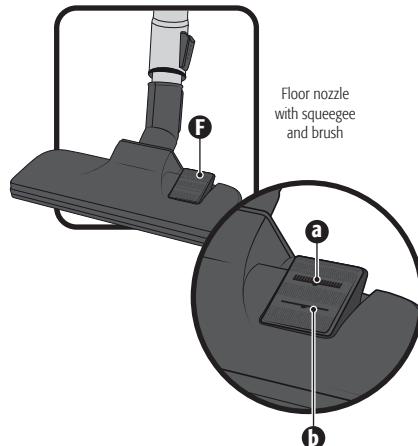

## Transportation and storage


- To transport the vacuum cleaner, you can lift it with the handle.
- The vacuum cleaner has accessory storage.
- For storage, place the combined floors/carpet accessory in the rear or bottom slot of the vacuum cleaner.
- For vertical storage, place the fixing support in the hole of the body.
- The vacuum cleaner should be stored in enclosed areas.

## Dust collecting bag replacement

- This vacuum cleaner comes with a washable dust collecting bag that should be emptied and/or washed when full.
- Check the full tank indicator (page 7).
- If you notice a decrease in suction power, you should also check the bag.

1. Press the lock button and lift the front cover.
2. Remove the dust collecting bag and clip to empty the contents, shake it if necessary. Wash the bag by hand with cold water and let it dry for 24 hours. Ensure the bag is completely dry before placing it back into the vacuum cleaner.
3. Place the clip back onto the bag before placing it back into the vacuum cleaner. Ensure the clip completely seals the bag opening.
4. Press the lock to open the front cover and place the bag in the corresponding position. Close the front cover properly.

### Dust collecting bag replacement

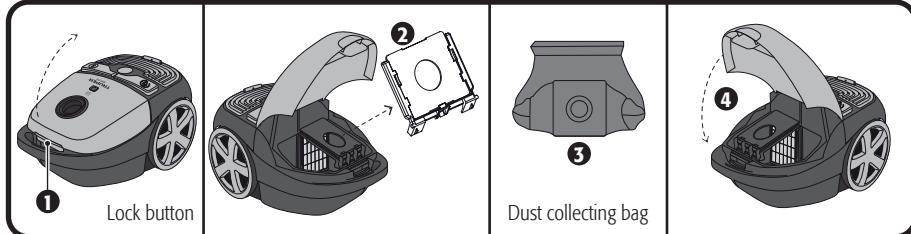

## Maintenance

This vacuum cleaner is intended for household use only and not for commercial purposes. The manufacturer does not assume responsibility for any damage that may occur due to improper use or handling.

### Cleaning

- Remove the hose after each use.
- Always keep the ventilation openings free and clean. Blow regularly with compressed air or clean with a brush.
- To maintain the appearance of the vacuum cleaner, clean the exterior with a damp cloth and mild soap.

### Service

- Tool servicing should only be performed at an Authorized TRUPER Service Center. Service and maintenance performed by unqualified persons can be dangerous and may cause personal injury as well as voiding the product warranty.
- When servicing a vacuum cleaner, request the use of genuine replacement parts. The use of unauthorized parts, or failure to provide proper maintenance, can pose a risk of electric shock or injury.

### Filter care

- The included filters are made of high-quality materials designed to trap small dust particles.
- To collect dust, filters must be dry. If they are wet, the filters will quickly become clogged, making cleaning very difficult.
- Handle the filters carefully when removing them for cleaning or replacement. Check for tears; a small hole can allow dust to pass through the equipment. Do not use filters with tears or holes, replace them immediately.
- To clean the filters, refer to the images on page 9.


### Carbon brush replacement

- Carbon brushes should be periodically inspected and always replaced by an Authorized TRUPER Service Center when worn out.
- After replacement, request an inspection to ensure the new carbon brushes can move freely in the brush holder and ask for the tool to be turned on for 5 minutes to pair the contact of the brushes and the switch.
- Only genuine TRUPER brand replacement carbon brushes should be used, specifically designed with the appropriate hardness and electrical resistance for each type of motor. Out-of-specification carbon brushes can damage the motor.
- Whenever carbon brush replacement is required, both carbon brushes must be replaced.

## Filter cleaning

1. Open the cover of each filter, then lift them up and remove them carefully.
  2. Wash filters **A** and **B** with mild soapy water and rinse them with clean water.
  3. Let the filters air dry outdoors for 24 hours before reinstalling them.
  4. Shake filter **C** to remove accumulated dust; if possible, use compressed air to clean it.
  5. Place them back into their respective compartments.
- CAUTION** When filters are clearly covered with dust or suction significantly decreases, clean them; this can improve work efficiency and prolong the vacuum cleaner's lifespan.
- WARNING** Never operate the machine without filters.

**CAUTION** Before cleaning each filter, gently tap them to remove larger residues.  
**WARNING** The filter cleaning process should be done outdoors, never indoors.

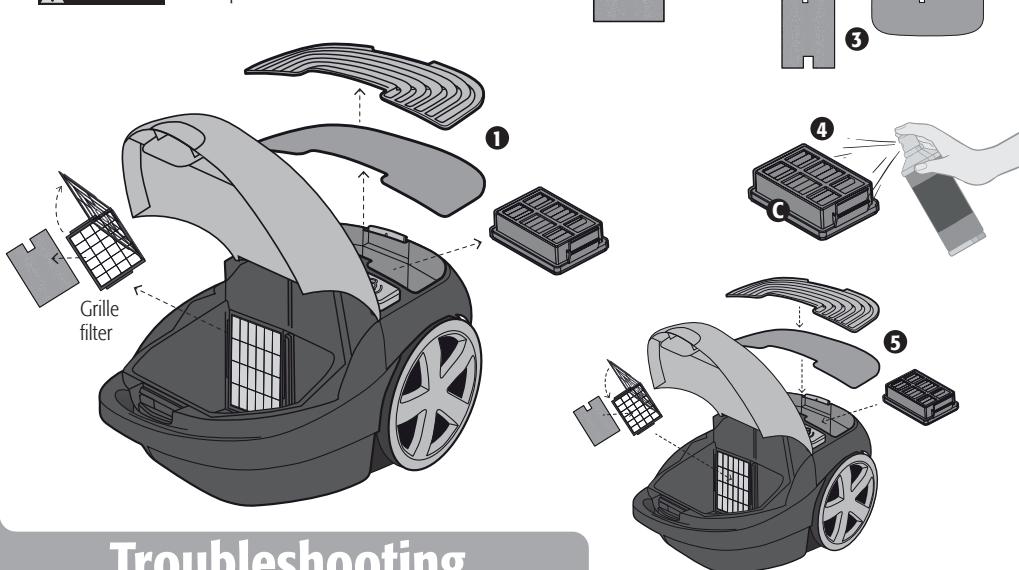

## Troubleshooting

### Problem

The vacuum cleaner is not working.

### Cause

- No power.
- Defective cable.
- Full bag.

### Corrective action

- Check the power supply, cable, circuit breakers, and fuses.
- Unplug and check the power cable. If damaged, it should be repaired at an Authorized TRUPER Service Center.
- Empty and clean the dust collecting bag.

Dust is expelled from the motor cover.

- One of the filters is not placed or is incorrectly placed.

Reduced motor/speed efficiency and vibration.

- Nozzle, hose, or container inlet blockage.
- Clogged filters due to fine dust presence.

- Place or replace the filters.
- Check the nozzle, hose, and container inlet for any blockages.
- Remove the filters and clean them or install new ones.



# Authorized Service Centers

**TRUPER®**

In the event of any problem contacting an Authorized Truper Service Center, please see our webpage [WWW.TRUPER.COM](http://WWW.TRUPER.COM) to get an updated list, or call our toll-free numbers **800 690-6990** or **800 0187-873** to get information about the nearest Service Center.

|                     |   |                 |  |
|---------------------|---|-----------------|--|
| AGUASCALIENTES      | <b>DE TODO PARA LA CONSTRUCCIÓN</b><br>GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030,<br>AGUASCALIENTES, AGS. TEL.: 449 994 0537   | MORELOS         | <b>FIX FERRETERÍAS</b><br>CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL.<br>CENTRO, C.P. 62740, CUATLA, MOR.<br>TEL.: 735 352 8935  |
| BAJA CALIFORNIA     | <b>SUCURSAL TIJUANA</b><br>AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL<br>FLORIDO II, C.P. 22244, TIJUANA, B.C.<br>TEL.: 664 969 5100   | NAYARIT         | <b>HERRAMIENTAS DE TEPIC</b><br>MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY.<br>TEL.: 311 258 0540  |
| BAJA CALIFORNIA SUR | <b>FIX FERRETERÍAS</b><br>FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO<br>NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S.<br>TEL.: 613 132 1115                                 | NUEVO LEÓN      | <b>SUCURSAL MONTERREY</b><br>CARRETERA LAREDO #500, 1B MONTERREY PARKS,<br>COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO,<br>NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790 |
| CAMPECHE            | <b>TORNILLERÍA Y FERRETERÍA AAA</b><br>AV. ÁLVARO OBREGÓN #524, COL. ESPERANZA<br>C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808   | OAXACA          | <b>FIX FERRETERÍAS</b><br>AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300,<br>TUXTEPEC, OAX. TEL.: 287 106 3092  |
| CHIAPAS             | <b>FIX FERRETERÍAS</b><br>AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700,<br>TAPACHULA, CHIS. TEL.: 962 118 4083  | PUEBLA          | <b>SUCURSAL PUEBLA</b><br>AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA,<br>C.P. 72710, CUAUTLACINGO, PUE.<br>TEL.: 222 282 8282 / 84 / 85 / 86                                 |
| CHIHUAHUA           | <b>SUCURSAL CHIHUAHUA</b><br>AV. SILVESTRE TERRAZAS #128-11, PARQUE INDUSTRIAL<br>BAFAR, CARRETERA MÉXICO CUAUHTEMOC, C.P. 31415,<br>CHIHUAHUA, CHIH. TEL.: 614 434 0052          | QUERÉTARO       | <b>ARU HERRAMIENTAS S.A DE C.V.</b><br>AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE<br>ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO.<br>TEL.: 427 268 4544                      |
| CIUDAD DE MÉXICO    | <b>FIX FERRETERÍAS</b><br>EL MONSTRUO DE CORREGIDORA, CORREGIDORA # 35,<br>COL. CENTRO, C.P. 06060, CUAUHTEMOC, CDMX.<br>TEL.: 55 5522 5031 / 5522 4861                           | QUINTANA ROO    | <b>FIX FERRETERÍAS</b><br>CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL EJIDAL,<br>C.P. 77110 PLAYA DEL CARMEN, Q.R.<br>TEL.: 984 267 3146                                     |
| COAHUILA            | <b>SUCURSAL TORREÓN</b><br>CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL<br>ORIENTE, C.P. 27278, TORREÓN, COAH.<br>TEL.: 871 209 68 23   | SAN LUIS POTOSÍ | <b>FIX FERRETERÍAS</b><br>AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320,<br>SAN LUIS POTOSÍ, SLP. TEL.: 444 822 4341  |
| COLIMA              | <b>BOMBAS Y MOTORES BYMTESA DE MANZANILLO</b><br>BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE<br>SEPTIEMBRE, C.P. 28239, MANZANILLO, COL.<br>TEL.: 314 332 1986 / 332 8013          | SINALOA         | <b>SUCURSAL CULIACÁN</b><br>AV. JESÚS KUMATE #4301, COL. HACIENDA DE LA<br>MORA, C.P. 80143, CULIACÁN, SIN.<br>TEL.: 667 173 9139 / 173 8400                                 |
| DURANGO             | <b>TORNILLOS ÁGUILA, S.A. DE C.V.</b><br>MAZURIÓ #200, COL. LUIS ECHEVERRÍA, DURANGO,<br>DGO.TEL.: 618 817 1946 / 618 818 2844  | SONORA          | <b>FIX FERRETERÍAS</b><br>CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL.<br>CENTRO, C.P. 85000, CD. OBREGÓN, SON.<br>TEL.: 644 413 2392                                    |
| ESTADO DE MÉXICO    | <b>SUCURSAL CENTRO JILOTEPEC</b><br>PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL<br>JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257<br>TEL.: 761 782 9101 EXT. 5/28 Y 5/02         | TABASCO         | <b>SUCURSAL VILLAHERMOSA</b><br>CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL,<br>2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB.<br>TEL.: 993 353 7244                        |
| GUANAJUATO          | <b>CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V.</b><br>AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010,<br>CELAYA, GTO. TEL.: 461 617 7578 / 79 / 80 / 88                          | TAMAULIPAS      | <b>VM ORINGS Y REFACCIONES</b><br>CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL.<br>RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA,<br>TAMS. TEL.: 899 926 7552             |
| GUERRERO            | <b>CENTRO DE SERVICIO ECLIPSE</b><br>CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010,<br>CHILPANCINGO, GRO. TEL.: 747 478 5795  | TLAXCALA        | <b>SERVICIOS Y HERRAMIENTAS INDUSTRIALES</b><br>PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ,<br>C.P. 90970, SAN PABLO DEL MONTE, TLAX.<br>TEL.: 222 271 7502              |
| HIDALGO             | <b>FERREPRECIOS S.A. DE C.V.</b><br>LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE<br>ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO,<br>HGO. TEL.: 775 753 6615 / 775 753 6616 | VERACRUZ        | <b>LA CASA DISTRIBUIDORA TRUPER</b><br>BLVD. PRIMAVERA: ESQ. HORTENSIA S/N, COL.<br>PRIMAVERA C.P. 93308, POZA RICA, VER.<br>TEL.: 782 823 8100 / 826 8484                   |
| JALISCO             | <b>SUCURSAL GUADALAJARA</b><br>AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL<br>VALLE, C.P.: 45655, TLAJOMULCO DE ZÚÑIGA, JAL.<br>TEL.: 33 3606 5285 AL 90                       | YUCATÁN         | <b>SUCURSAL MÉRIDA</b><br>CALLE 33 #600 Y 602, LOCALIDAD ITZINCAZ Y MULSAY,<br>MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC.<br>TEL.: 999 912 2451                                    |
| MICHOACÁN           | <b>FIX FERRETERÍAS</b><br>AV. PASEO DE LA REPÚBLICA #3140-A, COL.<br>EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA,<br>MICH. TEL.: 443 334 6858                                   |                 |  |

| Code   | Model   | Brand          |
|--------|---------|----------------|
| 103190 | ASD-150 | <b>TRUPER®</b> |

**Warranty.** Duration: 1 year. Coverage: parts, components, and labor against manufacturing or operational defects, except when used under conditions other than normal, not operated according to the instructions, altered, or repaired by unauthorized personnel not authorized by TRUPER. To enforce the warranty, present the product, sealed policy, invoice, or receipt, at the establishment where you purchased it or at Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables, and accessories. It includes transportation expenses for the product resulting from its service network compliance. Tel. **800-018-7873**. Made in/Hecho en China. Importer **TRUPER, S.A. de C.V.** Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Tel. 761 782 9100.



Stamp of the business. Delivery date:

Sellos del establecimiento comercial. Fecha de entrega:



**Garanías** Duración: 1 año. Gobernatura: plazas, comisiones y mandos de obra contra defectos de fabricación o fundición; amianto, excepto si se usa en condiciones distintas a las normales; cuandos no tene operado dentro de su red de servicios. Tel. 800-018-7873. Made in China. Importador TRUPER, S.A. de C.V. Parque industrial 1, Parque Industrial Jiutepec, Jiutepec, Edo. de Mex. C.P. 54257, Tel. 761 782 9100.

**Codigos** **Modelo** **Marcas** **ASD-150** **TRUPER®** **103190**

**garantía**  
**Poliza de**





Notas



TRUPER®

## Solución de problemas

Prodígemea Causas Solucion

Published by Ginn and Company  
Copyright, 1912, by Houghton Mifflin Company

Solución de problemas

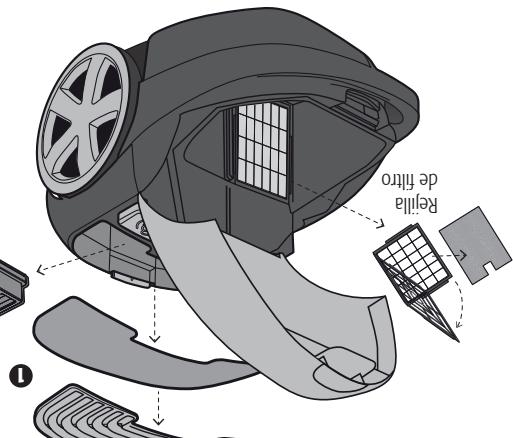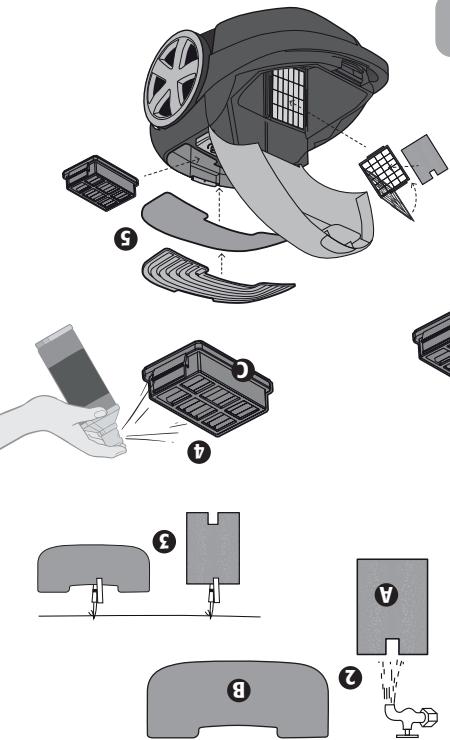

**¡ADVERTENCIA!** Nunca utilice la máquina sin filtros.

condiciones de fondo o la situación dinámica que consideran más apropiadas para la vida útil de los activos y

**A TENCIÓN** Cuando los filtros están claramente desequilibrados entre sí, se produce una tensión que se manifiesta en la forma de la silueta.

• S'assieddà en un lloc que no es pugui trencar i fer-se mal. • Es possible, utilitzar aire comprimito para limpiarlo.

Instalaciones de nuevo.

suave y enjuáguelos con agua limpia.

2. Lave los filtros **A** y **B** con una solución de agua con jabón levantelos y retírelos con cuidado.

**1.** Abra la cubierta donde se encuentra cada filtro, luego

**ADVERTENCIÁ** El proceso de limpieza de los filtros debe hacerse al aire libre, nunca dentro de áreas habitadas.

**A ATENCIÓN** Antes de limpiar cada filtro, dele peduleños golpes con cuidado para retirar los residuos más gruesos.

## Mantenimiento

**TRUPER®**

reemplazaré los dos carbonos.

- Los cambios deben revisarse periódicamente, y ser TRUPER cuando se hace una desgasificación.
  - Los cambios de aceite revisarse periódicamente, y ser TURPER si el aceite no cumple con los criterios establecidos en la especificación.
  - Despues de que hayan sido empalmados, debe inspeccionarse los nuevos cambios para empalmados, pida que se hagan en el porto-cabina y solicite que se encienda la herramienta durante 5 minutos para empalmarlo completamente en el porto-cabina y se le devuelvan.
  - Solo se debe usar cambios de repuesto originales.
  - Solo se debe usar cambios de repuesto originales.
  - Siempre que se requiere el cambio de cambios, debe tener en cuenta las siguientes consideraciones:

## Cambio de carbones

autrizadas, o no dar un mantenimiento adecuado.

- E. servirà de les hermanamets d'ebre ser realitzado únicament en el seu Centre de Servei Autoritzat.
  - TURPEL. El servei es realitzarà per personal qualificat que ensorllerà els documents originals. Es us de píxels solo platzas de l'originals. Es us de utilien A. del producte, soltze que es asperjada a una aspiradora.

SERVICIO

- Para limpiar los filtros, consulte las imágenes de la sección **rasgaduras o agujeros, reemplazos de inmediato.**



#### Cuidado de los filtros


- Puedes manipular el aspecto de la aspiradora, exterior con un paño húmedo y jabón suave.

- Kere la mangueira desfusões de cada uso.
  - Manutenção sempre libras Y limpia las desfusões de cada uso.
  - Mantenha sempre limpa las desfusões de cada uso.
  - Verifique se a manutenção é realizada de forma correta.

Limpieza

Estas aspiraciones están presentes en la cultura americana pero no  
doméstica y no con objetivos comerciales. El fabricante no  
asume la responsabilidad por ningún daño que pudiera  
ocurrir debido al uso independiente o mal manejo indecido.

# Mantenimiento

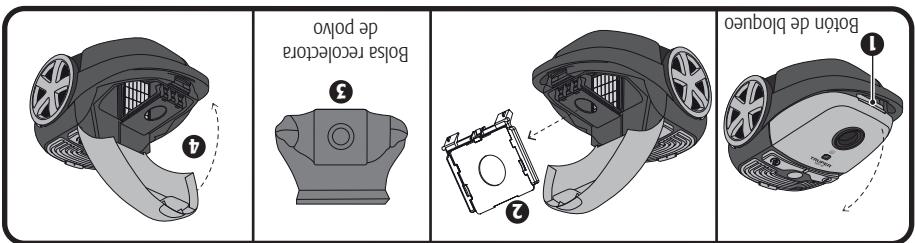

**Reemplazo de bolsa recolectora de polvo**

frontal adecuadamente.

1. Reseñar el motivo de biquíño y señalar la cubierta frontal.
  2. Retirar la bolsa reproductora y removerla el clip para vaciar el contenido de la bolsa. Sacudirla de ser necesario. Lave la bolsa a mano con agua fría y dejar secar por 24 horas. Asegúrese de que la bolsa esté completamente seca antes de colocarla en la aspiradora.
  3. Coloque el clip nuevamente en la bolsa antes de colocarla de nuevo en la aspiradora. Verifique que el clip seile completamente la abertura de la bolsa.
  4. Reseñar el biquíño para abrir la cubierta frontal y coloque la bolsa en la posición correspondiente. Cierre la cubierta completamente la abertura de la bolsa.

- Cuando note que el nivel de succión ha disminuido, también deberá revisar la bolsa.
- Verifique si necesita deposito interno (pagina 7).

- Su aspiradora conecta con una bolsa recicleta de polvo lavable, que debiera vaciar y/o lavar cuando este llena.


**Reemplazo de bolsa recolectora de polvo**

# Puesta en marcha

TRUPEER®


- La aspiradora debe guardarse en lugares cerrados.
- Fijación en el agujero del cuello.
- Para almacenar en posición vertical, coloque el soporte de pisos/almohadas en la ranura posterior o inferior de la aspiradora.
- Para almacear la aspiradora, coloque el accesorio combinado.
- La aspiradora cuenta con almohadilla de accesorios.
- Para transportar la aspiradora, puede levantarla por el asa.

## Transporte y almacenamiento

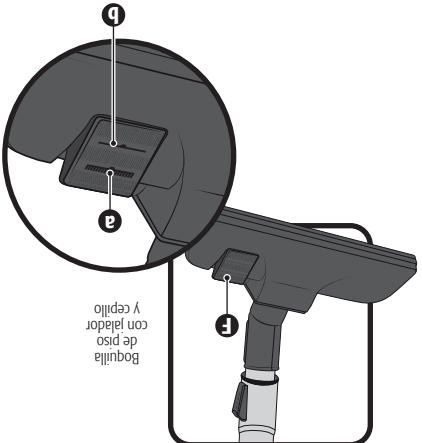


- Use la almohadilla cepillo para sofás, literas, cortinas y muebles.
- Con la almohadilla para ranuras podrá limpiar rápidamente la superficie de suelo; esto se recomienda rápidamente la potencia de succión (E) para reducir el desgaste de los accesorios.
- Utilice el regulador de succión (F) para regular el flujo.
- Utilice el cepillo para aspirar pisos.
- Alto de la base de la aspiradora (F) sea la correcta para utilizar la almohadilla cepillo para aspirar limpias.
- Alto de la aspiradora (F) sea la correcta para mantener las accesorios siempre limpios.
- Con el objetivo de conseguir mayor eficacia en la limpieza, mantenga los accesorios siempre limpios.

## Accesorios

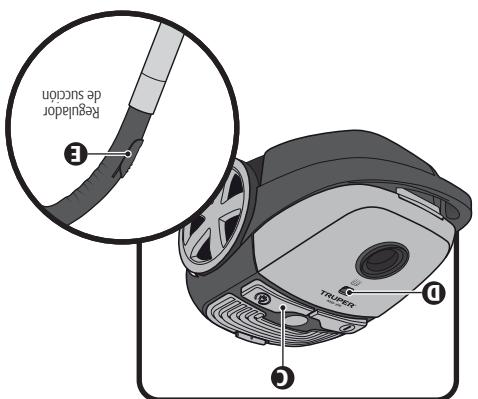

- Se recomienda hacer cambio de bolsa cada 6 meses aproximadamente.
- Si la base recocedora de polvo está llena, retire y limpie o reemplace una nueva (figura 8).
- Si la bolsa recocedora de polvo está llena, retire y limpie o reemplace una nueva (figura 8).
- Si la boya roja del indicador de depósito lleno (D) se ilumina en el mango (E); deslicélo hacia arriba o hacia abajo.
- Puede ajustar el flujo de aire con el regulador de succión fijo.
- Asegúrese de que la bolsa recocedora de polvo y los filtros del motor estén colocados correctamente.
- Asegúrese de que la base recocedora de polvo y los filtros del motor estén colocados correctamente.




## Uso de la aspiradora

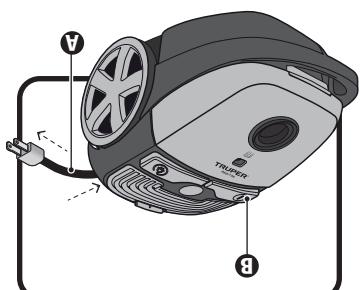

- Asegúrese de que la base recocedora de polvo y los filtros del motor estén colocados correctamente.
- Al terminar la limpieza, desconecte la clavija de la toma de corriente eléctrica y presione levemente el botón de reposamiento del cable tomacorriente (C).
- Siempre verifique que el interruptor de la aspiradora (B) esté en la posición de encendido/apagado para prender la aspiradora.
- Presione el botón de encendido/apagado para prender la aspiradora (B).
- Para sacar el cable, jalelo a la longitud deseada (A).

## Encendido y apagado


# Puesta en marcha

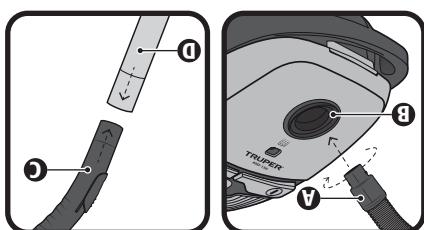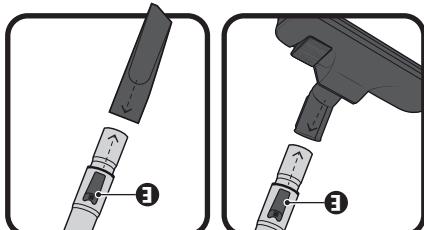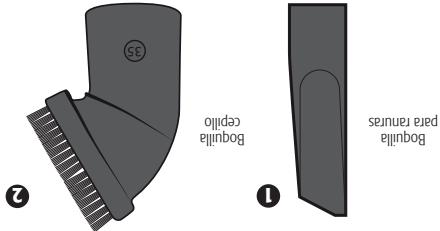

**A. ATENCIÓN** Presione el engranaje (E) y tire del tubo telescópico para extenderlo.

- Seleccione el accesorio de acurro con el tipo de aspirado telescópico (D).
- Inserte el mango (C) en el extremo más ancho del tubo para fijar la manijuela a la manguera.
- Inserte el conector de la manguera en sentido de las manecillas del reloj para conectar la manguera a la manijuela.
- Inserte el conector de la manguera (A) en el Puerto de aspirado (B). Asegúrese de alinear correctamente los conectores de la manguera y el puerto de aspirado.

## Ensamble

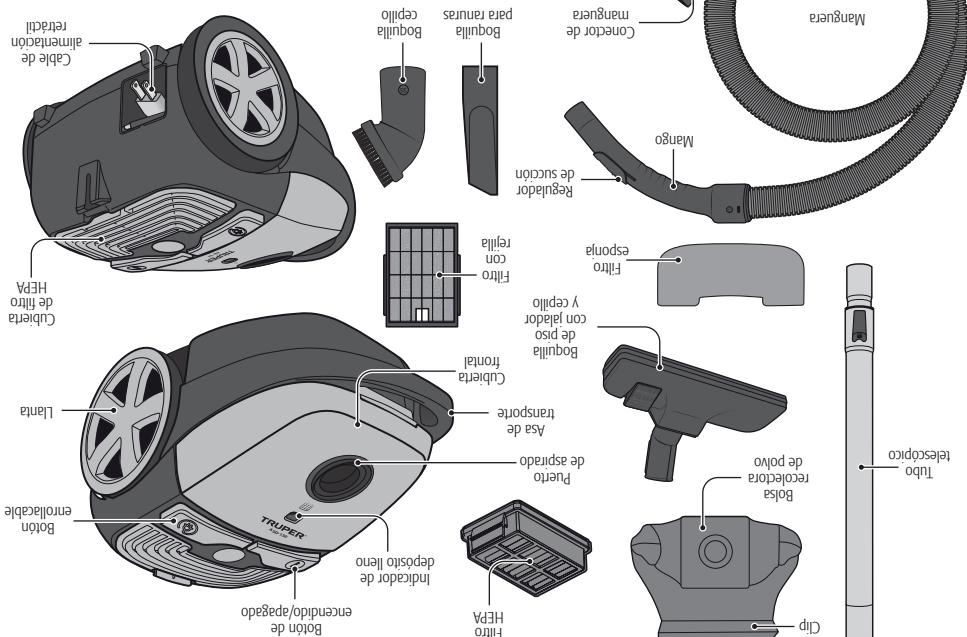

## Partes

**TRUPER®**





especiales para el uso en exteriores y reducen el riesgo de sufrir una descarga eléctrica.



\* Se permiten utilizar sellos tipo "caja" para indicar que las excepciones más graves tienen que ser tratadas de prioridad con una solución inmediata.

dudas use el siguiente calibre mas alto.

**ADVERTENCIA:** Al usar un cable de extensión, asegúrese de que el cable sea suficiente para transportar la corriente que consumirá su herramienta. Un cable de un calibre inferior o ocasionalmente cables de tensión en la línea, tienen como resultado la pérdida de potencia y sobrealimentamiento del motor. La siguiente tabla muestra el tamaño correcto que debe usarse.



Cuando el conductor arranca la camioneta y solo prende el encendedor de una forma, si el display no muestra el resultado de la operación, es porque el sistema de control de la camioneta no ha recibido la señal de encendido.

**ADVERTENCIA** Las herramientas de aislamiento reforzado están equipadas con una pala es más sencilla que la otra). Esta calva café en

# Redes de suministro eléctricos

**ADVERTENCIA** Antes de obtener acceso a los terminalés, todos los circuitos de alimentación deberán ser desconectados.



**ADVERTENCIAS** Si el cable de alimentación se daña, este debe ser reemplazado por el fabricante o Centro de Servicio Autorizado TRUPER, con el fin de evitar algún riesgo de descarga o accidente considerable.


E cable de alimentación tiene sujetacables tipo: Y  
La clase de construcción de la herramienta es: Alislamiento reforzado.  
La clase de aislamiento térmico de los devanados del motor: Clase B

|                     |                    |                     |                     |
|---------------------|--------------------|---------------------|---------------------|
| Código              | 103190             | Descripción         | Aspiradora Canister |
| Tensión             | 127 V~             | Tensión             | Frecuencia          |
| Frecuencia          | 60 Hz              | Corriente           | Potencia nominal    |
| Corriente           | 10 A               | Capacidad           | 1200 W (1.6 Hp)     |
| Potencia nominal    | 1.200 W (1.6 Hp)   | Presión de aspirado | 17.2 kPa (2.5 Psi)  |
| Capacidad           | 1.8 L (0.4 gal)    | Conductores         | 18 AWG x 2C         |
| Presión de aspirado | 17.2 kPa (2.5 Psi) | Alislamiento        | Clase II            |

ASD-150

**TRUPER®**

## **Especificaciones técnicas**

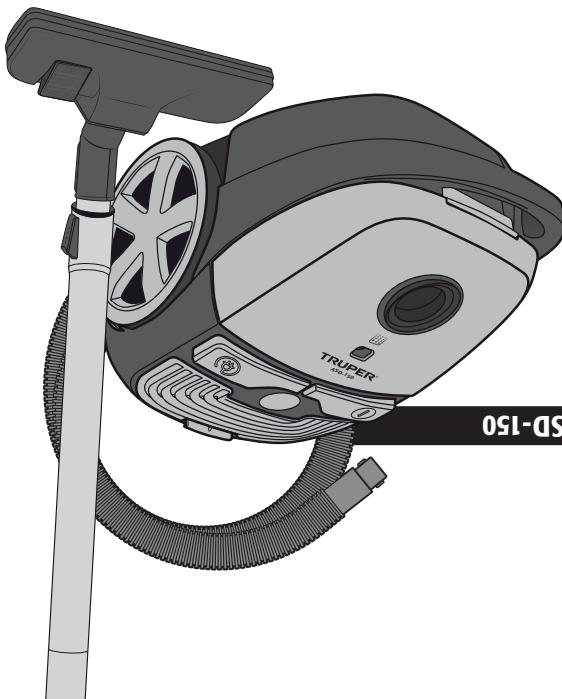

ASD-150

**Para poder sacar el máximo provecho de la herramienta, alargar su vida útil, hacer válida la garantía en caso de ser necesario y evitar riesgos o lesiones graves, es fundamental leer este instructivo por completo antes de usar la herramienta.**

Guarde este instructivo para futuras referencias. Los gráficos de este instructivo son para referencia, pueden variar del aspecto real de la referencia.

|    |  |
|----|--|
| 12 | Póliza de garantía   |
| 11 | Centros de servicio autorizados                                  |
| 10 | Notas  |
| 9  | Solución de problemas  |
| 8  | Mantenimiento.   |
| 7  | Pluesta en marcha  |
| 6  | Ensamble   |
| 6  | Partes.  |
| 5  | Advertencias de seguridad para uso de aspiradoras.               |
| 4  | Advertencias generales de seguridad para herramientas eléctricas |
| 3  | Requerimientos técnicos  |
| 3  | Especificaciones técnicas  |

**ATTENCIÓN**

**Indice**

**TRUPER®**




Léa este instructivo por completo antes de usar la herramienta.

ATENCIÓN



# ASD-150

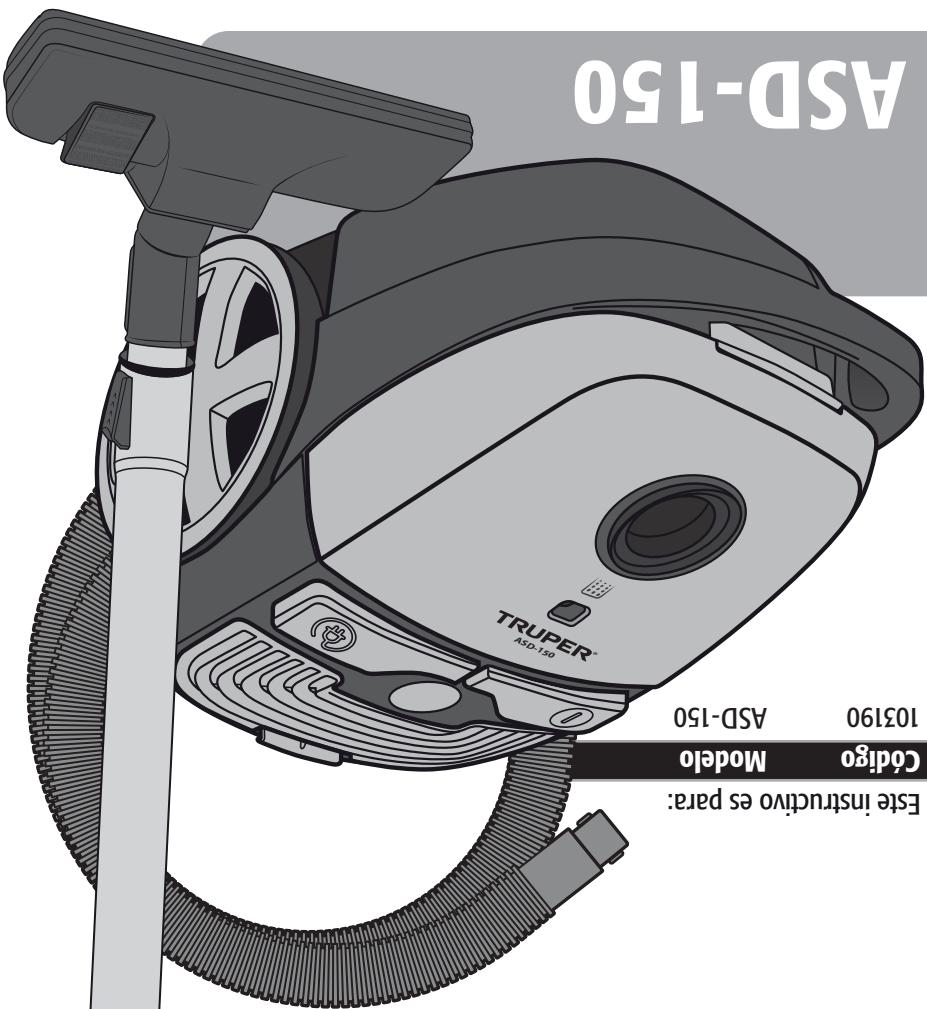

**1.8 L**  
0.4 gal  
Capacidad

100

# Aspiradora Canister

Instructivo de

**TRUPER®**

ESPAÑOL