

Manual


## Slide compound miter saw

2½ Hp

Applies for:

**Code**      **Model**

103236      SINCO-10-3

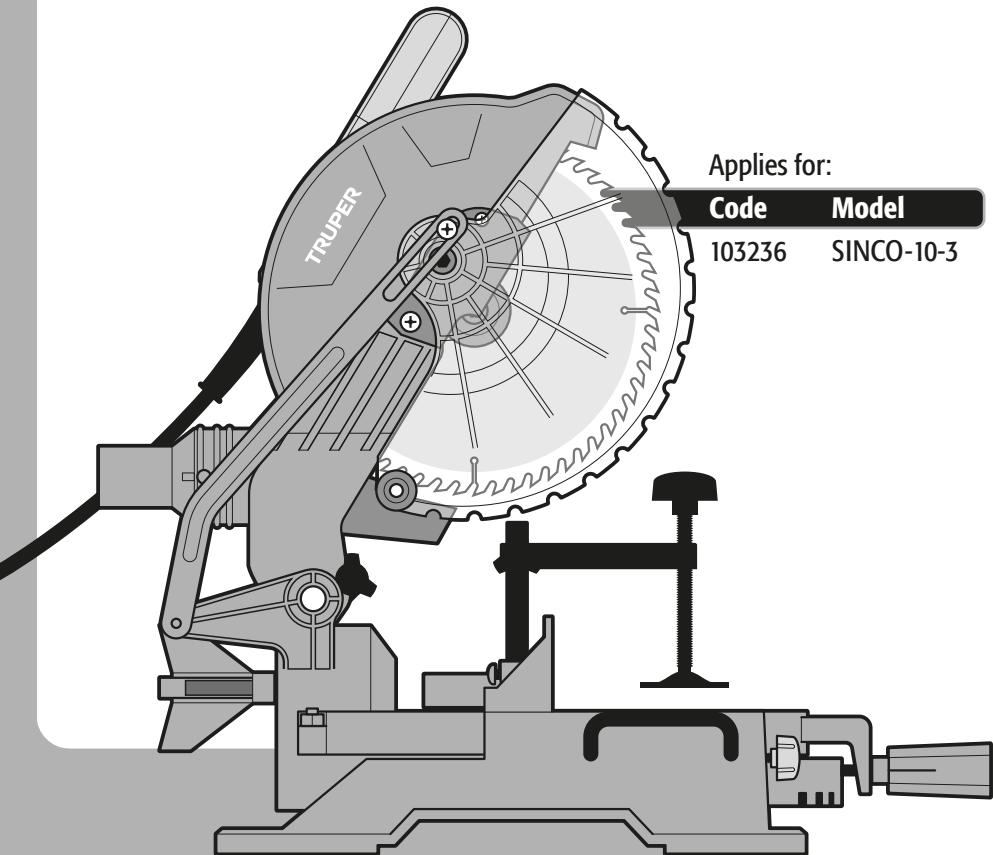

# SINCO-10-3



Read this manual thoroughly  
before using the tool.




Technical data.....	3
Power requirements.....	3
 General power tool safety warnings.....	4
 Safety warnings for the use of a compound miter saw.....	5
Parts.....	6
Unpacking and assembly.....	7
Assembly.....	8
Adjustments .....	10
Operation .....	12
Troubleshooting.....	13
Maintenance.....	13
Notes.....	14
Authorized service centers.....	15
Warranty policy.....	16

## CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

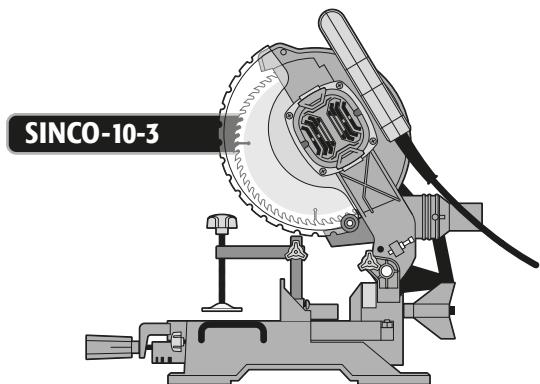

## SINCO-10-3

<b>Code</b>	•	103236
<b>Description</b>	Slide compound miter saw	
<b>Discs</b>	•	10" for wood   10" for aluminum
<b>Saw blade arbor</b>	5/8"	
<b>Voltage</b>	• 127 V~	<b>Frequency</b> • 60 Hz
<b>Current</b>	•	15 A
<b>Power</b>	•	2 1/2 Hp
<b>Speed</b>	•	5 000 RPM
<b>Duty cycle</b>	•	50 minutes work x 20 minutes rest. Daily maximum 6 hours.
<b>Conductors</b>	•	14 AWG x 3C with insulation temperature of 221°F
<b>Insulation</b>	•	Class I
<b>Table angles</b>	•	From - 45° to + 45°
<b>Head angles</b>	•	From 0° to 45°

The power cord has a Y-type cable restraint.

The construction class of the tool is: Supplementary.

The thermal insulation class of the motor windings: Class F.

**WARNING** Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a **TRUPER®** Authorized Service Center. The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use. Do not expose to rain, liquids and/or dampness.




**WARNING** Before gaining access to the terminals all power sources should be disconnected.

## Power requirements

**WARNING** To prevent electric shock, the tool shall be grounded while in use. • Connect the plug into a correctly grounded outlet as shown in example A. Not all the outlets are properly grounded. If in doubt, verify with a qualified electrician. • If the outlet where you will connect the tool has two poles (2 orifices). **UNDER ANY CIRCUMSTANCE, DO NOT REMOVE OR ALTER THE PLUG'S GROUND CONNECTOR.** Use a temporary adaptor as shown in example B and always connect the ground conductor lug as shown.

**CAUTION** When using an extension cord, make sure to use the appropriate gauge to carry the current your tool will consume. A lower gauge cord will cause voltage drops in the line, resulting in power loss and motor overheating. The following table shows the correct size to be used depending on the cable length and amperage capacity indicated on the tool's data plate. If in doubt, use the next higher gauge.

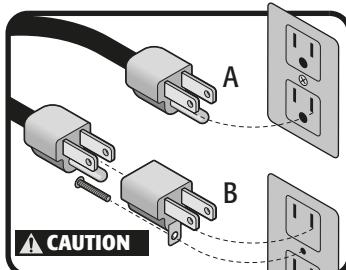

Ampere Capacity	Number of Conductors	Extension Gauge From 6 ft to 49 ft	Extension Gauge Higher than 49 ft
From 0 A and up to 10 A		18 AWG	16 AWG
From 10 A and up to 13 A		16 AWG	14 AWG
From 13 A and up to 15 A	3 (one grounded)	14 AWG	12 AWG
From 15 A and up to 20 A		8 AWG	6 AWG

\* It is allowed to use it if the extensions themselves have an overcurrent protection device.

AWG = American Wire Gauge. Reference: NMX-J-195-ANCE

**WARNING** When using power tools outdoors use a **VOLTECK**. grounded extension cable labeled "Outdoors Use". These extension cables are specially manufactured for outdoors use and reduce the risk of electric shock.



**⚠️ WARNING! Read carefully all safety warnings and instructions listed below.** Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. **Save all warnings and instructions for future references.**

## Work area

**Keep your work area clean, and well lit.**

Cluttered and dark areas may cause accidents.



**Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**

Sparks generated by power tools may ignite the flammable material.



**Keep children and bystanders at a safe distance while operating the tool.**

Distractions may cause loss of control.



## Electrical Safety

**The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.**

Modified plugs and different power outlets increase the risk of electric shock.



**Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.**

The risk of electric shock increases if your body is grounded.

**Do not expose the tool to rain or wet conditions.**

Water entering into the tool increases the risk of electric shock.

**Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.**

Damaged or entangled cords increase the risk of electric shock.

**When operating a tool outdoors, use an extension cord suitable for outdoor use.**

Using an adequate outdoor extension cord reduces the risk of electric shock.

**If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.**

Using a GFCI reduces the risk of electric shock.

## Personal safety

**Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.**

A moment of distraction while operating the tool may result in personal injury.

**Use personal protective equipment. Always wear eye protection.**

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.



**Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.**

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

**Remove any wrench or vice before turning the power tool on.**

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.



**Do not overreach. Keep proper footing and balance at all times.**

This enables a better control on the tool during unexpected situations.



**Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.**

Loose clothes, jewelry or long hair may get caught in moving parts.

**If you have dust extraction and collection devices connected onto the tool, inspect their connections and use them correctly.**

Using these devices reduce dust-related risks.

## Power Tools Use and Care

**Do not force the tool. Use the adequate tool for your application.**



The correct tool delivers a better and safer job at the rate for which it was designed.

**Do not use the tool if the switch is not working properly.**

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

**Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.**

These measures reduce the risk of accidentally starting the tool.



**Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.**

Power tools are dangerous in the hands of untrained users.

**Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.**



Most accidents are caused due to poor maintenance to the tools.

**Keep the cutting accessories sharp and clean.**

Cutting accessories in good working conditions are less likely to bind and are easier to control.

**Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.**

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

## Service

**Repair the tool in a TRUPER® Authorized Service Center using only identical spare parts.**

This will ensure that the safety of the power tool is maintained.



This tool is in compliance with  
the Official Mexican Standard  
(NOM - Norma Oficial Mexicana).

# Safety warnings

for the use of a compound miter saw

**TRUPER®**

## General

- Do not use the saw for cutting metal, masonry, or concrete.
- Do not use worn, damaged, or dull blades.
- Do not use high-speed steel blades.
- NEVER use blades larger than indicated for the tool.
- Use gloves when handling blades.
- This tool is not intended for use by individuals (including children) whose physical, sensory, or mental capabilities are different, reduced, or lack experience or knowledge unless they are supervised or trained for the operation of the tool by a person responsible for their safety.
- Children should be supervised to ensure that they do not use the tools as toys.

## Before operating the saw

- ⚠ CAUTION** • Secure the workpiece properly to avoid body contact with the cutting disc, prevent bending, or losing control of the tool or workpiece.
- Before each use, check that the guard functions correctly. If the guard does not move freely or does not close instantly, service it before operating the tool.
  - Secure the saw on a perfectly level surface with sufficient space to handle and support the workpiece properly.
  - When cutting workpieces with circular shapes, use bench clamps to secure them and prevent them from rotating in any direction.
  - Before making any cuts, ensure that the cutting head column and the rotary table are in the desired position and locked.
  - Inspect the workpiece and ensure that it does not have any nails or screws.
  - Make sure the disc is properly installed.

## While operating the saw

- ⚠ WARNING** • Keep hands and any other body parts away from the cutting area and the cutting disc. When operating the tool, firmly hold the cutting head by the handle to prevent accidental injuries and loss of control.
- ⚠ DANGER** • Accidental contact with a rotating cutting disc can cause severe personal injuries.
- Feed the material in the opposite direction of the disc's rotation.
  - Do not attempt to remove waste material when the cutting disc is rotating.
  - Remember that guards do not protect you from the moving disc below the workpiece, so never reach under it with the tool running.

**⚠ WARNING** • ALWAYS keep the power cable away from the cutting area. The power cable MUST NEVER hang over the workpiece when making the cut.

- Make sure that the disc comes to a complete stop before changing it, securing a workpiece, or adjusting the cutting angle.
- Before installing a new disc, make sure it is free from dents or damage. If it is damaged, replace it immediately.
- When using the saw, always stand to the side of the disc, never in front of it.

**⚠ CAUTION** • Never manually remove accumulated sawdust or chips from the disc; use a brush.

**⚠ CAUTION** • Do not attempt to free a stuck disc without first turning off and disconnecting the tool.

**⚠ CAUTION** • Do not try to stop the disc with a piece of wood or the shaft lock. Allow it to stop freely after turning off the saw.

**⚠ CAUTION** • Hold it by insulated parts. If you accidentally cut any electrical cable, the metal parts could conduct a shock to the operator. In such a case, turn off and disconnect the saw immediately.


## After operating the saw

- Periodically check that all nuts and bolts are properly tightened.

## Laser Light

The tool features a built-in laser light as a cutting guide. This laser is Class II with a maximum power of 1 mW and a wavelength of 650 nm. Normally, it does not pose an optical risk; however, looking directly at it can cause momentary blindness.

- Avoid direct exposure to the eyes.
- Do not aim the laser light at any person or object other than the workpiece.
- Do not use the laser guide when cutting materials that reflect light, as it could reflect onto the operator.
- For more information regarding laser beams, refer to ANSI standard Z136.1 - STANDARD FOR SAFE USE OF LASER, available from the Laser Institute of America (407) 380-1553.

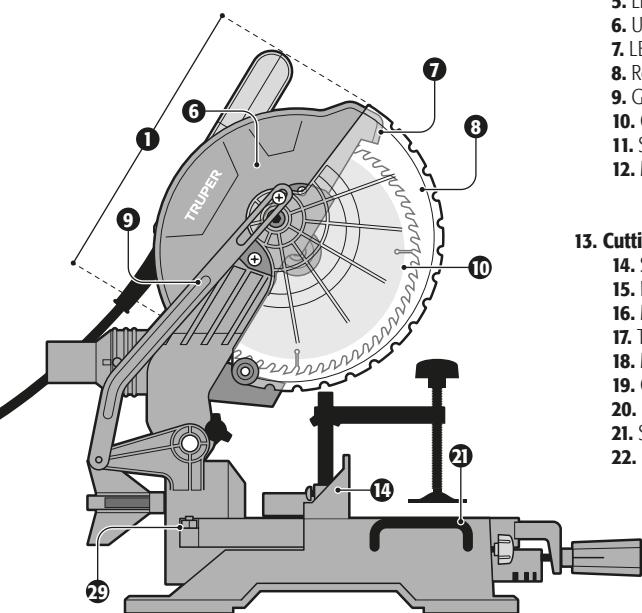**1. Cutting head.**


2. Handle.
3. Trigger switch.
4. Trigger lock.
5. Light switch.
6. Upper blade guard.
7. LED light.
8. Retractable guard.
9. Guard retractor arm.
10. Cutting disc.
11. Shaft lock.
12. Motor.


**13. Cutting table.**

14. Support fence.
15. Rotary table for miter cuts.
16. Miter scale.
17. Table control knob.
18. Miter quick lock.
19. Clamp.
20. Holes for installing the clamp.
21. Side extension arms.
22. Extension arm locks.

**23. Cutting head column.**

24. Cutting head release knob.
25. Cutting head stop.
26. Bevel cut knob.
27. Bevel cut scale.
28. Screw stop for 0° bevel cuts.
29. Screw stop for adjusting 45° bevel.
30. Dust collection duct.
31. 6 mm Allen key.
32. Power cable.
33. Dust collecting bag.

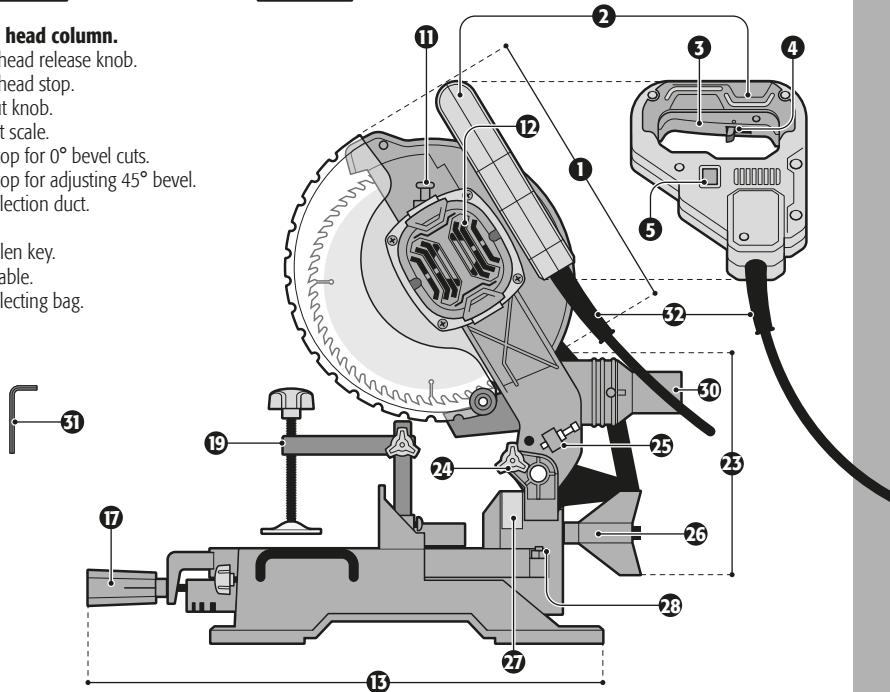

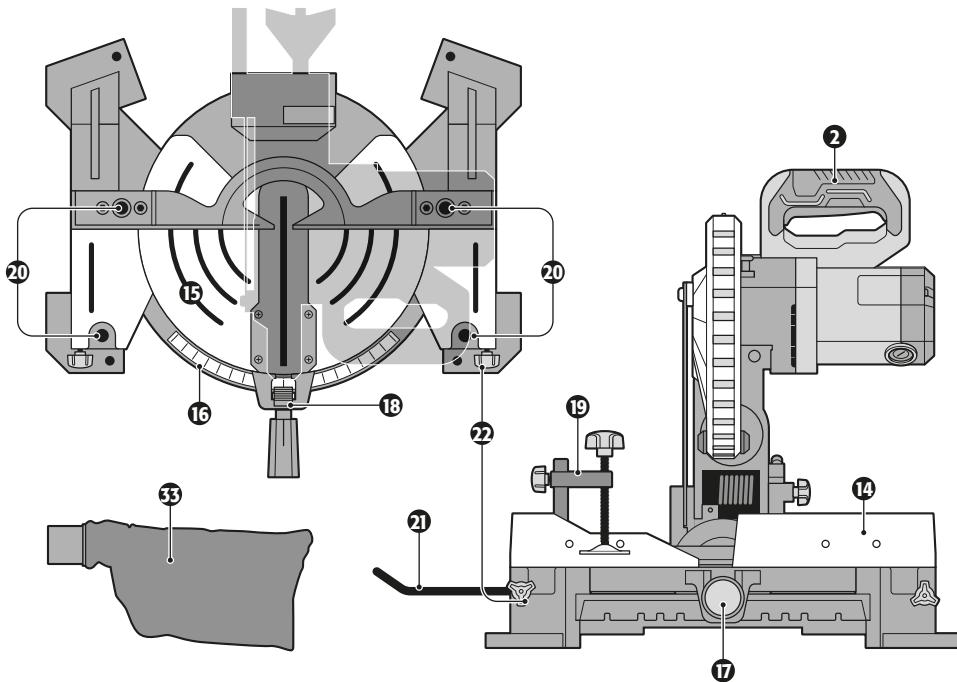

## Unpacking and assembly

Thanks to strict quality controls, it is highly unlikely that your tool will have any defects or missing parts. In the event of such a case, please visit a **TRUPER** Authorized Service Center before using the tool to avoid serious injuries.


- To unpack the tool, first remove all loose parts from the box.
- Remove the packaging material surrounding the tool.
- Lift the saw carefully by holding it through the openings in the base (**A**) and place it on a completely level surface.
- When transporting the saw, always do so with the head down and locked by the release knob (**24**). Lift the cutter only by the openings in the base and/or both extension arms (**21**).
- Seek assistance when lifting the cutter to avoid back injuries.

### Workbench mounting

- The tool's base has holes in each of its four supports for securing it to a workbench.
  - Secure the base to a perfectly level and horizontal workbench using screws (not included).
  - Alternatively, you can attach it to a piece of plywood that is 13 mm (1/2") or more, allowing you to secure the board to the table or move it to other work areas.
- ⚠ WARNING** • If you mount the tool on a curved, inclined, or uneven surface, cuts will be inaccurate, and the adjustment stop system may be damaged.


### Release of the cutting head

- Once the tool is mounted, release the cutting head for use by using the release knob (**24**).
- Press down on the head while pulling out the release knob. Turn it 45° and release it.
- Then lift the head slowly.
- To secure the head again, lower it while pulling out the release knob. Turn it -45° and release it.

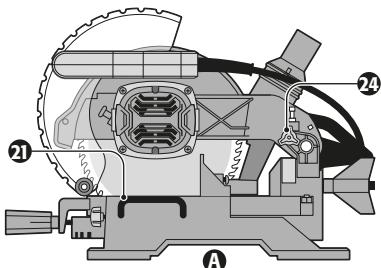


### Side extension arms

- They are useful for supporting workpieces that extend beyond the cutting table area.
- To install them on the workbench, loosen the locks on the extension arms (22).
- Insert the extension arms (21) on both sides of the table and tighten the locks.

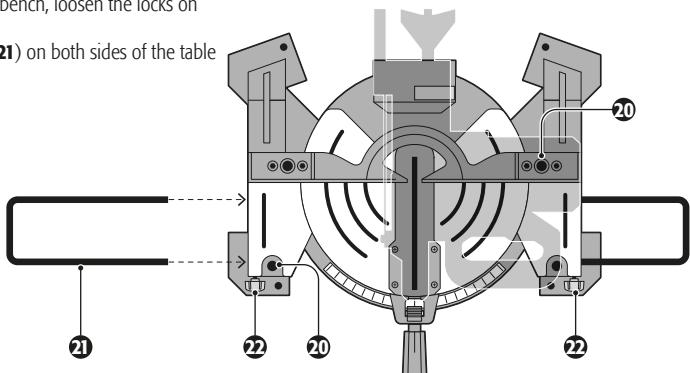


### Clamp

- To secure the workpiece to the cutting table, use the clamp (19).
- Install it in any of the four holes (20) at the ends of the cutting table or on the support fence depending on the work to be done.
- Tighten the screw lock (B) to secure it to the support fence.

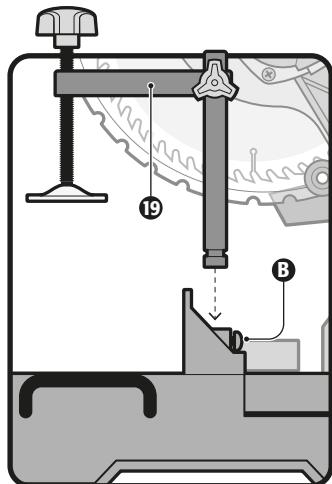




### Dust collection bag

- Install the dust collection bag (33) on the dust collection duct (30) at the back of the cutting head column.

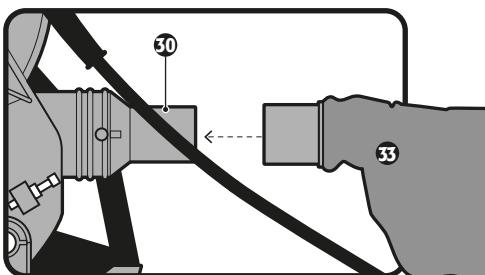


## Changing the cutting disc

- CAUTION** • When changing or installing the cutting disc, use protective gloves to prevent injuries.
- Disconnect the tool from the electrical power.
  - Lift the cutting head.
  - Move the guard retractor arm backward by removing the screw that secures it to the retractable guard with a crosshead screwdriver (**A**).
  - Lift the retractable guard (**B**) to expose the two screws on the inner plate (**a** and **b**).
    - Loosen screw (**a**). Do NOT remove it.
    - Remove screw (**b**).
  - Lift the inner plate along with the retractable guard to expose the screw securing the disc (**C**).
    - Press the shaft lock (**D**) while rotating the disc until the arrow locks.
    - Using the included wrench, remove the screw securing the disc along with the washer (**E**).
    - Remove the cutting disc.
  - Apply a drop of lubricant to the inner and outer washers on the side where they contact the cutting disc.
  - Place the new disc on the arbor, ensuring that the inner washer fits well onto the disc.
  - Reverse the previous steps to secure the disc, return the inner plate, retractable guard, and retractor arm to their original positions before using the tool.
  - Ensure that the guard functions normally before turning on the tool.
  - Turn on the saw for a moment to verify that the disc was properly installed.

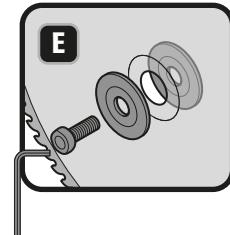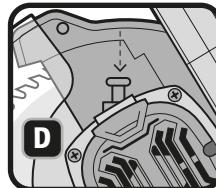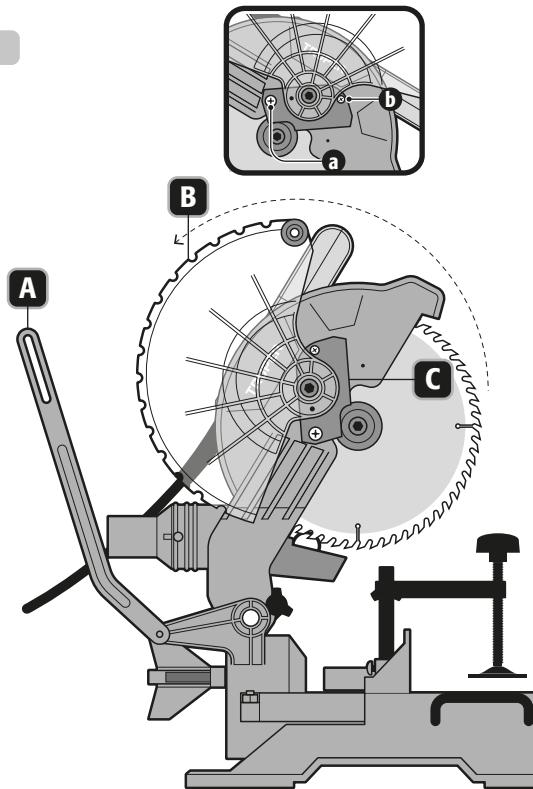




### Adjustment of the rotary table for miter cuts

- To make miter cuts at angles from 45° to -45°, use the rotary table (14).
  - Press the miter lock lever (19) to release the rotary table. While holding the lever, turn the table using the control knob (18).
  - Rotate the table to the desired angle, guided by the miter scale (17). This scale has stops at 0°, ±15°, ±22.5°, ±31.6° and ±45° for quickly setting common miter angles.
  - Release the lock lever to secure the table.
- WARNING** • Ensure that the rotary table is securely locked before starting the cut; otherwise, the table could move and cause a serious injury.

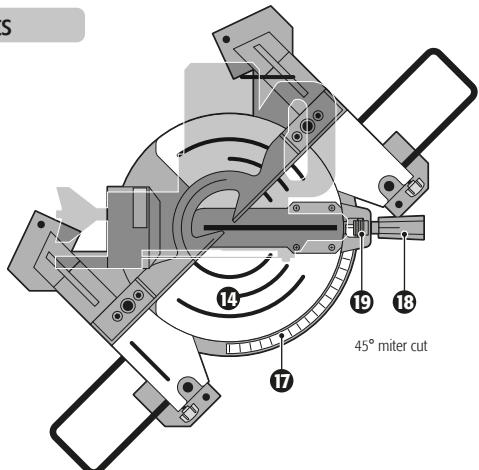

### Adjustment of the head for bevel cuts




- To make bevel cuts from 0° to 45°, adjust the cutting head column to the desired angle.
  - For angles other than 0°, loosen the bevel cut knob (26) and rotate the column to the desired angle, guided by the bevel cut scale (27).
  - Tighten the knob to lock the column.
- WARNING** • Ensure that the lock is tightened to secure the column before starting the cut; otherwise, the head could move and cause a serious injury.

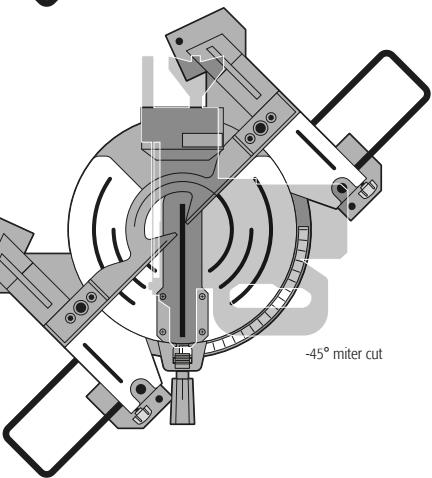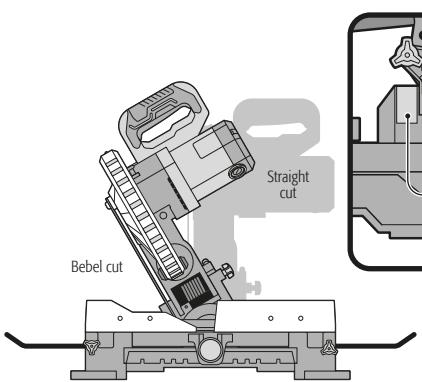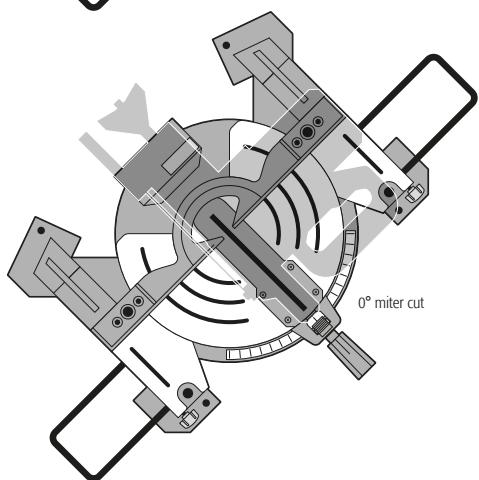

## Adjustment of the angle for bevel cuts


- Disconnect the tool.
- Place the cutting head in the position for bevel cuts at 0°. Ensure that the cutting head stop is in contact with the 0° bevel screw stop (29).
- Adjust the rotary table for miter cuts at 0°.
- Lower and secure the cutting head (refer to page 7).
- Place a square against the table and the flat part of the disc (A). Rotate the disc by hand, protected by gloves, to verify that it makes contact at various points with the square. If the disc is separated at any point from the square, the head is misaligned.
- To align the head, loosen the bottom part of the screw stop and lower the stop (29) so that it does not contact the head stop.
- Move the head until all points on the disc face make contact along the entire edge of the square.
- Keep the head in that position and raise the screw stop (29) until it contacts the head stop.
- Once the head is calibrated, adjust the pointer of the bevel cut scale by loosening the screw (a) with a crosshead screwdriver and placing it correctly at zero on the scale.

**ATENCIÓN** Check the angle adjustment of the cutting head before using the equipment for the first time and after each disc change. Improper angle adjustment can cause damage to the worktable.

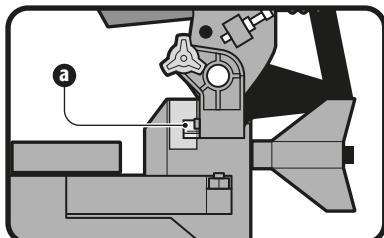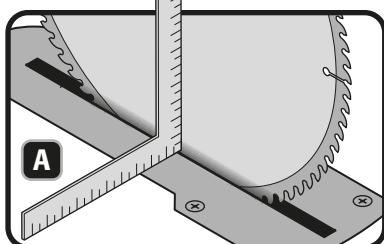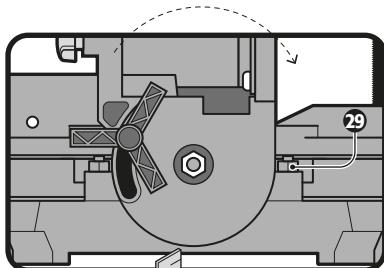

## Adjustment of the cutting guide angle


- Disconnect the tool.
- Lower and secure the cutting head (refer to page 7).
- Adjust the rotary table for miter cuts at 0°. And keep the cutting head column for bevel cuts at 0° (refer to page 10).
- Place a square against the cutting guide and against the face of the disc. The faces of the square should make full contact with the cutting guide (15) and the cutting disc (9).
- If the cutting guide or the disc does not make contact along the entire length of the square, loosen the screws (A) that secure the cutting guide to the table with the Allen wrench.
- Place the square as a reference and adjust the guide until it is perpendicular to the cutting disc.
- Tighten the four screws (A) again to secure the cutting guide in its correct position.

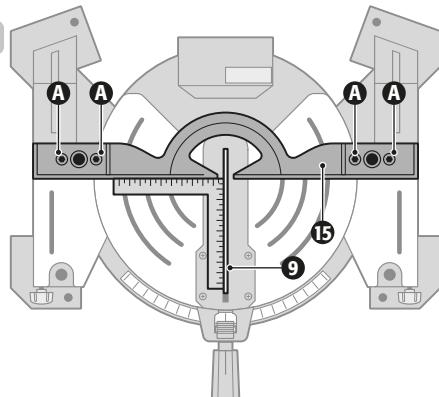

**Start up**

- To start the saw, move the locking lever (**A**) inward on the handle, squeeze and hold the trigger switch (**3**).
- To stop the saw, release the switch; doing so activates the automatic brake to stop the saw within seconds.

**⚠ CAUTION** • To prevent unauthorized use of the tool, the switch has a hole for inserting a padlock to prevent its use.

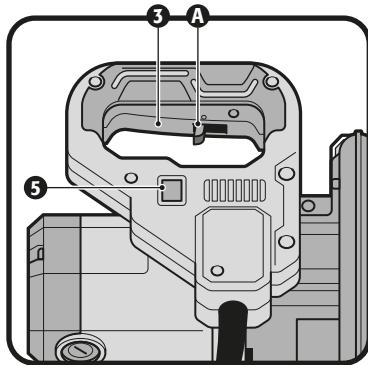**Cutting line light**

- To turn on the cutting guide light, press the button (**5**) on the side of the saw handle.
- To turn it off, press the button again.
- Using the cutting guide light improves cutting accuracy and enhances safety.

**⚠ CAUTION** • In very sunny or brightly lit conditions, visibility of the light beam may be challenging.

**Cutting procedure**

- Decide on the type of cut to be made: bevel, miter, or compound (bevel and miter cut simultaneously).
- Trace the cut line(s) on the workpiece with a pencil.
- Make the corresponding adjustments to the angles of the rotary table and the cutting head column as described on page 10.
- Once both the rotary table and the cutting head column are securely set at the desired angle, proceed to place the workpiece on the cutting table with the cut line(s) clearly visible.
- Ensure that one side of the workpiece is firmly supported by the cutting guide. If the workpiece is curved, place the convex side against the cutting guide; otherwise, if you support the opposite side—the concave side—the workpiece could go out of control.
- Use the side extension arms if the workpiece exceeds the dimensions of the cutting table. If the workpiece still exceeds the dimensions of the extension arms, use a workbench at the same height as the cutting table to support the excess material.
- After correctly positioning the workpiece, use the clamp whenever possible to secure the piece in place. The clamp

can be placed at either end of the cutting guide, depending on the work to be done. If necessary, use extra clamps to hold the piece even more securely.

- Before turning on the saw and with the laser guide turned on, test the cutting path to verify that it aligns with the line previously drawn on the workpiece and is free of obstacles.
- Hold the saw handle firmly and squeeze the switch. Allow the disc to reach its maximum speed (approximately within two seconds) and slowly lower the cutting head so that the disc cuts through the workpiece.
- After completing the cut, release the switch and wait for the cutting disc to come to a complete stop before raising the cutting head.

**Compound cut**

- This type of cut involves both bevel and miter cuts simultaneously and is used for making frames, cutting moldings, boxes with inclined sides, or frames.
- ⚠ CAUTION** • Make practice cuts on scrap material before making the final cut on the workpiece.

## Problem

The miter saw doesn't start.

## Cause

- Cable disconnected from the power supply.
- Electrical issues: blown fuse or tripped circuit breaker.
- Damaged cable.
- The switch is burnt out.
- Defective motor.

The blade doesn't reach its maximum speed.

- The extension cord is too long or of small gauge.
- The saw is excessively hot.

Poor cutting.

- Dull blade.

Misaligned Cut.

- Misaligned blade.

The machine vibrates or produces abnormal noises.

- Loose parts and/or screws.
- The blade vibrates.
- Worn moving parts.

The brushes generate a lot of sparks when the switch is released.

- It is on an unstable surface.
- The automatic brake has been activated.

## Solution

- Connect the power supply cable.
- Replace the fuse or reset the circuit breaker.
- Seek assistance from a **TRUPER** Authorized Service Center to repair the saw.

- Replace the extension cord with one of the correct length and gauge.
- Turn off the tool, let it cool to room temperature, and clean the ventilation slots.

- Replace the blade.

- Check all settings for the angle of the rotating table and the head column (see page 10). Make fine adjustments if necessary (see page 11).

- Ensure that all knobs, screws, nuts, and levers are tightened properly.
- Make sure the blade shaft screw is securely tightened.
- Contact an Authorized **TRUPER** Service Center for repair or replacement.
- Properly assemble the saw base as indicated on page 7.

- Normal situation due to brake activation.

# Maintenance

- CAUTION** • Make sure the tool is disconnected before performing any maintenance.  
• For repair or service, only go to a **TRUPER** Authorized Service Center.  
• To validate the warranty and prevent accidents, the repair or service of the tool can only be carried out by qualified personnel using original **TRUPER** spare parts.

## Lubrication

- Lubricate the moving parts periodically.
- The motor bearings are factory-greased and sealed, so they do not need to be lubricated.

## Brush replacement

- The brushes should be checked regularly and replaced by a **TRUPER** Authorized Service Center when worn out.
- After replacement, have the service center inspect whether the new brushes can move freely in the brush holder and request that they turn on the tool for 5 minutes to match the contact of the brushes and the switch.
- Only use original replacement brushes, specifically designed with the appropriate hardness and electrical resistance for each motor type. Brushes out of specifications can damage the motor.
- When replacing brushes, both brushes must always be replaced.

## General inspection

- Periodically check the tool to ensure that all screws or moving parts are properly tightened, as they may loosen over time.

## Cleaning and care

- Keep the ventilation slots clean and free from any foreign objects. Remove dust or sawdust after each use with compressed air or a brush.
- To clean the tool, use a slightly damp cloth with a mild detergent. Any other cleaning agent may damage the plastic parts of the tool.



# Authorized Service Centers

**TRUPER®**

In the event of any problem contacting a **TRUPER** Authorized Service Center, please see our webpage [www.truper.com](http://www.truper.com) to get an updated list, or call our toll-free numbers **800 690-6990** or **800-018-7873** to get information about the nearest Service Center.

AGUASCALIENTES	<b>DE TODO PARA LA CONSTRUCCIÓN</b> GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0557
BAJA CALIFORNIA	<b>SUCURSAL TIJUANA</b> AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL MOLINO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100
BAJA CALIFORNIA SUR	<b>FIX FERRETERÍAS</b> FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115
CAMPECHE	<b>TORNILLERÍA Y FERRETERÍA AAA</b> AV. ALVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808
CHIAPAS	<b>FIX FERRETERÍAS</b> AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083
CHIHUAHUA	<b>SUCURSAL CHIHUAHUA</b> AV. SILVESTRE TERRAZAS #12-111, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 614 434 0052
MEXICO CITY	<b>FIX FERRETERÍAS</b> EL MONSTRUO DE CORREDOR, CORREDOR # 35, COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX. TEL: 55 5522 5031 / 5522 4861
COAHUILA	<b>SUCURSAL TORREÓN</b> CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL: 871 209 68 23
COLIMA	<b>BOMBAS Y MOTORES BYMTESA DE MANZANILLO</b> BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL: 314 332 1986 / 332 2013
DURANGO	<b>TORNILLOS ÁGUILA, S.A. DE C.V.</b> MAZURIÓ #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO.TEL.: 618 817 1946 / 618 818 2844
ESTADO DE MÉXICO	<b>SUCURSAL CENTRO JILOTEPEC</b> PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL: 761 782 9101 EXT. 5728 / 5102
GUANAJUATO	<b>CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V.</b> AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL: 461 617 7578 / 79 / 80 / 88
GUERRERO	<b>CENTRO DE SERVICIO ECLIPSE</b> CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL: 747 478 5793
HIDALGO	<b>FERREPRESOS S.A. DE C.V.</b> LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616
JALISCO	<b>SUCURSAL GUADALAJARA</b> AV. ADOLFO B. HORN # 6800, COL. SANTA CRUZ DEL VALLE, C.P.: 45655, TLAJOMULCO DE ZUÑIGA, JAL. TEL.: 33 3606 5285 AL 90
MICHOACÁN	<b>FIX FERRETERÍAS</b> AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858

MORELOS	<b>FIX FERRETERÍAS</b> CAPITAN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931
NAYARIT	<b>HERRAMIENTAS DE TEPIC</b> MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540
NUEVO LEÓN	<b>SUCURSAL MONTERREY</b> CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
OAXACA	<b>FIX FERRETERÍAS</b> AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL: 287 106 3092
PUEBLA	<b>SUCURSAL PUEBLA</b> AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLACINGO, PUE. TEL: 222 282 8282 / 84 / 85 / 86
QUERÉTARO	<b>ARU HERRAMIENTAS S.A. DE C.V.</b> AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544
QUINTANA ROO	<b>FIX FERRETERÍAS</b> CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL.: 984 267 3140
SAN LUIS POTOSÍ	<b>FIX FERRETERÍAS</b> AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL: 444 822 4341
SINALOA	<b>SUCURSAL CULIACÁN</b> AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
SONORA	<b>FIX FERRETERÍAS</b> CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL: 644 413 2392
TABASCO	<b>SUCURSAL VILLAHERMOSA</b> CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 353 7244
TAMAULIPAS	<b>VM ORINGS Y REFACCIONES</b> CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
TLAXCALA	<b>SERVICIOS Y HERRAMIENTAS INDUSTRIALES</b> PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
VERACRUZ	<b>LA CASA DISTRIBUIDORA TRUPER</b> BLVD. PRIMAVERA ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
YUCATÁN	<b>SUCURSAL MÉRIDA</b> CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451

Code	Model	Brand
103236	SINCO-10-3	<b>TRUPER®</b>

Warranty. Duration: 1 year. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by TRUPER®. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. Phone number 800-018-7873. Made in China. Imported by TRUPER, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.



Stamp of the business. Delivery date:

Sello del establecimiento comercial. Fecho de entregas:



Parque Industrial Jilotepic, Jilotepic, Edo. de Mex. C.P. 54257, Tel. 761 782 9100.  
red de servicio. Tel. 800-018-7873. Made in/Hecto en China. Impresión digital TRUPER, S.A. de C.V. Parque Industrial de su  
consumidores y asocios. Incluye los gastos de transportación del producto que devien de su cumplimiento de su  
en Coregida 35, Centro, Cuauhtémoc, CDMX, 06060, donde también podra adquirir partes, componentes,  
presente el producto, poliza sellada o factura o recibo o comprobante, en el establecimiento donde lo compró o  
instrumento; fue preparado por personal no autorizado por TRUPER®. Para hacer efectiva la garantía  
funcionamiento, excepto si se usó en condiciones distintas a las normales; cuando no fue operado conforme  
Garantía. Duración: 1 año. Cobertura: piezas, componentes y mano de obra contra defectos de fabricación o  
inutilización; fue preparado por personal no autorizado por TRUPER®. Para hacer efectiva la garantía  
en Coregida 35, Centro, Cuauhtémoc, CDMX, 06060, donde también podra adquirir partes, componentes,  
presente el producto, poliza sellada o factura o recibo o comprobante, en el establecimiento donde lo compró o  
instrumento; fue preparado por personal no autorizado por TRUPER®. Para hacer efectiva la garantía  
funcionamiento, excepto si se usó en condiciones distintas a las normales; cuando no fue operado conforme  
Garantía. Duración: 1 año. Cobertura: piezas, componentes y mano de obra contra defectos de fabricación o

103236  
Código  
Modelo

SINCO-10-3  
Marca

TRUPER®

garantía  
Poliza de

**TRUPER®**

<p><b>TRUPER</b>  Consulte en el sitio web <a href="http://www.truper.com">www.truper.com</a> donde obtendrá un listado actualizado, o llame al: 800 690 6990 u 800-018-7873 donde le informarán cuál es el Centro de Servicio más cercano.</p> <p>En caso de tener algún problema para contactar un Centro de Servicio Autorizado TRUPER consulte nuestra página <a href="http://www.truper.com">www.truper.com</a> donde obtendrá un listado actualizado, o llame al: 800 690 6990 u 800-018-7873 donde le informará cuál es el Centro de Servicio más cercano.</p>	<p><b>ACUASCAJUNTES DE TODO PARA LA CONSTRUCCIÓN</b>            CALLE 100 PUEBLA #500, 1B MONTERREY PARKS.            NEUQUEN  <b>BAJA</b>  <b>SUCURSAL TIJUANA</b>            CALIFORNIA 100            FEDE ANGELLES 252, RUIZ CONTRERAS SN, COL. PUEBLO            TEL.: 664 96 5300  <b>CALIFORNIA SUR</b>  <b>FIX FERRERIAS</b>            FEDE ANGELLES 252, RUIZ CONTRERAS SN, COL. PUEBLO            TEL.: 613 323 1115  <b>CAMPACHE</b>  <b>TRUPITERIA Y FERRERIA AIA</b>            AV. ALVARO OBREGÓN #524, COL. ESPERANZA            CP. 24080 CAMPECHE, CAMPECHE.            TEL.: 981 815 2808  <b>CHIAPAS</b>  <b>FIX FERRERIAS</b>            AV. SILVESTRE FERRIZ #27, COL. ENTRO, CP. 30700.            TAPACHULA, CHI. TEL.: 962 118 4803  <b>CHIHUAHUA</b>  <b>SUCURSAL CHIHUAHUA</b>            AV. BARRA CARRERA 1#28-11, PARQUE INDUSTRIAL            CHIHUAHUA, CHI. TEL.: 614 434 0052  <b>COAHUILA</b>  <b>FIX FERRERIAS</b>            CALLE 314 332 1986 / 332 8013            TEL.: 207 209 68 23  <b>DURANGO</b>  <b>TRUPITERIA GUERRA S.A DE C.V.</b>            MAZURI #200, COL. LUIS ECHÉVERRÍA, DURANGO,            DGO. TEL.: 618 181 1949 / 618 181 2844  <b>ESTADO DE MÉXICO</b>  <b>SUCURSAL CENTRO JIOTEPIC</b>            APARTEMENTO INDUSTRIAL #1, COL. PARQUE INDUSTRIAL            MEXICO TEL.: 761 782 9101 EXT. 1107PC / 54257  <b>EL SALVADOR</b>  <b>CENTRO DE SEVICIO ELLIPSE</b>            CALLE 600 #253, CD. INDUSTRIAL, CP. 38010.            EL SALVADOR TEL.: 461 757/8 / 79 / 88 / 89  <b>GUANAJAUTA</b>  <b>CIA. DE RERERAS NUEVO MUNDO S.A. DE C.V.</b>            CALLE 140 #200, COL. SANTA FE, CP. 39010.            GUANAJAUTA TEL.: 775 753 6615 / 775 753 6616  <b>HIDALGO</b>  <b>FERRERECIOS S.A. DE C.V.</b>            CHILPANCINGO, GRO. TEL.: 471 478 5793  <b>JALISCO</b>  <b>SUCURSAL GUADALAJARA</b>            AV. ADOLFO B. HORN # 6800, COL. SANTA CRUZ DEL            VALLE, C.P. 45635, TLAJOMULCO DE ZUNIGA, JAL.  <b>MICHOACÁN</b>  <b>FIX FERRERIAS</b>            AV. HAGENDA DE LA REPÚBLICA #314-A, COL.            MICHOACÁN, TEL.: 445 334 6688  <b>MORELOS</b>  <b>FIX FERRERIAS</b>            CALLE 100 PUEBLA #500, 1B MONTERREY PARKS.            NEUQUEN  <b>PEQUEÑA PUEBLA</b>            SUCURSAL MASTERSERRY            CALLE 100 PUEBLA #500, 1B MONTERREY PARKS.            NEUQUEN  <b>QUINTANA ROO</b>  <b>FIX FERRERIAS</b>            AV. 20 DE NOVIEMBRE #910, COL. CENTRO, CP. 63000,            TUXPEDO, Q.R.            TEL.: 984 282 828 / 84 / 86  <b>QUERÉTARO</b>  <b>FIX FERRERIAS</b>            AV. PUEBLA #100, COL. SAN LORENZO ALMECTA, CP.            77170, QUINTANA ROO.            TEL.: 984 268 1544  <b>SAJALIS</b>  <b>FIX FERRERIAS</b>            AV. UNIVISIDAD #180, COL. EL PASO, CP. 78320,            TEL.: 984 268 1540  <b>SINALOA</b>  <b>SUCURSAL CULIACÁN</b>            AV. JUAN URUMETE S/N #4301, COL. HACIENDA DELA            MARCA, CP. 80135, CULIACÁN, SIN.            TEL.: 987 173 9139 / 173 8400  <b>SONORA</b>  <b>FIX FERRERIAS</b>            CALLE 5 DE FEBRERO #57, SUR 25 MZ. 10, COL.            CENTRO, CP. 88000, CDMX, SON.            TEL.: 44 413 2929  <b>TABASCO</b>  <b>SUCURSAL VILLAHENOSA</b>            CALLE HERMANOS LOTS 1, 2 Y 3 MZ #1, COL. INDUSTRIAL,            TABLA, CP. 89050, VILLAHERMOSA, TAB.            TEL.: 993 353 7244  <b>TAJAMULCAS</b>  <b>VIA ORINGS Y REACCIONES</b>            CALLE ROSITA #57, OFICINA 20 DE NOVIEMBRE Y RIAL,            TAMS, TEL.: 899 276 7552  <b>TAXCALA</b>  <b>SEGUROS DISTRIBUIDORA TRUPER</b>            PABLO ROSSETI #153, COL. BARRIO DE SAN PEDROLITO,            TEL.: 222 271 7502  <b>VERACRUZ</b>  <b>LACAS</b>            Blvd. PRIMERA C.P. 93308, POZA RICA, VER.            TEL.: 882 823 1800 / 262 8484  <b>YUCATÁN</b>  <b>SUCURSAL MERIDA</b>            CALLE 33 #600 202, LOCAL DISTRICHO YULAYA,            MERIDA, YUC.            TEL.: 999 912 2451         </p>
--	---



**TRUPER®**

## Solución de problemas

## Problema Causa

Section

- La serie no arranca • Filos y la corriente efectiva • Cambia el fusible o suministro eléctrico. • Cambia el circuito de interruptor de circuito. • Interruptor de circuito soldado.

**TRUPER** para reparar la sierra.  
• Acúdala a un Centro de Servicio Autorizado



- El cable de extensión es muy largo o de disco no alcanza

- La sierra se encuentra demasiado caliente.
  - A pesar de la temperatura, debes que se entienda a temperaturas ambiente y limpia las ranuras de ventilación.

- Cisco desalineado. • Corre desalineado.

**Procedimientos**

- Piezas móviles desgastadas.
  - Acción a un Centro de Servicio Autorizado bien apretado.

#### **• Sustitución formal por la activación del freno**

- Sustituir el interruptor.
  - El freno automático se ha activado.

## Lubrification

- Lubrifique las partes móviles periódicamente.
  - Los rodamientos del motor están engrasados e impermeabilizados de fábrica, por lo que no necesitan ser lubrificados.

## Cambio de carbonos

- Cuando se haga el cambio de carbonos siempre debe ser entre carbonos de la misma periodicidad, y ser de un centro de servicio.
  - Los carbonos deben revivirse de periodoicamente, y ser reemplazados siempres por uno de su mismo periodo.
  - Autolimpiado TRUPER cuando se haya desgasificado. Debes pulsar el botón carbono y soltarlo que encenderá la herramienta durante 5 minutos para empaparla el contacto de los carbonos y el comunicador.
  - Solo es deber de usar carbonos de repuesto o igualadas, dischados específicamente con la dureza y la resistencia eléctrica adecuadas para cada tipo de motor.
  - Cuando se empieza a usar carbonos nuevos debe darle al motor una serie de arranques para que se acostumbre a su uso.


Limpieza y cuidados

- Revise Períodicamente la herramienta para verificar que todos los tornillos o piezas móviles estén debidamente apretados, pues con el paso del tiempo podrían aflojarse.
  - Revisa la herramienta que la lleva y la sujeta para verificarte que la herramienta se sujeta bien.
  - Mantenga las ranuras de ventilación limpia y libres de desechos de cada uso con aire comprimido o con un cepillo.
  - Para limpiar la herramienta utilice un paño ligeramente humedo con un poco de detergente suave. Cuelquiera otra agente límpiator puede dañar las partes plásticas de la herramienta.

## Inspección general

- | Cambio de carbones                            | TRUPER   |
|---|--|
| Lubricación                                   | • Los rodamientos del motor están engrasados e impregnados de aceite, por lo que no necesitan ser lubrificados.  |
| • Lubrique las partes móviles periódicamente. | • Para su preparación o servicio acuda directamente a un centro de Servicio Autorizado TRUPER.   |
| • Lubrique las partes móviles periódicamente. | • Para volver la garantía y evitar accidentes la reparación o servicio de la herramienta sólo puede ser realizada por personal calificado y utilizando reparaciones originales |



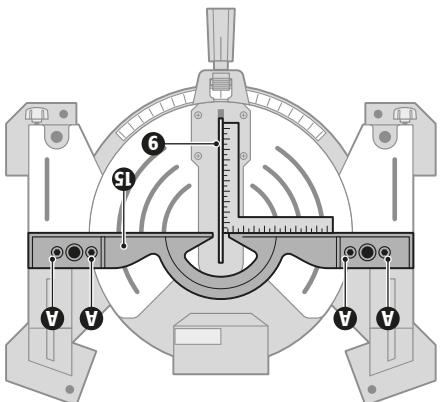

de cortes en su posición correcta.

- Apriete de nuevo los tornillos (A) para fijar la guía que quede perpendicular al disco de corte.

- Coloque la escuadra como se muestra más tarde la guía de corte a la mesa con la llave Allen.

- Si la guía de corte o el disco no hacen contacto a todo lo largo de la escuadra, afloje los tornillos (A) que fijan la

- Coloque una escuadra contra la guía de corte y cuenta los pasos a 0° (consulte la Página 10).


y mantenga la columna del cabezal para cortes.

- Afloje la mesa giratoria para hacer cortes de inglete a 0°.

- Baje y asegure el cabezal de corte (consulte la Página 7).

- Descuelgue la herramienta.

### Ajuste del ángulo de la guía de corte

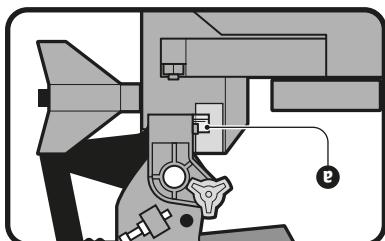

- Una vez ajustado el cabezal de corte para que el disco de corte cambie de posición, quite la escuadra y mantenga la mesa de trabajo.

- Quite la escuadra y coloque la escuadra en la mesa de trabajo.

- Una vez ajustado el cabezal de corte y la escuadra, quite la escuadra y coloque la escuadra en la mesa de trabajo.

- Quite la escuadra y coloque la escuadra en la mesa de trabajo.

- Quite la escuadra y coloque la escuadra en la mesa de trabajo.

- Quite la escuadra y coloque la escuadra en la mesa de trabajo.

- Quite la escuadra y coloque la escuadra en la mesa de trabajo.

- Quite la escuadra y coloque la escuadra en la mesa de trabajo.

- Quite la escuadra y coloque la escuadra en la mesa de trabajo.

- Quite la escuadra y coloque la escuadra en la mesa de trabajo.

- Quite la escuadra y coloque la escuadra en la mesa de trabajo.

- Quite la escuadra y coloque la escuadra en la mesa de trabajo.



- Quite la escuadra y coloque la escuadra en la mesa de trabajo.

- Quite la escuadra y coloque la escuadra en la mesa de trabajo.

- Quite la escuadra y coloque la escuadra en la mesa de trabajo.

- Quite la escuadra y coloque la escuadra en la mesa de trabajo.






- Quite la escuadra y coloque la escuadra en la mesa de trabajo.

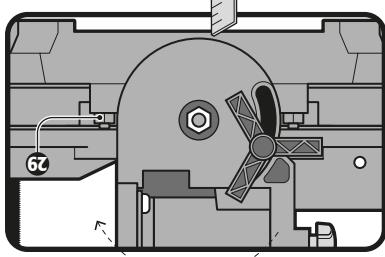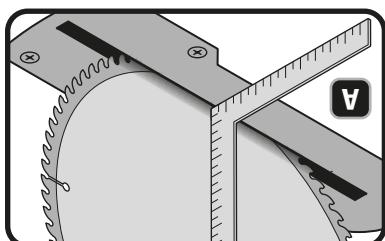

### Ajuste del ángulo para cortes en bisel

## Ajustes


### Ajuste de la mesa giratoria para cortes de inglete

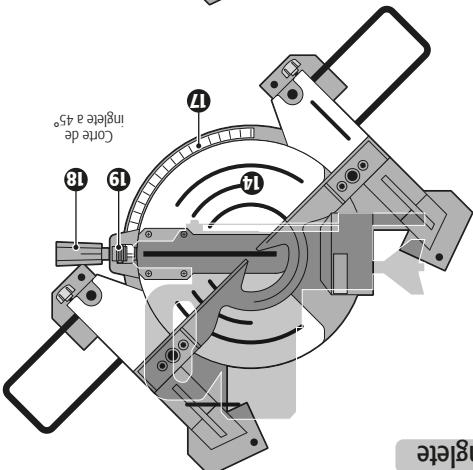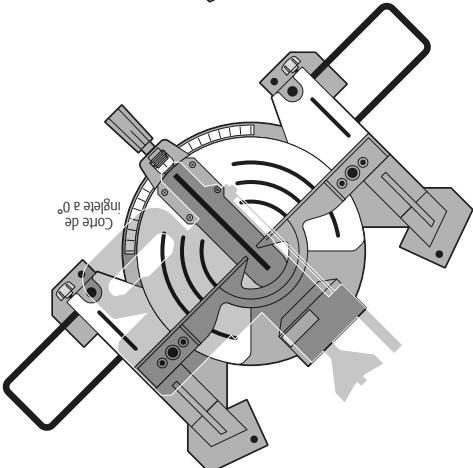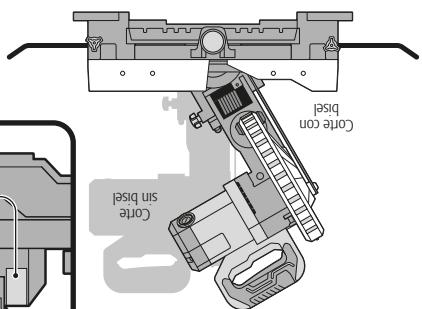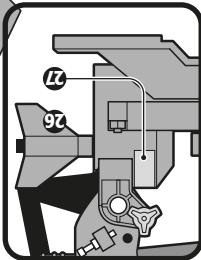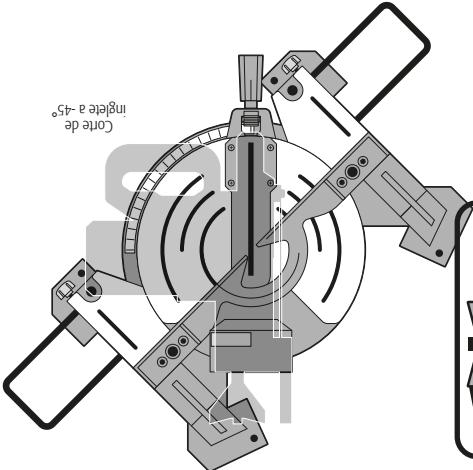

- Para realizar cortes biselados de  $0^{\circ}$  a  $45^{\circ}$  ajuste la columna giratoria que debe estar alineada con los ángulos deseados.
- En el caso de ángulos distintos a  $0^{\circ}$  afloje la perilla para quitar los tornillos que sujetan la columna en el bisel (26) y gire la columna al ángulo deseado.
- Apriete la perilla para bloquear la columna.
- Asegúrese de que la columna esté bien alineada antes de iniciar el corte.
- Siempre realice cortes biselados de  $0^{\circ}$  a  $45^{\circ}$  ajustando la columna del cabezal de corte al ángulo deseado.

### Ajuste del cabezal para cortes biselados

- Para realizar cortes biselados de  $0^{\circ}$  a  $45^{\circ}$  ajuste la columna giratoria que debe estar alineada con los ángulos deseados.
- Gire la mesa giratoria para fijar la mesa con ayuda de la perilla de control (18).
- Presione el seguro de bloqueo de inglete (19) para liberar la mesa giratoria. Sin soltar el seguro gire la mesa de inglete (17). Esta escala cuenta con topes a  $0^{\circ}$ ,  $\pm 15^{\circ}$ ,  $\pm 22.5^{\circ}$  y  $\pm 31.6^{\circ}$  para fijar rápidamente los ángulos de inglete más comunes.
- Sujete el seguro de mesa para fijar la mesa.
- Asegúrese de que la mesa esté bien alineada con los ángulos deseados por la escala de inglete (17).
- Siempre realice cortes biselados de  $0^{\circ}$  a  $45^{\circ}$  ajustando la columna del cabezal de corte al ángulo deseado.

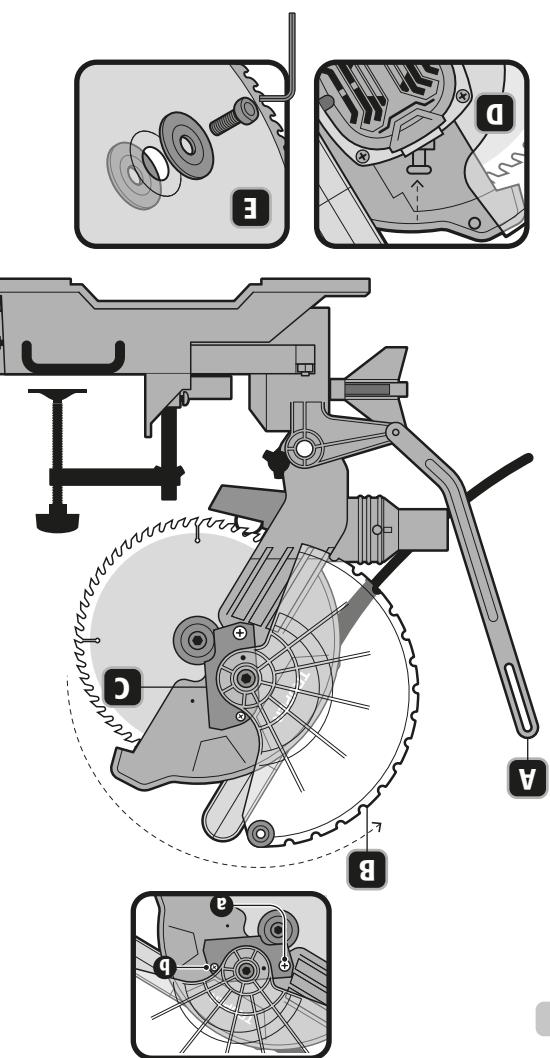

**Cambio del disco de corte**

## TRUPER®

## Montaje

- Al cambar o instalar el disco de corte utilizar guantes de protección para evitar lesiones.
- Desconectar la herramienta de la corriente eléctrica.
- Muera hacia atrás el brazo retractil de la guardia para que la parte inferior de la herramienta esté sujeta a la corriente eléctrica.
- Levante la guardia capaz de cortar.
- Retire el tornillo (A).
- Afloje el tornillo (B). NO lo retire.
- Levante la guarda retractor (B) hasta dejar desacoplado con un desarmador de cuchilla (A).
- Quite la guarda retractor de la herramienta dejando el tornillo que sujetaba la guarda retractor en su lugar.
- Quite la guarda retractor del eje (C) para dejar desacoplado la guarda retractor de la herramienta.
- Presione el descubridor el tornillo que sujetaba el disco (D).
- Con la llave incluida retire el tornillo que asegura el disco hasta que la llave se apoye en el eje.
- Extraiga el disco de cortar.
- Aplique una gota de aceite en las arandelas interiores y exteriores del eje lubricante en los discos.
- Coloque el disco nuevo en la flecha asegurandose que el disco quede bien instalado.
- Encienda la sierra un instante para verificar que el disco de corte funcione con normalidad.
- Asegúrese de que la guarda funcione con normalidad herramienta.

A

B

C

D

E


A

B

C


D

E

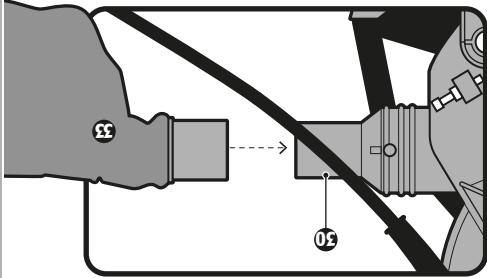


- Instale la bolsa recollectora de polvo (33) en el ducto de recolección de polvo (30) en la parte posterior de la columna del cabezal de corte.
- Instale la bolsa recollectora de polvo (33) en el ducto de recolección de polvo (30) en la parte posterior de la columna del cabezal de corte.

### Bolsa recollectora de polvo

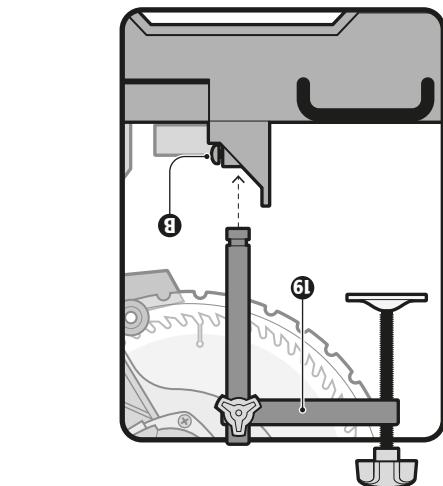

- Apriete el segurito tornillo (B) para que quede asegurada dependiendo del trabajo a realizar.
- Instalela en la mesa de corto o en la cubierta ofriles (20) a los extremos de la mesa de trabajo de los cortadores (19).
- Para asegurar la pieza de trabajo a la mesa de corte utilice la prensa (19).

### Prensas

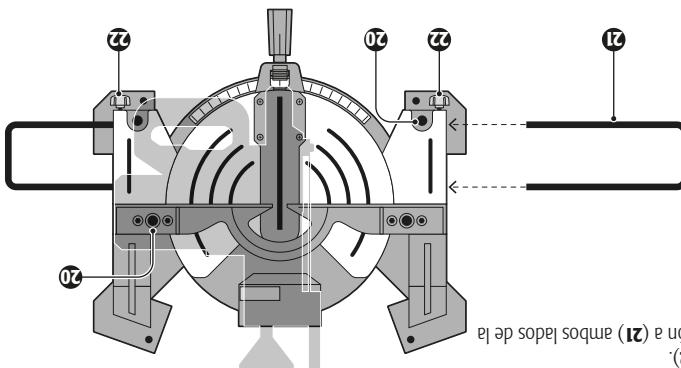

- Sujate las piezas de trabajo que sobreponen el área de la mesa de corte.
- Para instalarlos en la mesa de trabajo afloje los seguros de los brazos de extensión (22).
- Inserte los brazos de extensión a (21) ambos lados de la mesa apriete los seguros.


### Brazos de extensión lateral

## Montaje

**TRUPER®**

- Una vez montada la herramienta, libre el cabezal de corte para poder utilizarla sierra por medio de la perilla libreadora (24).
  - Presione sobre la base del cabezal mientras jala hacia arriba la perilla libreadora. Cierre 45° y suéltela.
  - Después levante el cabezal lentamente.
  - Para asegurar de nuevo el cabezal mientas jala hacia arriba la perilla libreadora. Cierre 45° y suéltela.
  - Para ajustar la perilla libreadora, girela 45° y suéltela.

#### Liberación del cabecal de corte

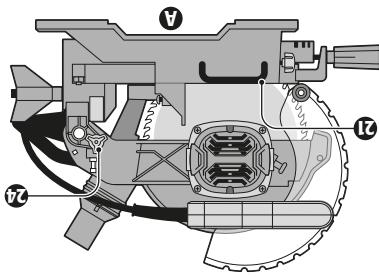


**ADVETINCIA** • De mortar a la hermanilla en una superficie combada, inclinada o irregular, los cortes serán inexactos e inexactos y se pierde dhar el sistema de tapes

**ADVERTENCIA** • De montar la herramienta en una

- La base de la hermanura quedó con oficios en cada uno de sus cuatro lados para sujetarla a una mesa de trabajo.
  - La base de la hermanura quedó con oficios en cada uno que la podían sujetar a la mesa.
  - Si lo prefieren un trozo de madera tercada de 15 mm sirve de apoyo horizontal para medirlo de terminos (no incluidos).
  - File la base a una mesa de trabajo perfectamente.



Montaje sobre banco de trabajo

Gracias a estos controles de calidad es muy poco probable que su herramienta presente algún defecto o que le falte alguna pieza. De presentarse el caso acuda a un Centro de Servicio Autorizado **TRUPER** antes de utilizarla.

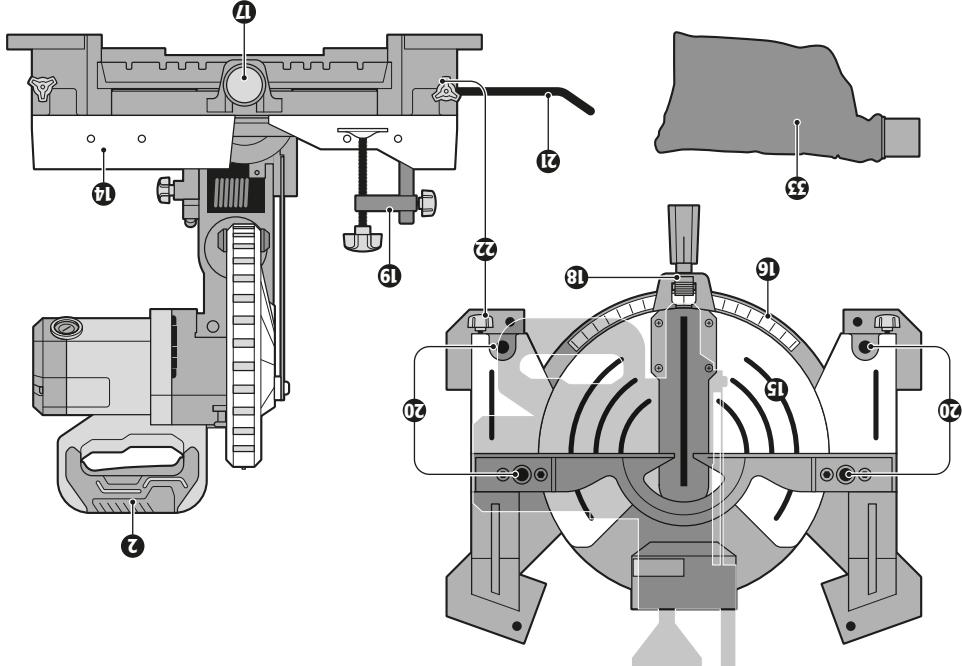

**TRUPER®**

Partes

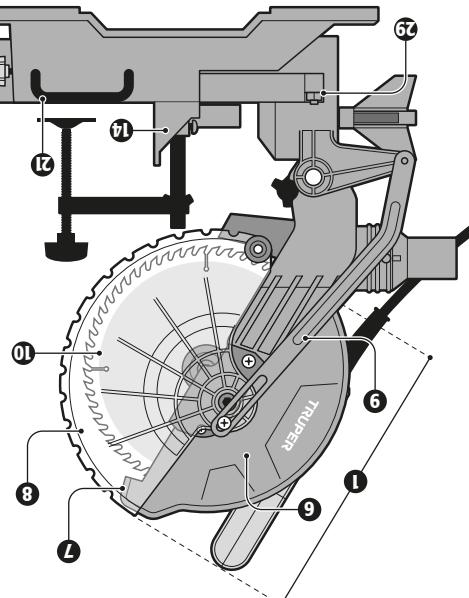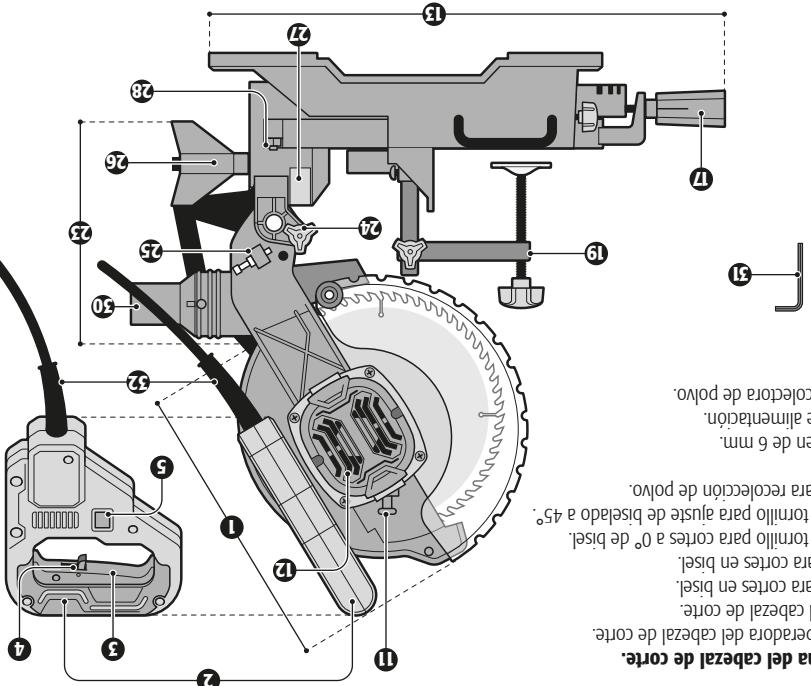

**TRUPER®**

para uso de sierras estacionarias

## Generales

**AVANTAJE** • MIDILÍNEA SIEMPRE EL CUBIERTO

A ADVERTENCIA • Mepetapges CIEMDPE Al seku de

**THE PENTECOSTAL** **MISSIONARY** **REVIEW**

**Table** **pe**

**A ATENCIÓN** • No intente retirar material de desecho cuando el disco de corte esté girando.  
**A ADVERTENCIA** • Recuerde que las guías no lo protegerán del disco si se mueven más allá de la mitad de la pieza de trabajo, por lo que jamás deje la mano por debajo de ella con la herramienta en marcha.

- Alimente el material en dirección contraria a la rotación del eje gravado.
- El contacto accidentado con un disco de corte que este blindado puede ocasionar lesiones personales.

**A. ADVERTENCIA** • Alegre las manos y culquiera otra parte del cuerpo del área de corte y del disco de corte. Al firmar la herramienta sostenga el cabezal del cortador sobre el mango para proteger las manos de corte de corte. Si se pierde el control de la herramienta, el cuchillo de corte se desgastará y se romperá.

- No utilice la goma lesser cuando corta materiales que solo quiebre.
- No punte en la lámina lesser ni ninguna persona ni a ningún animal.
- Utilice el dispositivo de cierre a los ojos.
- No utilice la goma lesser cuando corta materiales que solo quiebre.

- Revisa la placa de trabajo y asegúrate de que no tiene enclavamiento en la posición deseada y estén bloqueadas.
- Columa de la cabecera de cortar y la mesa giratoria se coloca en la posición deseada y estén bloqueadas.
- Ajusta el ancho de corte según sea necesario.

- Al cortar piezas de tabajo con formas circulares, utilice tornillos de banco para asegurarla y evitar que pueda girar en la herramienta tiene una llave laser incorporada como guia

- Revisa periódicamente que todos los tamaños estén debidamente apretados.
- Despues de operar la sierra

**A ATENCIÓN** • Atiende de cada uso revisé que la guarda permanienda en su pieza de trabajo.

**A ATENCIÓN** • Sujete la pieza de trabajo de manera adecuada para evitar el contacto del cuerpo con el disco de corto, evitando que se doble o perde el control de la pieza.

**Antes de operar la sierra**

- Los mulos deben supervisarse para asegurar que ellos no empleen los apoyos como juguete

**A TENCION** • Nunca quite con la mano el aserrín o desechos de madera que quedan en el disco, utilice un cepillo.

**A TENCION** • No intente liberar un disco clasificado como segundado.

- Claudio utilice la sierra para ese siempre a un lado del imediatamente.
- Claudio utilice la sierra para ese siempre a un lado del imediatamente.

- NOVOS GRUPOS: separamos los grupos de acuerdo a la habilidad superadora para la hermanamiento.
- ÚLTIMAS SALTOS: para manipular los discos.
- FESTE ALABADO NO SE DESTINA PARA UTILIZAR POR PERSONAS.

- No se sierra para cortar metal, mampostería o concreto.
- No utiliza discos gatistas, bordas o si si filo.
- No utilice discos que aceran de la velocidad.
- Asegúrese que el disco se detenga por completo antes de cada paso.






**ADVERTENCIA** Al operar herramientas eléctricas en exteriores, utilice una extensión con un adaptador de protección contra sobrecorriente.

\* Se permite utilizar siempre y cuando las extensiones misas estén en la medida que AWG = Calibre de alambre estándar norteamericano (American Wire Gauge). Referencia: NMX-J-195-ANCI.

de 0 A hasta 10 A	16 AWG	14 AWG	12 AWG	10 AWG	8 AWG	6 AWG
de 10 A hasta 15 A	16 AWG	14 AWG	12 AWG	10 AWG	8 AWG	6 AWG
de 15 A hasta 20 A	16 AWG	14 AWG	12 AWG	10 AWG	8 AWG	6 AWG
de 15 A hasta 20 A	16 AWG	14 AWG	12 AWG	10 AWG	8 AWG	6 AWG

cabal y de la capacidad de amperes indicada en la placa de datos de la herramienta. Si tiene dudas use el siguiente calibre más alto.

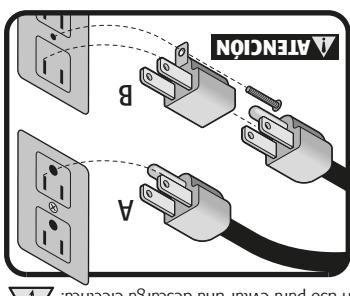

### A TENCION

- Utilice un cable de extensión, asegúrese de usar el calibre adecuado para conectar la herramienta a la red eléctrica.
- Si el conductor que lleva la corriente de extensión es de menor calibre que el conductor de tierra como se indica en la figura, utilice un adaptador temporal como se muestra en la figura.
- NO REMUEVA O ALTERE EL CONDUCTOR DE TIERRA DE SU CLAVIJO POR NINGUN MOTIVO. Utilice un adaptador temporal como se muestra en la figura.
- Si los conductos que llevan la corriente de extensión están conectados a tierra mediante alambres estriados, utilice la clavija dentro de un contacto o enchufe estriado.
- Enthile la herramienta debajo del contacto o enchufe estriado en el ejemplo A. No todos los contactos o enchufes están como se muestra en el ejemplo A.

**ADVERTENCIA** La herramienta debe ser conectada a tierra mientras esté en uso para evitar una descharge eléctrica.



**ADVERTENCIA** Antes de obtener acceso a las terminales, todos los circuitos de alimentación deben ser desconectados.



**ADVERTENCIA** La construcción del sistema eléctrico de esta herramienta es diferente a la utilizada en líquidos y/o humedad. La construcción del sistema eléctrico de esta herramienta es diferente a la utilizada en líquidos y/o humedad.

**ADVERTENCIA** Si el cable de alimentación se daña, este debe ser reemplazado por el fabricante o Centro de Servicio autorizado TRUPER® con el fin de evitar algún riesgo de descarga eléctrica o accidente considerable.


La base de alimentación térmica de los devanados del motor: Clase F  
La clase de construcción de la herramienta es: Suplementaria.  
El cable de alimentación tiene sello-cables tipo: Y

Angulos de la cabeza	de 0° a 45°
Angulos de la mesa	de - 45° a + 45°
Aislamiento	Clase I
Conductores	14 AWG x 3C con temperatura de aislamiento de 105°C
Ciclo de trabajo	50 min de trabajo por 20 min de descanso. Máximo ratio 6 horas.
Velocidad	5 000 r/min
Potencia	1 900 W - 1/2 Hp
Corriente	15 A
Tension	127 V~
Diametro del eje (fresa)	Freuencia • 60 Hz
Discos	25 cm (10") para madera   25 cm (10") para aluminio
Descripción	Serra de inglete compuesta
Código	103236

SINCO-10-3

**TRUPER®**

**Especificaciones técnicas**

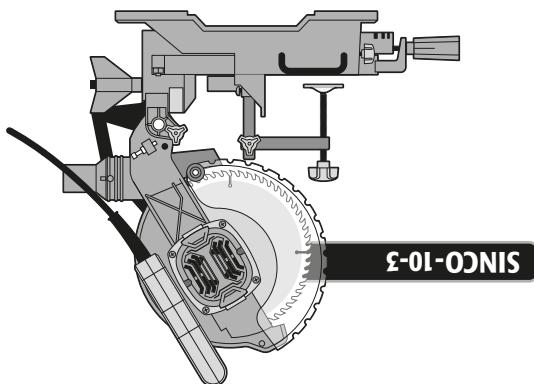

3	Especificaciones técnicas.
3	Requerimientos eléctricos.
4	Advertencias generales de seguridad para herramientas eléctricas.
5	Advertencias de seguridad para uso de sierras sableadoras.
6	Partes.
7	Desempaque y montaje.
8	Montaje.
10	Ajustes.
12	Operación.
13	Solución de problemas.
14	Notas.
15	Centros de servicio autorizados.
16	Poliza de garantía.

**ATENCIÓN**

Para poder sacar el máximo provecho de la herramienta, alargar su vida útil, hacer válida la garantía en caso de ser necesario y evitar lesiones graves, es fundamental leer este instructivo por completo antes de usar la herramienta.

Guarde este instructivo para futuras referencias.

Los gráficos de este instructivo son aspecto real de la herramienta.




Lea este instructivo por completo  
antes de usar la herramienta.



¡ATENCIÓN

# SINCO-10-3

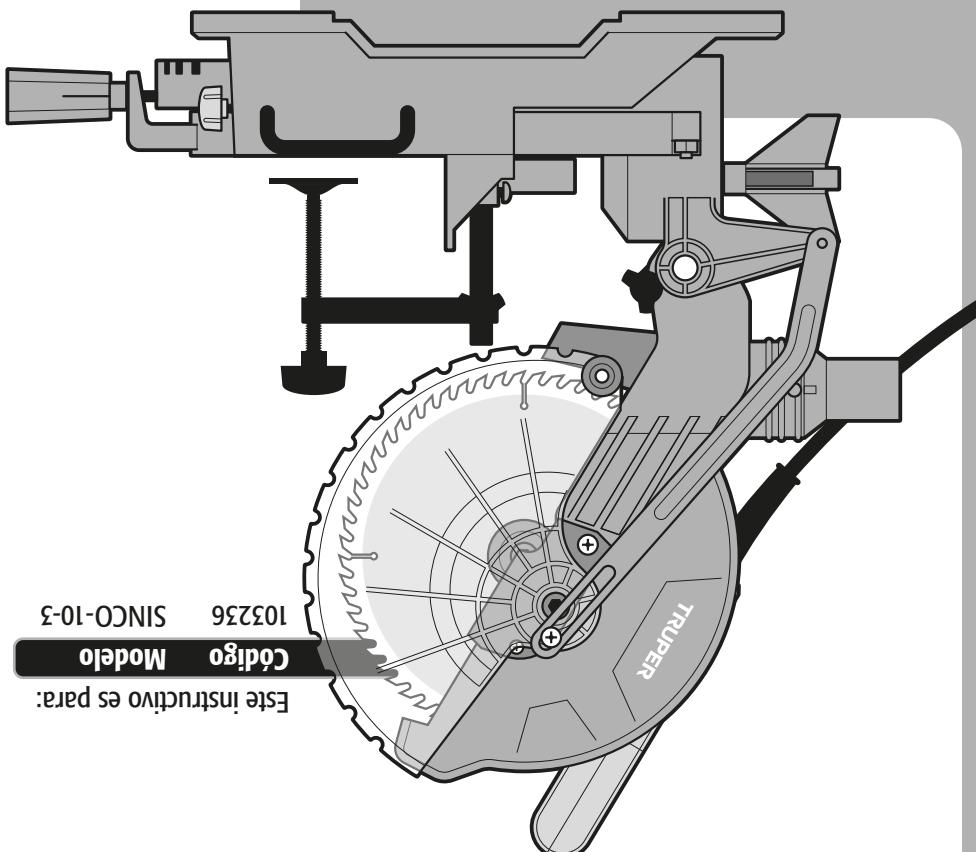

**2½ Hp**  
1900 W

**Sierra de inglete compuesta**

Instructivo para

**TRUPER®**

ESPAÑOL  
ENGLISH