


Manual

# Cordless hammer drill / drill / driver

12 V == 3/8"  
Chuck

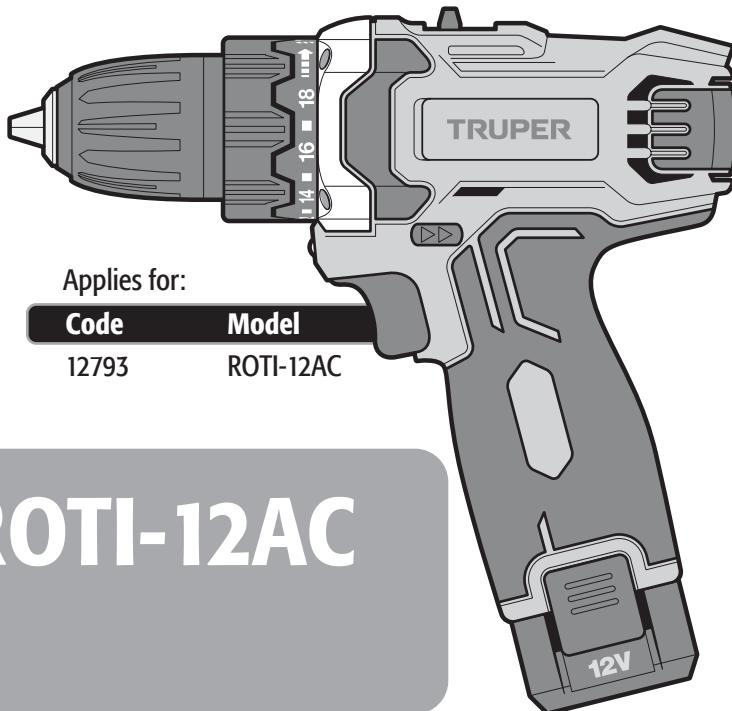

Applies for:

Code

12793

Model

ROTI-12AC

# ROTI-12AC



Read this manual thoroughly  
before using the tool.




Technical Data.....	3
Power Requirements.....	3
 General power tool safety warnings.....	4
 Safety Warnings for hammer drills / drills / drivers.....	5
Parts.....	6
Start Up.....	6
Trouble shooting.....	9
Maintenance.....	9
Environmental Protection.....	9
Notas.....	10
Authorized Service Centers.....	11
Warranty Policy.....	12

## CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

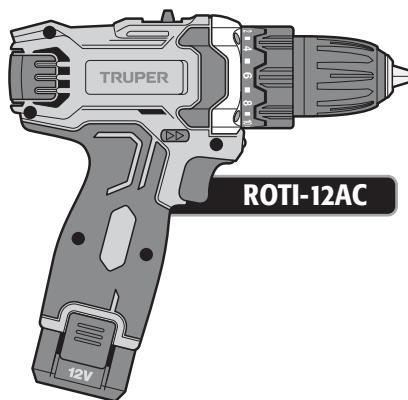

## ROTI-12AC

Code	•	12793
Description	•	Cordless hammer drill / drill / driver
Chuck	•	3/8" keyless
Voltage	•	12 V==
Speed	•	Position 1: 0 - 350 RPM Position 2: 0 - 1250 RPM
		y y 0 - 5 600 BPM y 0 - 20 000 BPM
Rotation	•	Forward - Reverse
Torque	•	18 + 2 functions
Bore Capacity	•	Concrete: 3/8"   wood: 3/4"   metal: 3/8"
Insulation	•	Class II
		IP Grade • IP20
Battery	•	Lithium-Ion 12 V== 2 Ah   Time to charge: 100 minutes approximately
Charger	•	Input: Voltage: 127 V~ Frequency: 60 Hz Power: 25 W
		Output: 12 V == 1.5 A

Power Cord Grips: Type "Y".

Charger Build Quality: Reinforced Insulation

Thermal insulation on motor winding: Class E


**WARNING** Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a TRUPER® Authorized Service Center. The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use. Do not expose to rain, liquids and/or dampness.

**WARNING** Before gaining access to the terminals all power sources should be disconnected.



## Power Requirements

**WARNING** Tools with double insulation are equipped with a polarized plug (one prong is wider than the other). This plug will only fit in the right way into a polarized outlet. If the plug cannot be introduced into the outlet, reverse the plug. If it still doesn't fit, call a qualified electrician to install for you a polarized outlet. Do not alter the plug in any way. Double insulation eliminates the need of both a grounded third power cord with three prongs or a grounded power connection.

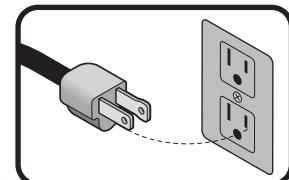

**WARNING** When using an extension cable, verify the gauge is enough for the power that your product needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and overheating. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

Ampere Capacity	Number of Conductors	Extension gauge	
		from 6 ft to 49 ft	higher than 49 ft
from 0 A and up to 10 A		18 AWG(*)	16 AWG
from 10 A and up to 13 A		16 AWG	14 AWG
from 13 A and up to 15 A	3 (one grounded)	14 AWG	12 AWG
from 15 A and up to 20 A		8 AWG	6 AWG

\* It is safe to use only if the extensions have a built-in artifact for over current protection.

AWG = American Wire Gauge. Reference: NMX-J-195-ANCE

**WARNING** When operating power tools outdoors, use a VOLTECK grounded extension cable labeled "For Outdoors Use". These extensions are especially designed for operating outdoors and reduce the risk of electric shock.



**⚠ WARNING!** Read carefully all safety warnings and instruction listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. Save all warnings and instructions for future references.

**Work area****Keep your work area clean, and well lit.**

Cluttered and dark areas may cause accidents.

**Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**

Sparks generated by power tools may ignite the flammable material.

**Keep children and bystanders at a safe distance while operating the tool.**

Distractions may cause lossing control.

**Electrical Safety****The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.**

Modified plugs and different power outlets increase the risk of electric shock.

**Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.**

The risk of electric shock increases if your body is grounded.

**Do not expose the tool to rain or wet conditions.**

Water entering into the tool increases the risk of electric shock.

**Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.**

Damaged or entangled cords increase the risk of electric shock.

**When operating a tool outdoors, use an extension cord suitable for outdoor use.**

Using an adequate outdoor extension cord reduces the risk of electric shock.

**If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.**

Using a GFCI reduces the risk of electric shock.

**Personal safety****Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.**

A moment of distraction while operating the tool may result in personal injury.

**Use personal protective equipment. Always wear eye protection.**

Protective equipment such as safety glasses, anti-dust mask, non-slip shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.

**Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.**

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

**Remove any wrench or vice before turning the power tool on.**

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

**Do not overreach. Keep proper footing and balance at all times.**

This enables a better control on the tool during unexpected situations.

**Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.**

Loose clothes or long hair may get caught in moving parts.

**If you have dust extraction and recollection devices connected onto the tool, inspect their connections and use them correctly. Using these devices reduce dust-related risks.****Power Tools Use and Care****Do not force the tool. Use the adequate tool for your application.**

The correct tool delivers a better and safer job at the rate for which it was designed.

**Do not use the tool if the switch is not working properly.**

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

**Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.**

These measures reduce the risk of accidentally starting the tool.

**Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.**

Power tools are dangerous in the hands of untrained users.

**Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.**

Most accidents are caused due to poor maintenance to the tools.

**Keep the cutting accessories sharp and clean.**

Cutting accessories in good working conditions are less likely to bind and are easier to control.

**Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.**

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

**Battery tool Use and Care****Recharge only with the charger specified by TRUPER®.**

A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

**Use power tools only with specifically designated battery packs.**

Use of any other battery packs may create a risk of injury and fire.

**When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws, or other small metal objects, that can make a connection from one terminal to another.**

Shorting the battery terminals together may cause burns or a fire.

**Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.**

Liquid ejected from the battery may cause irritation or burns.

**Service****Repair the tool in a TRUPER® Authorized Service Center using only identical spare parts.**

This will ensure that the safety of the power tool is maintained.

# Safety warnings for hammer drills / drills / drivers



## Battery and Charger

**DANGER** • Use only the Truper charger included to charge the battery. Using a different charger may cause fire or injury hazard.

**DANGER** • Use only batteries specifically designed for the tool. Different batteries could generate risk of injury or fire.

**DANGER** • Do not use the charger outdoors.

• When charging, obey the "+/-" polarity.

• Never recharge a leaking battery or that is visibly damaged.

• Do not use batteries or a charger for purposes different than it was designed for.

• Do not modify the battery contacts or the chargers.

• Never expose the batteries to higher than 122 °F temperatures or direct sun light.

**DANGER** • Never expose the batteries to fire or impact. They could explode.

**CAUTION** • Batteries shall be kept away from metallic objects like clips, coins, keys, nails, screws or other type of object making contact with the terminals. It would cause a short circuit and burns or fire. They should be kept clean, dry and in good repair.

**CAUTION** • Under extreme conditions the battery liquid could spill out. Avoid any contact. If an accidental contact happens clean with enough water. If the battery liquid comes into contact with your eyes, clean with enough water and immediately go see the doctor. Liquid expelled from the batteries could cause irritation or burns.

• Remove battery when not in use.

**CAUTION** • If the battery will be stored for long periods of time, keep an intermediate charge (40%) to maximize its useful life. Do not leave it completely charged for long periods of time, or leave it charging when not in use.

• Keep batteries away from children reach.

• Do not discard batteries together with household trash. Go to a specialized center for it's recycling.

## Choose the right bit

**CAUTION** • Choose the right bit for the work piece. It reduces the risk of severe injury and makes the job easier.  
• To work on metal or plastic, use bits suitable for metal. Sizes encompass a minimum of 1/32" (3/64" for a 1/2" chuck) and up to the chuck maximum capacity.  
• On wood, use regular bits suitable for wood. In any case, to drill 1/4" or smaller orifices, use bits designed to drill on metal.  
• Do not try using bits exceeding the chuck capacity.

## Before operating the tool

• Take your time to assess the job to be done and double check you are paying attention to the necessary caution advices before starting to drill.

• Adjust correctly the bit into the chuck.

**DANGER** • Before boring a wall, floor or ceiling, double check there are no hidden objects, like cables, power conductors or pipes.

**DANGER** • Verify the switch is in the OFF position before inserting the battery. Otherwise it will start working unexpectedly, causing severe injuries.

**CAUTION** • Turn off and disconnect the tool before reversing the chuck rotation direction, as well as setting up or replacing a bit.

## While operating the tool

• Hold the tool by it's isolated surfaces designed for that purpose, especially when making jobs where the bit might contact hidden wiring. Contact with a power cable makes the metallic parts of the tool will be energized as well and produce a short circuit to the operator.

• Do not submit the tool to excessive loads.

**CAUTION** • If the bit gets stuck in the work piece, turn off the tool immediately. Then, remove the bit from the work piece. Do not try to remove stuck bits turning on and off the tool.

• Do not put excessive pressure on the tool to accelerate boring. Otherwise the bit will get damaged and the tool efficiency will diminish as well as it working life.

**WARNING** • The largest the bit diameter, the reactive force is higher. The reactive force is higher causing loss of control over the tool. To prevent this possibility hold firmly the tool with both hands, and keep good footing while boring at 90°.

• Stay alert and ready to relax the force when the bit goes through the material. Sudden movements can break the bit or damage the tool.


**CAUTION** • Do not touch the bit or the orifices immediately after drilling. Wait for them to cool off to manipulate. Do not try to cool them with water or oil.

• Before leaving the tool aside make sure all the moving parts have come to a complete stop.

• Avoid setting the tool where there are particles and / or dust immediately after use. These can get absorbed inside the tool mechanism and damage the machine.

• Wear hearing protectors when making jobs with a noise level higher than 85dB.




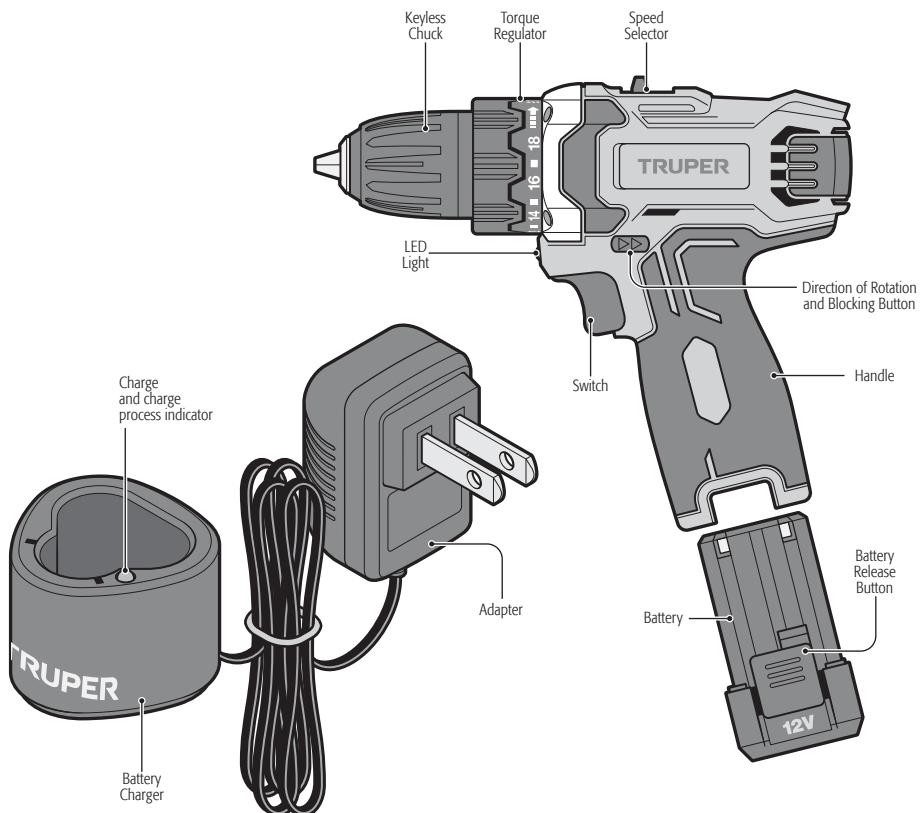

## Start Up

## Charging the Battery

- Connect the adapter plug into a 127 V~power outlet. The charge indicator green light will be ON.
- Insert the battery into the charger as shown in the image.
- The green light will be OFF and the red light shall turn ON indicating charging is in progress.
- When the battery is charged in full, the green light will be back ON and the red light will turn OFF.
- Disconnect the adapter from the power outlet once the charge finishes.
- If the green-light stays on, means the battery is defective. Replace the battery with a new one.
- If the green-light stays on, means the battery temperature is lower than 32 °F or higher than 113 °F. Wait until the battery temperature gets to the right temperature range to charge.

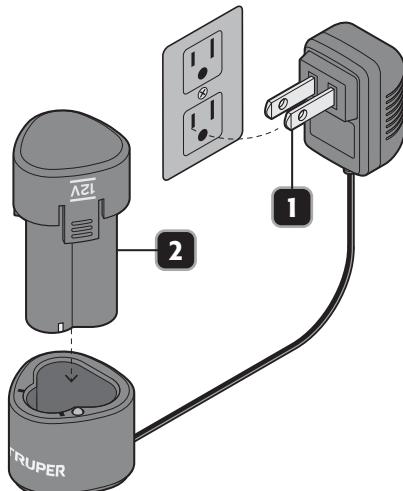

## General remarks for using the battery


The battery is shipped DISCHARGED from the factory. It will be necessary to charge the battery 1 hour approximately before being able to use it.

The regular charging temperature is from 32 °F to 113 °F. Out of this range, charging stops immediately until reaching the right temperature. The normal discharge / work temperature is 32 °F, and up to 167 °F. If exceeding 167 °F the electronic control will stop the tool power until the temperature gets the optimal temperature range. When the battery shows a low power level while working, the tool stops running.

Give the charger a 15-minutes' rest between charges. In hot environment or after long use, it is possible that the battery gets too hot to be recharged. Give the battery cooling down time before trying to recharge it.

## Installation of Bits or Adapters

- Using one hand, hold firmly the handle and with your other hand loosen the base turning in a counterclockwise direction, to loosen the jaws.
- Insert the bit all the way in or remove it as needed.
- Turn the base clockwise to fasten the bit.

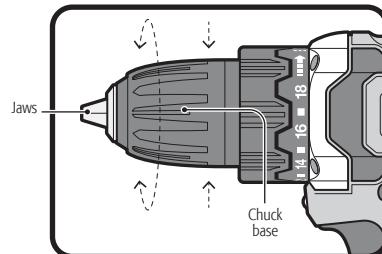


## Rotation Direction

- To drill or screw, release the switch and press the rotation direction button where the arrows point towards the chuck.
- To reverse the direction and screw out, press in the opposite side.
- The switch gets blocked if the button is in the middle position.


**CAUTION** The first time you switch on the drill and after reversing the rotation direction, you may hear a "click". This is normal and does not represent a problem.

**CAUTION** Never reverse the rotation direction while the drill is running. The tool may be damaged.

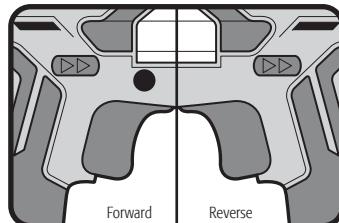

## Speed Selection


- The two speeds set in the hammer-drill work similar to the gears in a car.
- Low speed (1) will give a lot of torque (torsion power). Use this speed when starting to drill big orifices, on both metal or wood. This will prevent the drill from getting stuck.
- The high speed (2) has a reduced torque but lets the drill to run higher revolutions per minute. This makes the drill to cut faster wood or thin metal.

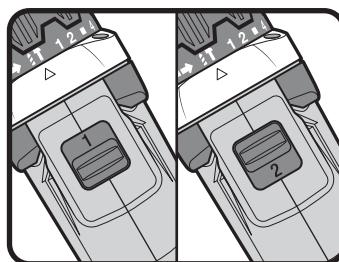

## Change from hammer drill to drill

- To bore concrete, tiled floor or materials similarly hard, turn the torque regulator into the IMPACT (➡) position. The bit will strike and rotate at the same time onto the material.
- To bore metal or plastic turn the impact-rotation selector chuck into the DRILL (➡➡ matching with the top mark) position to make the bit rotate against the material.

**WARNING** • Do not try to drill metal, wood or plastic with the hammer drill in the IMPACT mode. Otherwise the tool efficiency would diminish and the bit tip will get damaged.

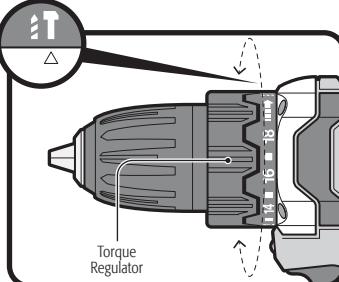


## Torque Adjustment

- To select the desired torque level to screw drive, turn the torque regulator until it matches the corresponding number with the upper mark:


From 1 to 3 for small screws,  
 From 4 to 7 for screws on soft materials,  
 From 8 to 11 for screws on soft and hard material,  
 From 12 to 15 for screws on hard wood,  
 On 16 to 18, for larger screws.

**CAUTION** The torque level needed depends on the type of screw to be used and the material to work with. When in doubt, use the lower torque and increase gradually until getting the right one. An adequate torque prevents damaging the tool.

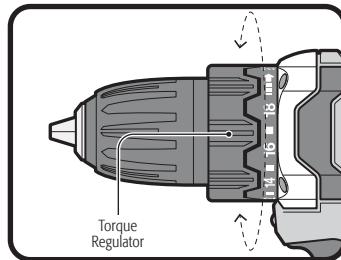

## Turn ON and Operation Control

- With the switch, you can select the right speed for each job. The more you press the switch, the faster the drill will run.
- The switch is also set up with a braking function. Once releasing the trigger, the drill will immediately stop and can be used as a manual screwdriver to give an extra turn to a screw.

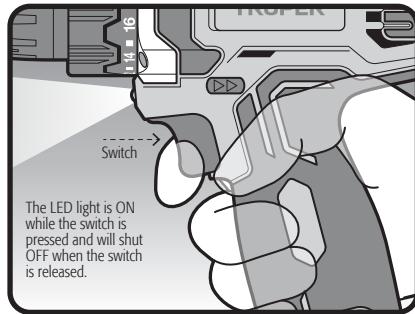

## Screwing and Unscrewing

- We recommend to first bore a "pilot orifice", slightly longer and just narrower than the screw to insert. The pilot orifice will act as guide to introduce the screw and will make it easier to tighten. When a screw is set close to the work piece edge, a pilot orifice will also help prevent the wood from breaking apart.
- Use the type of drill for each screw head to prevent the screw to protrude out of the surface.
- If the insertion of a screw turns difficult, remove it and try drilling a slightly longer or wider orifice. However, keep in mind there shall be enough material to hold the screw. When restarting the drilling operation in a previously made orifice, start screwing by hand. If still hard to screw (like in the case with very hard woods), try using some lubricant like soap. Liquid soap is the most useful.
- Always apply enough pressure on the drill to prevent the head from sliding. It is easy the screw head gets damaged making it difficult to insert completely or even remove it.

## Screwing

- When trying to drill orifices with a large diameter, is better to start with a slim bit and then replace it with one of the required size. This prevents the drill to overheat.
- When drilling deep orifices, remove the bit only a little bit and regularly while drilling so that shavings can be expelled adequately out of the orifice.

**CAUTION** • If the bit gets stuck, release the switch immediately to prevent permanent damage in the tool. Try unblocking the bit reversing the direction of the operation. Keep the drill aligned with regards to the orifice. Ideally, the bit shall always penetrate perpendicularly into the work piece. If the angle is changed during the drilling process, the bit could break and block the orifice or cause personal injuries.

## Additional Recommendations

- Use the speed adequate for each job. Do not try to drill in low speed or to screw in high speed.
- If the operation overloads the drill, extract it and repeat the operation this time applying less force.
- Use low speed to start perforations where there is no support point, over plastic or metal or when screwing on ceramic or any application requiring a high torque. Use high speed to drill on wood and when using polishing accessories. To gain the maximum useful life from your drill, use a variable speed control.

# Troubleshooting



Problem	Cause	Solution
The drill is losing efficiency.	<ul style="list-style-type: none"><li>Low battery.</li></ul>	<ul style="list-style-type: none"><li>Charge the battery.</li></ul>
The trigger cannot be pressed.	<ul style="list-style-type: none"><li>The rotation direction button is in the blocked position.</li></ul>	<ul style="list-style-type: none"><li>Move the rotation direction button to the rotation or reverse position.</li></ul>
The trigger can be pushed but the chuck is not rotating.	<ul style="list-style-type: none"><li>Low battery.</li></ul>	<ul style="list-style-type: none"><li>Charge the battery.</li></ul>
The torque regulator stops the operation.	<ul style="list-style-type: none"><li>The regulator is set in the wrong torque.</li></ul>	<ul style="list-style-type: none"><li>Adjust the regulator into a torque that allows to work. Try with the next torque level.</li></ul>
The battery is leaking.	<ul style="list-style-type: none"><li>A very small leak may be present in extreme temperatures or after a rough work. This is normal.</li><li>Intense or very evident leaking is due to a damaged battery.</li></ul>	<ul style="list-style-type: none"><li>Clean immediately with water and soap the liquid from your skin or clothes.</li><li>Replace the battery immediately.</li></ul>
The battery is not charging and the charge level indicator light is not on.	<ul style="list-style-type: none"><li>Battery is not correctly set in the charger.</li><li>The charger is not connected correctly in the power supply.</li></ul>	<ul style="list-style-type: none"><li>Insert the charger connector correctly to the battery.</li><li>Check the charger plug. It shall be well connected into the power supply.</li></ul>
The drill gets hot after long periods of time.	<ul style="list-style-type: none"><li>This heating is normal because it absorbs the energy from the motor cogs and the electricity generated during the work.</li></ul>	<ul style="list-style-type: none"><li>Give the drill 5-minutes to cool-down.</li></ul>
The battery gets hot during the job.	<ul style="list-style-type: none"><li>This is normal. The energy extracted from the battery while the drill is running makes it hot.</li></ul>	<ul style="list-style-type: none"><li>Stop the drill for a 5-minute span to allow the battery to cool down.</li></ul>
The battery gets hot while charging.	<ul style="list-style-type: none"><li>This is normal. It results from the chemical reactions taking place inside the battery while charging.</li></ul>	
The charger gets hot while charging.	<ul style="list-style-type: none"><li>This is normal. It results from the chemical reactions taking place inside the battery while charging.</li></ul>	

# Maintenance

## Cleansing and Care

- Keep the ventilation slots clean and free of obstructions to guarantee the adequate cooling down of the motor.
- Inspect regularly all the assembly screws and double check the correct tightness. If one of the screws is lose, tighten immediately.
- Use a soft and clean cloth to clean the tool. Never use alcohol or detergent. Disconnect the tool and remove the battery before cleaning.

## Service

Service to the tool shall only be carried out in a **TRUPER®** Authorized Service Center. Maintenance and service carried out by non-certified personnel may be dangerous and can cause personal injuries and makes the Warranty void.

# Environmental protection

Power devices and batteries shall not be discarded with household garbage. Please hand over this tool and the battery with the contacts insulated with electrical tape to a recycling facility. Verify the address of the nearest recycling site closest to your community.



# Authorized Service Centers



In the event of any problem contacting a **TRUPER®** Authorized Service Center, please see our webpage [www.truper.com](http://www.truper.com) to get an updated list, or call our toll-free numbers **800 690-6990** or **800 0187-8737** to get information about the nearest Service Center.

AGUASCALIENTES	<b>DE TODO PARA LA CONSTRUCCIÓN</b>	MORELOS	<b>FIX FERRETERÍAS</b>
	GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0537		CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CLAUTLA, MOR. TEL.: 735 352 8931
BAJA CALIFORNIA	<b>SUCURSAL TIJUANA</b>	NAYARIT	<b>HERRAMIENTAS DE TEPIC</b>
	AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100		MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540
BAJA CALIFORNIA SUR	<b>FIX FERRETERÍAS</b>	NUEVO LEÓN	<b>SUCURSAL MONTERREY</b>
	FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115		CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
CAMPECHE	<b>TORNILLERÍA Y FERRETERÍA AAA</b>	OAXACA	<b>FIX FERRETERÍAS</b>
	AV. ÁLVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808		AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUTXPEC, OAX. TEL.: 287 106 3092
CHIAPAS	<b>FIX FERRETERÍAS</b>	PUEBLA	<b>SUCURSAL PUEBLA</b>
	AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083		AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLACINGO, PUE. TEL.: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	<b>SUCURSAL CHIHUAHUA</b>	QUERÉTARO	<b>ARU HERRAMIENTAS S.A DE C.V.</b>
	AV. SILVESTRE TERRAZAS #12-111, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 614 434 0052		AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 5444
MÉXICO CITY	<b>FIX FERRETERÍAS</b>	QUINTANA ROO	<b>FIX FERRETERÍAS</b>
	EL MONSTRUO DE CORREDOR, CORREDOR # 22, COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX. TEL: 55 5522 5031 / 5522 4861		CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL. EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL.: 984 267 3140
COAHUILA	<b>SUCURSAL TORREÓN</b>	SAN LUIS POTOSÍ	<b>FIX FERRETERÍAS</b>
	CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL C.P. 27278, TORREÓN, COAH. TEL.: 871 209 68 23		AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL.: 444 822 4341
COLIMA	<b>BOMBAS Y MOTORES BYMTESA DE MANZANILLO</b>	SINALOA	<b>SUCURSAL CULIACÁN</b>
	BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL.: 314 332 1986 / 332 8013		AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
DURANGO	<b>TORNILLOS ÁGUILA, S.A. DE C.V.</b>	SONORA	<b>FIX FERRETERÍAS</b>
	MAZURIÓ #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO. TEL.: 618 817 1946 / 618 818 2844		CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 413 2392
ESTADO DE MÉXICO	<b>SUCURSAL CENTRO JILOTEPEC</b>	TABASCO	<b>SUCURSAL VILLAHERMOSA</b>
	AV. PARQUE INDUSTRIAL #1-A, C.P. 54240, JILOTEPEC, EDO. DE MÉX. TEL: 761 782 9101 EXT. 5728 Y 5102		CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 353 7244
GUANAJUATO	<b>CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V.</b>	TAMAULIPAS	<b>VM ORINGS Y REFACCIONES</b>
	AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 617 7578 / 79 / 80 / 88		CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
GUERRERO	<b>CENTRO DE SERVICIO ECLIPSE</b>	TLAXCALA	<b>SERVICIOS Y HERRAMIENTAS INDUSTRIALES</b>
	CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL: 747 478 5793		PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
HIDALGO	<b>FERREPRESOS S.A. DE C.V.</b>	VERACRUZ	<b>LA CASA DISTRIBUIDORA TRUPER</b>
	LIBERTAD ORIENTE #504 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616		BLVD. PRIMAVERA. ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
JALISCO	<b>SUCURSAL GUADALAJARA</b>	YUCATÁN	<b>SUCURSAL MÉRIDA</b>
	AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL VALLE, C.P: 45655, TLAJOMULCO DE ZÚÑIGA, JAL. TEL.: 33 3606 5285 AL 90		CALLE 33 #600 Y 602, LOCALIDAD ITZINCAZ Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451
MICHOACÁN	<b>FIX FERRETERÍAS</b>		
	AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858		

**Code**

12793

**Model**

ROTI-12AC

**Brand** **TRUPER®**

This product is guaranteed for 2 years. To make the warranty valid or purchase parts and components you must present the product in Corregidora 22, Col. Centro, Alc. Cuauhtémoc, CDMX C.P. 06060 or at the establishment where you purchased it, or at any Truper® Service Center listed in the annex to the warranty policy and/or in [www.truper.com](http://www.truper.com). Transportation costs resulting from compliance of this warranty will be covered by .

For questions or comments, call **800-690-6990**. Made in China. Imported by Truper S.A. de C.V. Parque Industrial 1, Jilotepec, Edo. de Méx. C.P. 54240

**2**  
**YEARS**

Stamp of the business. Date of purchase:

**Poliza de  
Garantía**

**• TRUPER®**

Código	Modelo	Marca	ROT-12AC	• TRUPER®	12793
--------	--------	-------	----------	-----------	-------

Este producto es la garantía por 2 años. Para hacer válida la garantía o adquirir piezas y componentes debes presentar el producto en Corregidora 22, Col. Centro, Alc. Cuauhtémoc, CDMX C.P. 06060 o en el establecimiento donde lo compró, o en algún Centro de Servicio Truper® de los establecidos en el anexo de la poliza de garantía y/o en [www.truper.com](http://www.truper.com). Los gastos de transporte que resulten para su cumplimiento serán cubiertos por •TRUPER®. Para dudas o comentarios, llame al 800-690-6990. Hecho en China. Importado por Truper S.A. de C.V. Parque Industrial 1, Jilotpec, Edo. de Méx. C.P. 54240



Sello del establecimiento comercial. Fecha de compra:

En caso de tener algún problema para contactar un Centro de Servicio Autorizado **TRUPER®**, consulte nuestra página [www.truper.com](http://www.truper.com) donde obtendrá un listado actualizado, o llame al: **800 990-6990** ó **800 0187-8737** donde le informarán cuál es el Centro de Servicio más cercano.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN	GRAL. BARRAGAN #120, COL. GEMINI, CP. 20030.	ACUACAS CUELENTE, AGS, TEL.: 449 994 0537.	BAJA CALIFORNIA	FIX FERRERIAS	TEL.: 669 993 500	FLORIDITO II, CP 22247, Tijuana, B.C.	CALIFORNIA SUR	CALLE 63 152 115	NUEVO LÉON	OAXACA	CARRETERA DE VERAQUERZ #100, COL. MONTERREY PARKS	AV. 20 DE NOVIEMBRE #910, COL. CENTRO, CP. 68300.	TUXTEPEC, OAX TEL.: 287 106 182	PUEBLA	SCURSIAL PIREBA	CP 22710, C.P. 72100, SAN LORENZO ALMECTLA,	TAPACHULA	CALLE 100, MEXICALI, MEXICALI #280, PARQUE INDUSTRIAL	COLIMA BOMBAZOS MOTORES BYMTESA DE MANZANILLO	TEL.: 341 352 1986 / 323 803	DURANGO TORNIOS AGUILA S.A. DE C.V.	TEL.: 341 352 1986 / 323 803	EDO. DE MEXICO INDUSTRIAL #1-A, CP. 4240, JILTEPEC	ESTADO MEXICO SUCURSAL SCURSIAL VILLAHERMOSA	TEL.: 667 175 1939 / 173 8400	SINALOA SCURSIAL CLILACUAN	AV. JESÚS POLITOS #1404, GUADALUPE, COL. HACIENDA DE LA	TEL.: 644 413 2392	SONORA FIX FERRERIAS	CALLE 5 DE FEBRERO #57, SUR LT 25 MZ. 10, COL.	CENTRAL, C.P. 83000, CDMX, D.F., 06001, COL. INDUSTRIAL,	GUANAJAUTO CIA. FERRERIA NUEVO MINDO S.A. DE C.V.	TEL.: 33 755 6615 / 755 753 6616	JALISCO SUCURSAL CUADALARA	TEL.: 33 590 2585 AL 90	MICHOACÁN FIX FERRERIAS	TEL.: 443 345 6858
CHIHUAHUA SUCURSAL CHIHUAHUA	TEL.: 55 552 050 / 552 4861	CALLE 100, MEXICALI, MEXICALI #280, PARQUE INDUSTRIAL	SPATRIMEX C.P. 28329 MANZANILLO, COL.	COAHUILA SUCURSAL TERRON	TEL.: 87 209 88 25	Tijuana, CDMX, TEL.: 761 782 910 EX 175 758 Y 808 / 88	CULIACÁN, SINALOA, TEL.: 461 617 7578 / 79 / 80 / 88	GUERRERO CENTRALES SERVICIOS DE C.P. 38101,	CALLE 100, MEXICALI, MEXICALI #200, COL. SANTA FE, C.P. 29101,	CHIHUAHUA SUCURSAL CHIHUAHUA	TEL.: 341 352 1986 / 323 803	DURANGO TORNIOS AGUILA S.A. DE C.V.	TEL.: 341 352 1986 / 323 803	EDO. DE MEXICO INDUSTRIAL #1-A, CP. 4240, JILTEPEC	ESTADO MEXICO SUCURSAL SCURSIAL VILLAHERMOSA	TEL.: 667 175 1939 / 173 8400	SINALOA SCURSIAL CLILACUAN	AV. JESÚS POLITOS #1404, GUADALUPE, COL. HACIENDA DE LA	TEL.: 644 413 2392	SONORA FIX FERRERIAS	CALLE 5 DE FEBRERO #57, SUR LT 25 MZ. 10, COL.	CENTRAL, C.P. 83000, CDMX, D.F., 06001, COL. INDUSTRIAL,	GUANAJAUTO CIA. FERRERIA NUEVO MINDO S.A. DE C.V.	TEL.: 341 352 1986 / 323 803	JALISCO SUCURSAL CUADALARA	TEL.: 33 590 2585 AL 90	MICHOACÁN FIX FERRERIAS	TEL.: 443 345 6858										
COAHUILA SUCURSAL CHIHUAHUA	TEL.: 61 434 0052	CALLE 100, MEXICALI, MEXICALI #200, PARQUE INDUSTRIAL	SPATRIMEX C.P. 28329 MANZANILLO, COL.	COAHUILA SUCURSAL TERRON	TEL.: 87 209 88 25	Tijuana, CDMX, TEL.: 761 782 910 EX 175 758 Y 808 / 88	CULIACÁN, SINALOA, TEL.: 461 617 7578 / 79 / 80 / 88	CULIACÁN, SINALOA	TEL.: 341 352 1986 / 323 803	DURANGO TORNIOS AGUILA S.A. DE C.V.	TEL.: 341 352 1986 / 323 803	EDO. DE MEXICO INDUSTRIAL #1-A, CP. 4240, JILTEPEC	ESTADO MEXICO SUCURSAL SCURSIAL VILLAHERMOSA	TEL.: 667 175 1939 / 173 8400	SINALOA SCURSIAL CLILACUAN	AV. JESÚS POLITOS #1404, GUADALUPE, COL. HACIENDA DE LA	TEL.: 644 413 2392	SONORA FIX FERRERIAS	CALLE 5 DE FEBRERO #57, SUR LT 25 MZ. 10, COL.	CENTRAL, C.P. 83000, CDMX, D.F., 06001, COL. INDUSTRIAL,	GUANAJAUTO CIA. FERRERIA NUEVO MINDO S.A. DE C.V.	TEL.: 341 352 1986 / 323 803	JALISCO SUCURSAL CUADALARA	TEL.: 33 590 2585 AL 90	MICHOACÁN FIX FERRERIAS	TEL.: 443 345 6858												
CHIAPAS FIX FERRERIAS	TEL.: 981 185 2008	CALLE 100, MEXICALI, MEXICALI #200, PARQUE INDUSTRIAL	SPATRIMEX C.P. 28329 MANZANILLO, COL.	COAHUILA SUCURSAL TERRON	TEL.: 87 209 88 25	Tijuana, CDMX, TEL.: 761 782 910 EX 175 758 Y 808 / 88	CULIACÁN, SINALOA, TEL.: 461 617 7578 / 79 / 80 / 88	CULIACÁN, SINALOA	TEL.: 341 352 1986 / 323 803	DURANGO TORNIOS AGUILA S.A. DE C.V.	TEL.: 341 352 1986 / 323 803	EDO. DE MEXICO INDUSTRIAL #1-A, CP. 4240, JILTEPEC	ESTADO MEXICO SUCURSAL SCURSIAL VILLAHERMOSA	TEL.: 667 175 1939 / 173 8400	SINALOA SCURSIAL CLILACUAN	AV. JESÚS POLITOS #1404, GUADALUPE, COL. HACIENDA DE LA	TEL.: 644 413 2392	SONORA FIX FERRERIAS	CALLE 5 DE FEBRERO #57, SUR LT 25 MZ. 10, COL.	CENTRAL, C.P. 83000, CDMX, D.F., 06001, COL. INDUSTRIAL,	GUANAJAUTO CIA. FERRERIA NUEVO MINDO S.A. DE C.V.	TEL.: 341 352 1986 / 323 803	JALISCO SUCURSAL CUADALARA	TEL.: 33 590 2585 AL 90	MICHOACÁN FIX FERRERIAS	TEL.: 443 345 6858												
CHIAPAS FIX FERRERIAS	TEL.: 981 185 2008	CALLE 100, MEXICALI, MEXICALI #200, PARQUE INDUSTRIAL	SPATRIMEX C.P. 28329 MANZANILLO, COL.	COAHUILA SUCURSAL TERRON	TEL.: 87 209 88 25	Tijuana, CDMX, TEL.: 761 782 910 EX 175 758 Y 808 / 88	CULIACÁN, SINALOA, TEL.: 461 617 7578 / 79 / 80 / 88	CULIACÁN, SINALOA	TEL.: 341 352 1986 / 323 803	DURANGO TORNIOS AGUILA S.A. DE C.V.	TEL.: 341 352 1986 / 323 803	EDO. DE MEXICO INDUSTRIAL #1-A, CP. 4240, JILTEPEC	ESTADO MEXICO SUCURSAL SCURSIAL VILLAHERMOSA	TEL.: 667 175 1939 / 173 8400	SINALOA SCURSIAL CLILACUAN	AV. JESÚS POLITOS #1404, GUADALUPE, COL. HACIENDA DE LA	TEL.: 644 413 2392	SONORA FIX FERRERIAS	CALLE 5 DE FEBRERO #57, SUR LT 25 MZ. 10, COL.	CENTRAL, C.P. 83000, CDMX, D.F., 06001, COL. INDUSTRIAL,	GUANAJAUTO CIA. FERRERIA NUEVO MINDO S.A. DE C.V.	TEL.: 341 352 1986 / 323 803	JALISCO SUCURSAL CUADALARA	TEL.: 33 590 2585 AL 90	MICHOACÁN FIX FERRERIAS	TEL.: 443 345 6858												
CHIAPAS FIX FERRERIAS	TEL.: 981 185 2008	CALLE 100, MEXICALI, MEXICALI #200, PARQUE INDUSTRIAL	SPATRIMEX C.P. 28329 MANZANILLO, COL.	COAHUILA SUCURSAL TERRON	TEL.: 87 209 88 25	Tijuana, CDMX, TEL.: 761 782 910 EX 175 758 Y 808 / 88	CULIACÁN, SINALOA, TEL.: 461 617 7578 / 79 / 80 / 88	CULIACÁN, SINALOA	TEL.: 341 352 1986 / 323 803	DURANGO TORNIOS AGUILA S.A. DE C.V.	TEL.: 341 352 1986 / 323 803	EDO. DE MEXICO INDUSTRIAL #1-A, CP. 4240, JILTEPEC	ESTADO MEXICO SUCURSAL SCURSIAL VILLAHERMOSA	TEL.: 667 175 1939 / 173 8400	SINALOA SCURSIAL CLILACUAN	AV. JESÚS POLITOS #1404, GUADALUPE, COL. HACIENDA DE LA	TEL.: 644 413 2392	SONORA FIX FERRERIAS	CALLE 5 DE FEBRERO #57, SUR LT 25 MZ. 10, COL.	CENTRAL, C.P. 83000, CDMX, D.F., 06001, COL. INDUSTRIAL,	GUANAJAUTO CIA. FERRERIA NUEVO MINDO S.A. DE C.V.	TEL.: 341 352 1986 / 323 803	JALISCO SUCURSAL CUADALARA	TEL.: 33 590 2585 AL 90	MICHOACÁN FIX FERRERIAS	TEL.: 443 345 6858												
CHIAPAS FIX FERRERIAS	TEL.: 981 185 2008	CALLE 100, MEXICALI, MEXICALI #200, PARQUE INDUSTRIAL	SPATRIMEX C.P. 28329 MANZANILLO, COL.	COAHUILA SUCURSAL TERRON	TEL.: 87 209 88 25	Tijuana, CDMX, TEL.: 761 782 910 EX 175 758 Y 808 / 88	CULIACÁN, SINALOA, TEL.: 461 617 7578 / 79 / 80 / 88	CULIACÁN, SINALOA	TEL.: 341 352 1986 / 323 803	DURANGO TORNIOS AGUILA S.A. DE C.V.	TEL.: 341 352 1986 / 323 803	EDO. DE MEXICO INDUSTRIAL #1-A, CP. 4240, JILTEPEC	ESTADO MEXICO SUCURSAL SCURSIAL VILLAHERMOSA	TEL.: 667 175 1939 / 173 8400	SINALOA SCURSIAL CLILACUAN	AV. JESÚS POLITOS #1404, GUADALUPE, COL. HACIENDA DE LA	TEL.: 644 413 2392	SONORA FIX FERRERIAS	CALLE 5 DE FEBRERO #57, SUR LT 25 MZ. 10, COL.	CENTRAL, C.P. 83000, CDMX, D.F., 06001, COL. INDUSTRIAL,	GUANAJAUTO CIA. FERRERIA NUEVO MINDO S.A. DE C.V.	TEL.: 341 352 1986 / 323 803	JALISCO SUCURSAL CUADALARA	TEL.: 33 590 2585 AL 90	MICHOACÁN FIX FERRERIAS	TEL.: 443 345 6858												
CHIAPAS FIX FERRERIAS	TEL.: 981 185 2008	CALLE 100, MEXICALI, MEXICALI #200, PARQUE INDUSTRIAL	SPATRIMEX C.P. 28329 MANZANILLO, COL.	COAHUILA SUCURSAL TERRON	TEL.: 87 209 88 25	Tijuana, CDMX, TEL.: 761 782 910 EX 175 758 Y 808 / 88	CULIACÁN, SINALOA, TEL.: 461 617 7578 / 79 / 80 / 88	CULIACÁN, SINALOA	TEL.: 341 352 1986 / 323 803	DURANGO TORNIOS AGUILA S.A. DE C.V.	TEL.: 341 352 1986 / 323 803	EDO. DE MEXICO INDUSTRIAL #1-A, CP. 4240, JILTEPEC	ESTADO MEXICO SUCURSAL SCURSIAL VILLAHERMOSA	TEL.: 667 175 1939 / 173 8400	SINALOA SCURSIAL CLILACUAN	AV. JESÚS POLITOS #1404, GUADALUPE, COL. HACIENDA DE LA	TEL.: 644 413 2392	SONORA FIX FERRERIAS	CALLE 5 DE FEBRERO #57, SUR LT 25 MZ. 10, COL.	CENTRAL, C.P. 83000, CDMX, D.F., 06001, COL. INDUSTRIAL,	GUANAJAUTO CIA. FERRERIA NUEVO MINDO S.A. DE C.V.	TEL.: 341 352 1986 / 323 803	JALISCO SUCURSAL CUADALARA	TEL.: 33 590 2585 AL 90	MICHOACÁN FIX FERRERIAS	TEL.: 443 345 6858												



Los aparatos eléctricos y las baterías no deben desecharse junto con los desperdicios domésticos. Por favor, entregue este aparato, así como sus baterías con los contactos alisados con tela adhesiva a un centro de reciclaje. Verifique que la ubicación del centro más cercano a su comunidad.

## Solución de problemas

### Problema Causa Solución

- El gatillo no se puede apretar. La posición de dirección de giro se encuentra en el gatillo de reversa.
- Mueva el botón de dirección de giro a la posición de giro o reverse.
- Cargue la batería.
- Batería descarregada.
- El regulador está ajustado en un torque inadecuado.
- Afloje el regulador a un torque que permite el tabique. Puede con el siguiente nivel de torque.

- La batería gotea.
- Goteo durante la operación.
- El goteo interrumpido o muy evidente es debido a una batería dañada.
- El regulador es extremadamente sensible al uso normal.
- Limpie el immedio con agua y jabón el líquido de la ropa.

- La batería no se enciende.
- Batería mal colocada en el cargador.
- Invierte corredores la batería la batería se enciende al tocarla.
- Permite que el taladro se enfrie por espacio de 5 minutos.
- La batería se calienta. • Este calentamiento es normal, la energía que dura la batería se calienta.

- La batería se calienta. • Este calentamiento es normal, la energía que dura la batería se calienta.
- Durante la operación, se extrae de la batería mientras el taladro está durante la operación. • Este calentamiento es normal, la energía que dura la batería se calienta.

- El cargador se calienta durante la regulación de temperatura. • Este calentamiento es normal, resultado de la regulación de temperatura.
- El cargador se calienta durante la regulación de temperatura.

- El servicio de las herramientas debe ser realizado únicamente en el Centro de Servicio Autorizado TRUPER. El servicio y mantenimiento realizado por personas no calificadas puede resultar peligroso y generar daños permanentes al producto.
- Mantenga las ventosas limpias y libres de obstrucciones para garantizar un funcionamiento adecuado del motor.
- Los servicios regulares todos los tornillos de montaje y aseguradores de los tornillos de montaje.
- Para garantizar un funcionamiento adecuado del motor.
- El servicio de las herramientas debe ser realizado únicamente en el Centro de Servicio Autorizado TRUPER. El servicio y mantenimiento realizado por personas no calificadas puede resultar peligroso y generar daños permanentes al producto.

### Servicio

### Limpieza y cuidados

## Mantenimiento

- Use un paño limpio y seco para limpiar la herramienta.
- Nunca use alcohol o detergente. Desconecte la herramienta y remueva la batería antes de limpiarla.
- Use un paño limpio y seco para limpiar la herramienta.
- Los servicios regulares todos los tornillos de montaje y aseguradores de los tornillos de montaje.
- Mantenga las ventosas limpias y libres de obstrucciones para garantizar un funcionamiento adecuado del motor.
- Los servicios regulares todos los tornillos de montaje y aseguradores de los tornillos de montaje.
- Mantenga las ventosas limpias y libres de obstrucciones para garantizar un funcionamiento adecuado del motor.
- Use un paño limpio y seco para limpiar la herramienta.
- Nunca use alcohol o detergente. Desconecte la herramienta y remueva la batería antes de limpiarla.
- Use un paño limpio y seco para limpiar la herramienta.



**Solución de problemas**

- Use la velocidad adecuada cada tarea; no retre de perder a un velocípedo más que a un velocípedo.
  - Si la operación sobreagrega el tráiler, extraigale y devuélvelo a la operación que lo pidió.
  - Use bases velocípedes para mover mercancías donde no hay punto de apoyo, sobre plástico o madera, al revés.
  - Use bases velocípedes para mover mercancías donde no hay punto de apoyo, sobre plástico o madera, al revés.
  - Peforar certeza en la aplicación de la velocidad máxima de vida de su tráiler, use el control de velocidad variable.

## Recomendaciones adicionales

• Cuando rate el peñoncito de diametros grandes, siempre se mueren insectos con una boca desgada y después caen tambien con una del tamano redondito. Esto y con reguilladito del minitas pectoral, para que la virtute quede ser expulsada de su boca.

• Al finalizar un oficios profundos resulta la broca solo un poco dentro la losa de la piedra.

• Y cuando rate el oficio de profundos resulta la broca solo un poco dentro la losa de la piedra.


■ ATENCIÓN! Si la broca se atasca, suetele el imeruptor inmediatamente para prevenir daños alrededor de la herramienta. Mantenga el labrador invirtiendo el sentido de operacion. Intente desascar la broca de la herramienta.

■ La broca es afilada o inciso que rompe la piedra de forma angular es camabio de procedimientos de trabajo. Si el angulo es demasiado durante el proceso de trabajo, la broca se rompera.

■ Debera tener siempre preparado el procedimiento de limpieza de la broca de oficio. Idealmente, la broca debe ser limpiada en la herramienta.

■ Alrededor de la herramienta, mantenga el sentido de operacion. Mantenga el sentido de operacion.

laladar

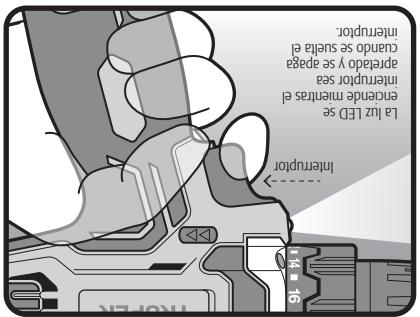

## Atornililar - desatornililar

- El interruptor es útil equipado también con una función de temporizador operada el relé. La función de temporizador es útil para dar una señal extra un tramo de tiempo. Una vez que se activa la señal de gálibo, el relé se desactiva de inmediato, y podrás utilizarlo como temporizador para manual para dar una señal extra un tramo de tiempo.


- El interruptor le permite seleccionar la velocidad adecuada para cada tarea. Mientras más aprilete el interruptor, más

#### **Encendido y control de operación**

**ATENCION** El nivle de torque necesario depender de tipo de tornillo a usar y del material sobre el cual se trabaje. Si tiene duda use un menor torque incremento gradualmente hasta lograr el adecuado. Un torque adecuado evita daños a la herramienta.







### Ajuste de torque

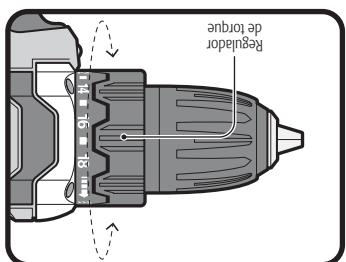

# Puesta en marcha

**TRUPER®**

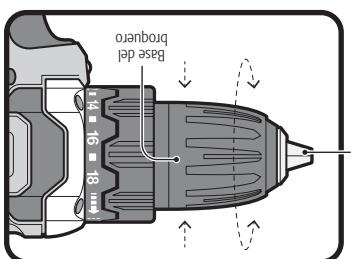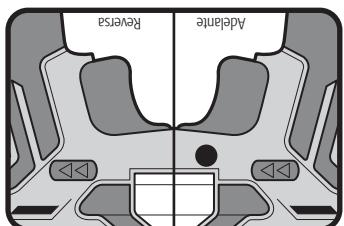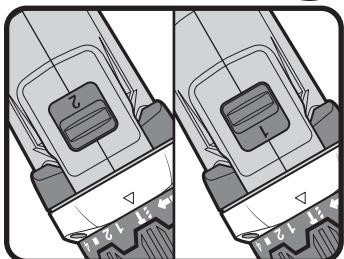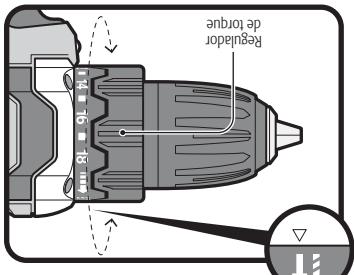

La batería tiene DESCARCADA de fábrica. Seña necesario que la cargue por aproximadamente 1 hora antes de poder usarla. La temperatura normal de carga es de 0 °C / 45 °C. Fuera de este rango se suspende la carga automáticamente hasta que la batería esté debajo de la tensión normal durante el trabajo, la herramienta dejará de funcionar.

La temperatura normal de carga es de 0 °C / 45 °C. Fuera de este rango se suspende la carga automáticamente hasta que alcance la temperatura correcta. La temperatura normal de descarga / tabla es de 0 °C / 75 °C. Si los 75 °C se exceden, el control electrónico apaga la energía de la herramienta hasta que la temperatura alcance de nuevo el rango óptimo de temperatura.

### Consideraciones para el uso de la batería

• Para proteger la herramienta en el modo de IMPACTO. De lo contrario reducirá la eficiencia de la herramienta, y dañaría la punta de la broca.

**A ADVERTENCIA** • No intente perforar metal, madera o plástico duro con un rotomartillo en la posición de IMPACTO (■). La broca daña impactos sobre el metal, gira el regulador de torque a la posición de IMPACTO (■). La broca gira el regulador de torque a la posición de IMPACTO (■).

• Para perforar hormigón, piedra baldosa o materiales de dureza similar.

### Cambio de rotomartillo a taladro

• La broca de taladro corta más rápido la madera o metal delgado.

• El taladro ofrece una mayor revoluciones por minuto, lo hará que la broca sea en metal o madera. Esto aumenta la velocidad de rotación, ya que esta velocidad cuando empuja a la herramienta oficiales grandes, ya sea en madera o metal.

• La velocidad baja (1) es adecuada para aplicar polvo de tala.

• La velocidad similar a las que se usa en los autos.

• Las dos velocidades con que cuenta el rotomartillo funcionan de

### Selección de velocidad

• La velocidad es encuadrada en función de la dirección mientras que representa ningún problema.

**A ATENCIÓN** • La primera vez que encienda el taladro después de moverse o rotar, puede escuchar un clic. Esto es normal y no implica un problema.

**A ATENCIÓN** • El interruptor se bloquee si el botón está en la posición de inversor de velocidad, preste atención al lado contrario.

• Para invertir el sentido de rotación, presione el lado contrario.

• Para invertir el sentido de rotación, suelte el interruptor y presione de nuevo el lado contrario.

• Para perforar y atornillar, suelte el interruptor y presione el botón de

### Dirección de rotación

• Sujete el mango firmemente con una mano y con la otra, gire la base del brocado en sentido contrario a la del reloj para asegurar la broca.

• Gire la base del brocado en sentido de las manecillas del reloj para asegurar la broca.

• Inserte la broca hasta el top de la herramienta sea el caso.

• Inserte la base del reloj, para que las mordazas se aflojen.

• Sujete la base del brocado en sentido contrario a las manecillas del reloj, para que las mordazas se aprieten.

• Sujete el mango firmemente con una mano y con la otra,

### Instalación de brocas o adaptadores

• Cierre la base del brocado en sentido contrario a la del reloj para asegurar la broca.

• Inserte la broca hasta el top de la herramienta sea el caso.

• Inserte la base del reloj, para que las mordazas se aflojen.

• Sujete la base del brocado en sentido contrario a las manecillas del reloj, para que las mordazas se aprieten.


• Sujete el mango firmemente con una mano y con la otra,

- Si la batería es de temperatura ambiente, reemplácela por una nueva.
- Si la batería es de temperatura ambiente, enciéndela para cargarla.
- Desconecte el adaptador de la corriente una vez apagada.
- Cargando la batería se encenderá completamente.
- Una vez que la batería esté completamente cargada, la rote 90° para indicar que la carga se ha finalizado.
- La luz verde se apagará y la luz roja deberá encenderse.
- Una vez que la batería esté completamente cargada, inserte la batería en el cargador insertándola como se muestra en la imagen.
- Coloque la clavija del adaptador en un tomacorriente de 12V~, la luz verde del indicador de carga se encenderá.
- Una vez que la batería esté completamente cargada, desenchufela del adaptador.
- Desconecte el adaptador de la corriente una vez apagada.
- Encienda la lámpara en el cargador insertándola como se muestra en la imagen.
- Una vez que la batería esté completamente cargada, la rote 90° para indicar que la carga se ha finalizado.
- Una vez que la batería esté completamente cargada, la luz roja se apagará y la luz verde se encenderá.
- Una vez que la batería esté completamente cargada, desenchufela del adaptador.
- Desconecte el adaptador de la corriente una vez apagada.

2


TRUPER

12V

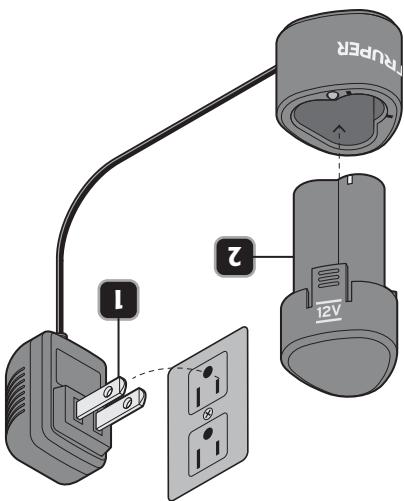

### Carga de la batería

## Puesta en marcha

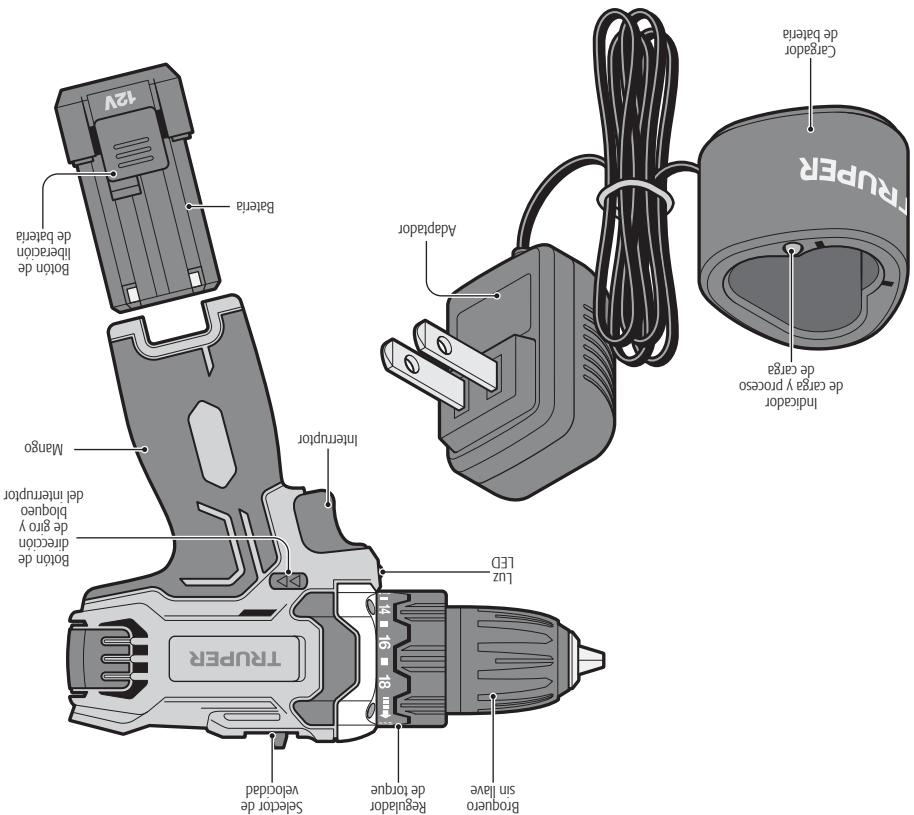

## Partes

**TRUPER®**






**ADVERTENCIA** Al operar herramientas eléctricas en exteriores, utilice una extensión especializada marca como "uso exterior" marca **VOLTEC**. Estas extensiones son apropiadas para el uso en exteriores y reducen el riesgo de sufrir una descarga eléctrica.



AWG = Calibre de alambre estandarizado (American Wire Gauge). Referencia: NM-B-15-ANCE. \* Se permite utilizarlo siempre y cuando las extensiones más cortas contienen un terminal de protección contra sobrecorriente.

de 0 A hasta 10 A	18 AWG(*)	16 AWG	14 AWG	12 AWG	10 AWG	8 AWG	6 AWG	de 15 A hasta 20 A
de 10 A hasta 13 A	3 (uno a tierra)							de 13 A hasta 15 A
de 15 A hasta 20 A								
de 18 A hasta 25 A								
de 25 A hasta 30 A								

**ADVERTENCIA** Al usar un cable de extensión, asegúrese de usar el calibre suficiente para transportar la corriente que consumirá su herramienta. Un cable inferior o de menor diámetro que el necesario resultará en una caída de tensión en la línea, teniendo como resultado una pérdida de potencia y sobrecalentamiento del motor. La siguiente tabla muestra el tamaño correcto que debe usarse dependiendo de la longitud del cable y de la corriente que se necesita para la herramienta. Si tiene dudas use el siguiente calibre más alto.

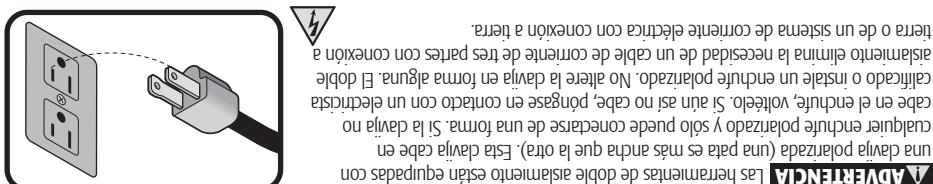

## Requerimientos eléctricos

**ADVERTENCIA** Antes de obtener acceso a las ferramentas, todos los circuitos de alimentación deben ser desconectados.

La construcción del sistema eléctrico de esta herramienta es diferente a la mayoría, líquidos y/o humedad. Autorizado **ROTUEP**, con el fin de evitar algún riesgo de desgarra o accidente considerable.

**ADVERTENCIA** Si el cable de alimentación se daña, este debe ser reemplazado por el fabricante o Centro de Servicio autorizado.


El cable de alimentación tiene sujetacables tipo Y. La clase de aislamiento térmico de los devanados del cargador: Clase E

Cargador	Entrada: Tensión: 127 V~	Frecuencia: 60 Hz	Salida: 12 V= 1.5 A	Potencia: 25 W
Batería	Lion-Lito 12 V= 2 Ah   Tiempo de carga: 100 minutos aproximadamente			
Alislamiento	Clase II	Clase IIP	•	
Capacidad de perforación	Concrete: 9.5 mm (3/8")   madera: 19 mm (3/4")   metal: 9.5 mm (3/8")			
Torque	18 + 2 función			
Rotación	adelante - reversa			
Velocidad	Posición 1: 0 - 350 r/min	Y	0 - 20 000 golpes por minuto	
Tensión	12 V=			
Broqueiro	9.5 mm (3/8") sin llave			
Descripción	Rotomartillo / taladro / destornillador inalámbrico			
Codigo	12793			

ROTI-12AC

Especificaciones técnicas

**ROTUEP**®

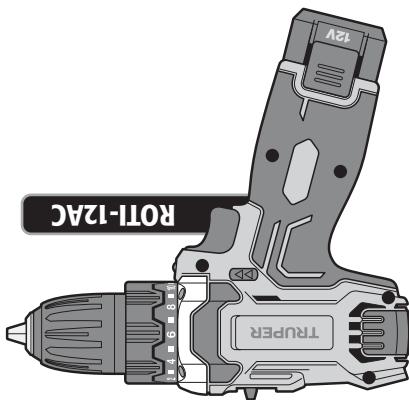

Para poder sacar el máximo provecho de la herramienta, alargar su vida útil, hacer válida la garantía en caso de ser necesario y evitar riesgos o lesiones graves, es fundamental leer este instructivo por completo antes de usar la herramienta.

Guardé este instructivo para futuras referencias.

Los gráficos de este instructivo son para referencia, pueden variar del asunto real de la herramienta.

- |    |  |
|----|--|
| 12 | Póliza de Garantía.  |
| 11 | Centros de Servicio Autorizados.   |
| 10 | Notas.   |
| 6  | Protección ambiental.  |
| 6  | Mantenimiento.   |
| 6  | Solución de problemas.   |
| 9  | Pluesta en marcha.   |
| 6  | Partes.  |
| 5  | Advertencias de Seguridad para uso de rotomartillos-taladros desatilladores. |
| 4  | Advertencias Generales de Seguridad para herramientas eléctricas.            |
| 3  | Requerimientos técnicos.   |
| 3  | Especificaciones técnicas.   |

# ATENCIÓN


## Indice

# TRUPER®



Lea este instructivo por completo  
antes de usar la herramienta.

**ATENCIÓN**

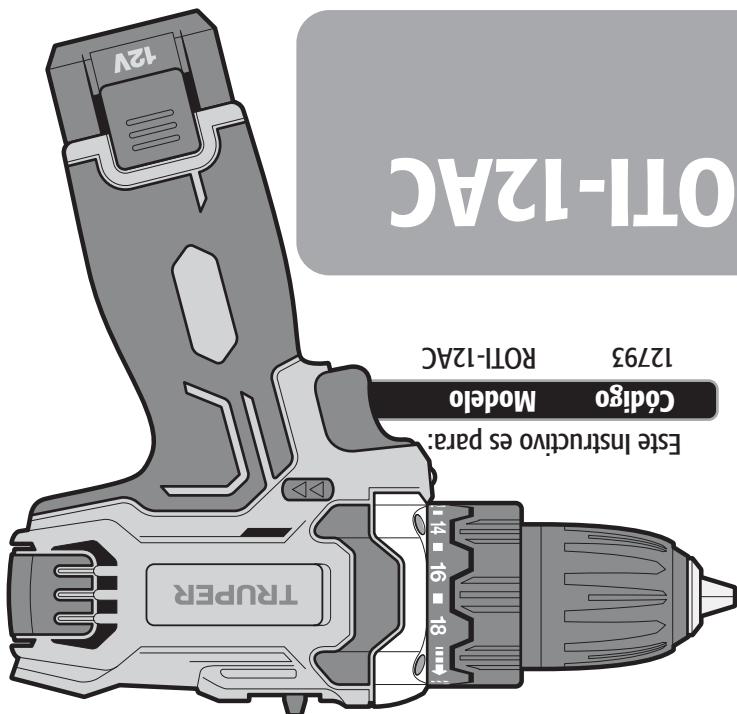

12793 ROTI-12AC

Codiglo Modelo

Este instructivo es para:

12 V = **3/8"**  
9.5 mm Tensión Broqueo

# Rotomartillo / taladro / destornillador inalámbrico

Instructivo de

**TRUPER®**

ESPAÑOL  
ENGLISH