

Manual

# Trimmer / Edger

# DES-1000

**1.3 Hp**  
Power

Applies for:

Code	Model
13521	DES-1000



Read the user's manual thoroughly  
before operating this tool.



Technical Data .....	3
Power Requirements .....	3
 General Power Tool Safety Warnings .....	4
 Safety Warnings for Power Trimmers .....	5
Parts .....	6
Mounting .....	6
Start Up .....	8
Maintenance .....	9
Troubleshooting .....	9
Notes .....	10
Authorized Service Centers .....	11
Warranty Policy .....	12

## CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

## Use and care recommendations



In order not to damage the product, it is recommended to use a **16 AWG - HEAVY DUTY EXTENSION CORD** (not included).



**ALWAYS USE the GUARD. USE THREAD** with diameter from 0.062"



Perform periodic **MAINTENANCE** to your machine (page 9).

## DES-1000

<b>Code</b>	•	13521
<b>Description</b>	•	Trimmer / Edger
<b>Voltage</b>	•	127 V~
<b>Frequency</b>	•	60 Hz
<b>Current</b>	•	8 A
<b>Power</b>	•	1.3 Hp
<b>Speed</b>	•	7500 RPM
<b>Cutting Capacity</b>	•	14"
<b>Cutting String Diameter</b>	•	0.062"
<b>Work Cycle</b>	•	50 minutes' work per 20 minutes' rest. Maximum 6 hours daily.
<b>Conductors</b>	•	18 AWG x 2C with 194 °F insulation temperature.
<b>Insulation</b>	•	Class II      IP Grade •      IP20

Power Cord Grips used is: Type "Y".  
 Tool Build Quality: Reinforced Insulation  
 Thermal insulation on motor winding: Class E

**WARNING** Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a TRUPER® Authorized Service Center. The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use. Do not expose to rain, liquids and/or dampness.


**WARNING** Before gaining access to the terminals all power sources should be disconnected.



## Power Requirements

Before using a power cord or any other additional flexible cable verify it is not showing damage or abuse. DO NOT use the tool if the power cord is damaged or abused. If the cord gets damaged during use, disconnect it from the power supply immediately. DO NOT TOUCH THE POWER CORD BEFORE DISCONNECTING FROM THE POWER SUPPLY.

**WARNING** Tools with double insulation and reinforced insulation are equipped with a polarized plug (one prong is wider than the other). This plug will only fit in the right way into a polarized outlet. If the plug cannot be introduced into the outlet, reverse the plug. If it still doesn't fit, call a qualified electrician to install for you a polarized outlet. Do not alter the plug in any way. Both insulation types eliminates the need of both a grounded third power cord with three prongs or a grounded power connection.

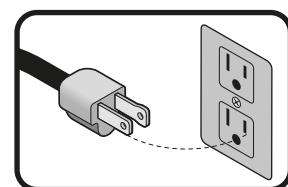

**WARNING** When using an extension cable, verify the gauge is enough for the power that your product needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and overheating. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

<b>Ampere Capacity</b>	<b>Number of Conductors</b>	<b>Extension Gauge</b>	
		From 6 ft to 49 ft	Higher than 49 ft
From 0 and up to 10 A	3 (one grounded)	18 AWG	16 AWG
From 10 and up to 13 A		16 AWG	14 AWG
From 13 and up to 15 A		14 AWG	12 AWG
From 15 and up to 20 A		8 AWG	6 AWG

\* It is safe to use only if the extensions have a built-in artifact for over current protection.  
 AWG = American Wire Gauge - Reference NMX-J-195-ANCE

**WARNING** When operating power tools outdoors, use a VOLTECK grounded extension cable labeled "For Heavy Duty". These extensions are especially designed for operating outdoors and reduce the risk of electric shock.





**⚠️ WARNING! Read carefully all safety warnings and instructions listed below.** Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. **Save all warnings and instructions for future references.**

#### Work area

Keep your work area clean, and well lit.

Cluttered and dark areas may cause accidents.



Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

Sparks generated by power tools may ignite the flammable material.



Keep children and bystanders at a safe distance while operating the tool.

Distractions may cause loss of control.



#### Electrical Safety

The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.



Modified plugs and different power outlets increase the risk of electric shock.

Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

#### Personal safety

Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.

A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.



Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

**Do not overreach. Keep proper footing and balance at all times.**

This enables a better control on the tool during unexpected situations.

Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.

Loose clothes or long hair may get caught in moving parts.



If you have dust extraction and recollection devices connected onto the tool, inspect their connections and use them correctly.

Using these devices reduce dust-related risks.

#### Power Tools Use and Care

Do not force the tool. Use the adequate tool for your application.



The correct tool delivers a better and safer job at the rate for which it was designed.

**Do not use the tool if the switch is not working properly.**

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.

These measures reduce the risk of accidentally starting the tool.

Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.



Power tools are dangerous in the hands of untrained users.

Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.

Most accidents are caused due to poor maintenance to the tools.



Keep the cutting accessories sharp and clean.

Cutting accessories in good working conditions are less likely to bind and are easier to control.

Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

#### Service

Repair the tool in a **TRUPER®** Authorized Service Center using only identical spare parts.

This will ensure that the safety of the power tool is maintained.



Children or people with reduced physical, sensory or mental capabilities shall not operate the tool, neither inexperienced people or without knowledge in the use of the tool, unless supervised by a person responsible of their safety or if receiving previous instructions about the tool operation.

Children shall be kept under supervision to double-check they will not play with the tool. Tight supervision shall be used with children or disabled persons to prevent from using or being close to any household tool.



This tool is in compliance with  
the Official Mexican Standard  
(NOM - Norma Oficial Mexicana).

# Safety Warnings for Power Trimmers



## Before operating the trimmer

- ⚠ CAUTION** • It is recommended that the trimmer is connected by means of a Residual current device (RCD) with a cutting current no higher than 30 mA
- Read the instructions carefully. Familiarize yourself with the controls and the proper use of the equipment.
  - Keep the additional flexible cord away from the cutting elements.
  - Wear eye protection.
  - Never allow children or people not familiarized with the equipment to use it.
  - Do not use the equipment while there people around, especially children or pets.
  - Use the equipment only in daylight or where there is good lighting.
  - Never operate the machine with a damaged guard or protection, or without guards and protections in place
- Switch on the motor only when the hands and feet are away from the cutting elements.
- Never assemble metal cutting elements.
  - Use only replacement parts and accessories recommended by the manufacturer.
  - Always disconnect the device from the power supply when not in use.
  - Disconnect the equipment from the power source before doing maintenance or cleaning.
  - Inspect and provide regularly maintenance to the unit. The equipment must only be repaired in an authorized distribution center.
  - Take care of not hurting with the knives used for adjusting the line length. After placing a new cutting line, put the tool back to its normal position before turning it on again.
  - Make sure that the ventilation holes are free of waste.
  - When not using the device, keep it away from the reach of the infants.
- ⚠ CAUTION** • Carefully inspect the area to cut, to avoid any obstacle and remove any foreign object that could be thrown out by the trimmer. Otherwise, you could cause an accident and the useful life of the trimmer can be reduced.
- ⚠ CAUTION** • The area to cut should be well illuminated.
- ⚠ CAUTION** • Double-check every part in the trimmer is in excellent working condition and the cutting string is correctly set. Inspect the ventilation slots are free of debris. Refrain from using the trimmer if the guard is damaged or has missing parts.
- ⚠ WARNING** • Use only the original nylon string and for no reason at all replace it with metal string.
- For best results it is recommended to use only original thread replacements such as: HTA-65B, HIDE-65P, HTA-65 and HDU-15-65 Truper® brand.

• Remember this tool is designed to cut grass as indicated in this Manual. For no reason at all it can be used for a different purpose.

**⚠ WARNING** • To prevent from electric shock refrain from working in humid environments, such as when is raining or there is dew on the grass.



## While operating the trimmer

**⚠ CAUTION** • Do not operate the trimmer close to passersby, children or animals.

**⚠ WARNING** • Never set the cutting head above 11.8" of height and do not aim it towards people or animals.

**⚠ WARNING** • Use the trimmer only to cut at ground level. For no reason at all use it to cut vegetation on stones or walls.

**⚠ CAUTION** • Do not walk on gravel when the trimmer is running. The cutting string might shoot out gravel pieces towards the user or passersby causing injuries.

**⚠ CAUTION** • To prevent the cutting string damaging the cable always keep the trimmer's power cable visible.


**⚠ WARNING** • Refrain from putting your hands or feet close to the cutting head while the tool is running.

**⚠ DANGER** • In case of working close to transit roads stop cutting until there are no vehicles on sight. The trimmer could shoot debris towards the moving vehicles, thus causing a severe accident.

## After operating the trimmer

**⚠ WARNING** • Cutting elements continue to rotate after the engine is turned off

- Do not try to stop the cutting string's rotating movement in any other way than releasing the switch. Wait until the spool comes to a complete stop after releasing the switch, this takes a few seconds.

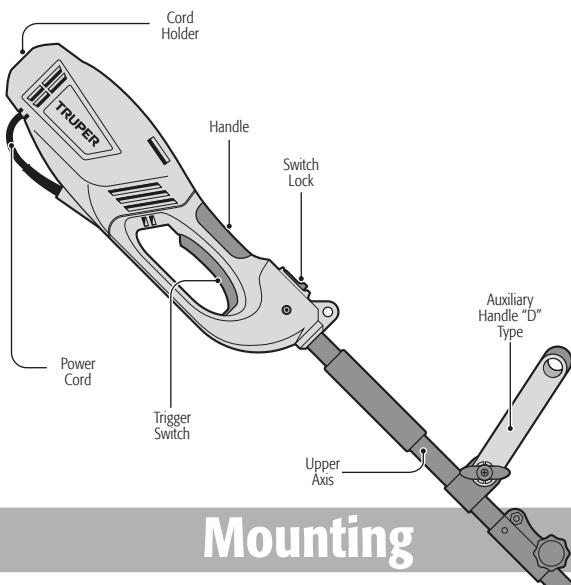

Safety alerts.



Read the Manual before operating the machine.



Wear hearing protection.



Wear safety eyeglasses.



Clear the area where the grass will be cut from objects which could get shot out. Keep people and animals away from the cutting area.



Keep away from children's reach.



In the event the power cable gets damaged disconnect the plug immediately.




Do not expose to humidity.

## Mounting





### Curved Axis

- Insert the curved axis (**A**) in the mount (**B**) matching the orifice (**C**) in the mount with the curved axis.
- Double check the curved axis' flexible shaft matches correctly inside the adapter (**D**) in the upper handle.
- Tighten the knob (**E**) to block the curved axis in place.

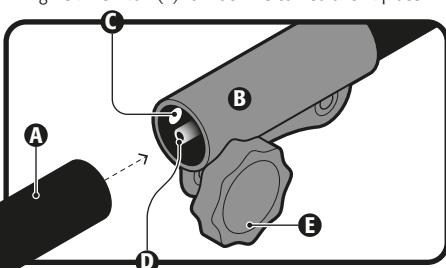

### Auxiliary Handle Type "D"

- Install the auxiliary handle as shown in the image.
- Move the auxiliary handle by the upper axis into a height adequate to operate the trimmer.
- Tighten the knob to secure the position and angle in the auxiliary handle.

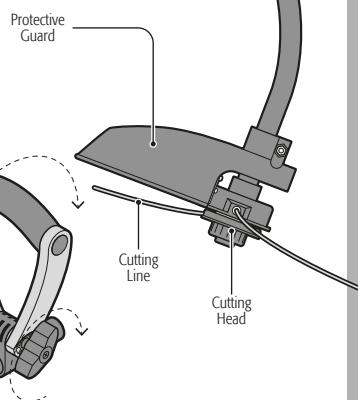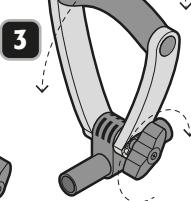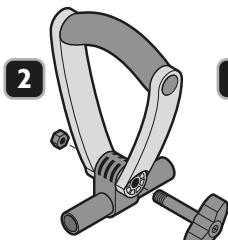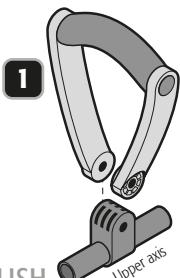


# Mounting

 TRUPER®

## Guard

- Install the guard as shown in the image.
- Remember to correctly install the guard before turning ON the trimmer.

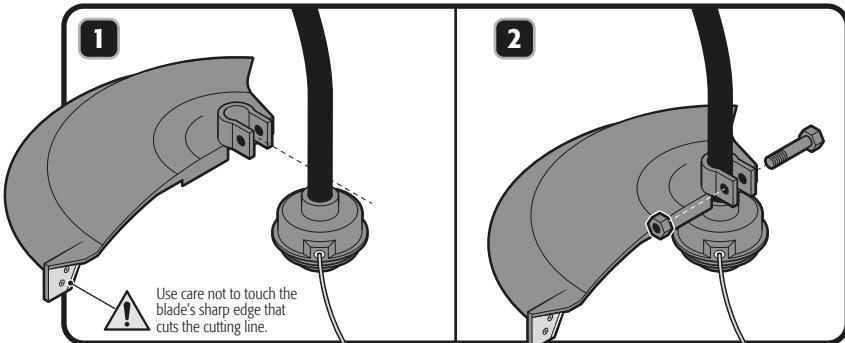


## Cutting line spool

- Having the trimmer OFF and disconnected, remove the spool retention cap (**F**) turning in a counterclockwise direction.
- Remove the empty spool. Make sure is clean and there are no damaged or worn parts.
- Cut a 10 ft length of line.
- Bend the line to the middle of the length and insert in the notch.
- Hold both lines and thread in the direction indicated in the arrow on the spool. Double check each length of line is threaded in the respective section. (upper and lower). Do not thread too much line. After threading, there must be a 0.24" minimum distance between the spool edge and the threaded line.
- Leave unthreaded 6" approximately of both lengths of line and insert the upper section line in one of the notches in the spool cover. Give half a turn more to the spool and insert the line in the lower section in the opposite notch of the spool cover.


This measure is to prevent the line to get unthreaded while installing the spool in the trimmer. Further on, the threads shall be released from the notches.

- Set back the spool in its cover (**H**) passing each line ends through the orifices in the cover. If the line is released or tangled in this step, thread it again in the spool and secure in its notches.
- Pull outwards and apply force to both ends of the cutting line to release it from the notches in the upper side of the spool.
- Set the spool with its cover into the impulsion axis (**I**) and push the spool towards the axis to make the threaded edge stick out. Secure it with the retention cap (**F**).
- When setting a new spool, release the tips of the lines from the notches and unthread 6" approximately of both lines to secure them back in their notches before setting the spool into the cover.
- We recommend using 0.062" diameter, model HDU-15-65, HTA-65, HTA-65B, HIDE-65P cutting lines.

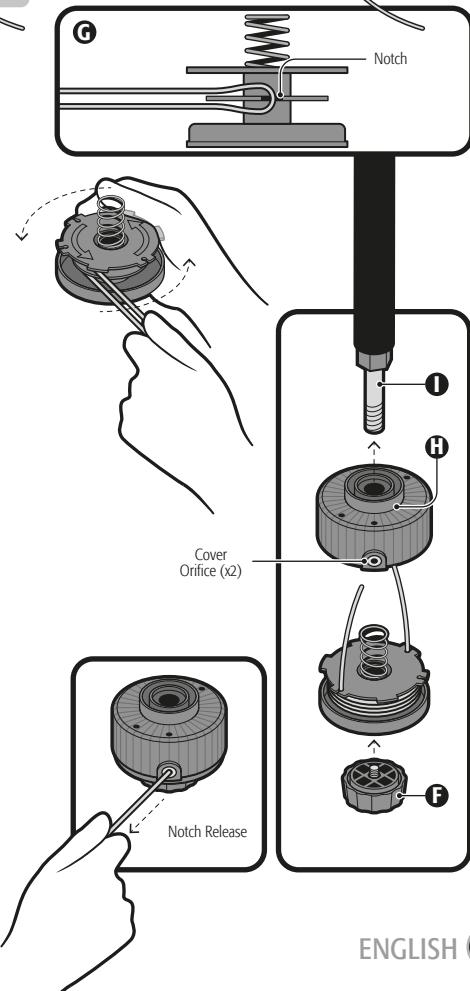




## Turning ON

- Make a loop (**A**) in the end of a **VOLTECK** brand grounded extension cable labeled "Heavy Duty" and secure through the fastener as shown in image (**B**).
- Connect the trimmer to the extension cable as shown in the figure.
- Stretch perfectly the extension cable to prevent obstacles.
- Connect the extension cable to a power outlet with the voltage specified for the trimmer.
- As an additional safety measure, use a current break (not included) if there are voltage peaks of 30 mA or less.
- To turn ON the trimmer press the switch lock (**C**) together with the switch (**D**). The switch lock prevents accidental startups.
- To turn it OFF, release the switch.

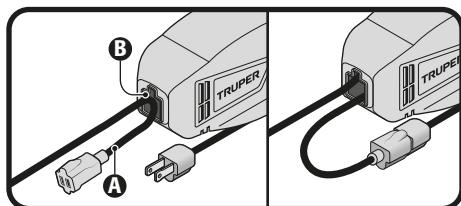


## Operation

- CAUTION** • Remember that you as the trimmer operator are responsible of your own safety as well as those close to the work area. Follow all safety standards (pages 4 and 5) before operating the tool.
- Keep good footing with both feet firmly set onto the ground.
  - Hold the trimmer firmly in front of you. One hand shall be positioned on the handle and the other, onto the auxiliary handle so that the tool is aligned to your body and pointing the cutting head 30° towards the ground and away from your feet.
  - DANGER** • Do not start or operate the trimmer in any other position.
  - Turn ON the trimmer and carry out cuts from left to right and rotating the waist keeping the tool position.
  - As the grass is trimmed, the cutting line wears out and will finally be detached. to release more line out from the spool, press the trimmer a little downwards so that the ground presses the retention cap against the spool and will release more line. The remaining line will be cut with the guard blade. In that instant stop pushing the trimmer against the ground to not waste line.
  - To cut weeds or high grasses cut gradually. Do not try to cut in one pass from its base. Residues may clog the cutting head to make the user lose control on the trimmer.

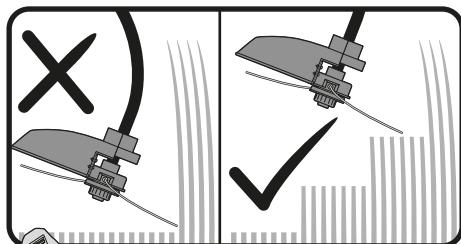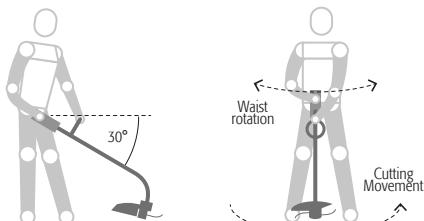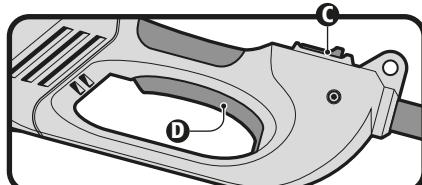

## Edger

- It is possible to use the trimmer to cut and define the grass border following the edge of sidewalks and paths.
- Loosen the knob (**E**). Tighten the button opposite to the knob and release the curved axis.
- Turn the curved axis 180° to make the cutting line point downwards (**F**).
- Insert again the curved axis until the button clicks. Tighten the knob. The trimmer is ready to be used as edger.

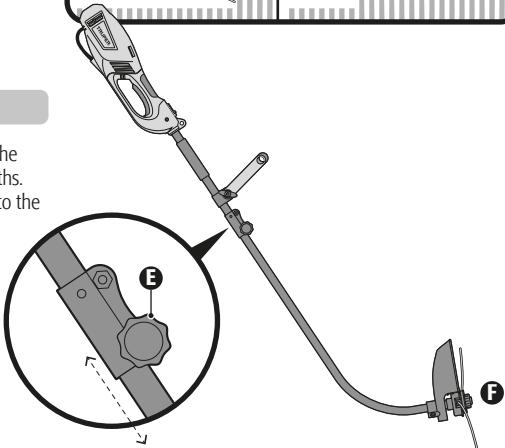

## Cleansing

- Clean the trimmer after each use. It will keep in optimum conditions and will lengthen its useful life.
- To clean, use a cloth dampened with hot water and a soft brush.
- After each use disassemble all the tool parts and remove all the grass particles and dirt adhered. Use special care with the line spool and the notches, as well as the guards.
- Clean perfectly the trimmer ventilation slots to remove any grass or dirt obstruction.

## Carbon Brush Replacement

- Carbon bushes shall be checked periodically. Always replace the carbon brushes in a  **TRUPER®** Authorized Service Center when worn. After replacement, ask the technician to inspect if the new carbon brushes can move freely in the carbon holder. Ask them to turn ON the machine during 5 minutes to make even the contact of the carbon brushes and the commutator.
- Use only original  **TRUPER®** spare carbon brushes designed specifically with the hardness and electric resistance adequate for each type of motor. Carbon brushes that are out of specification may damage the motor. When changing the carbon bushes, always replace both.

## Storing

- Clean the tool before storing to prevent mildew.
- Store the trimmer in a dry and temperate place, away from sun light (preferably in a dark place and away from the reach of children).
- Avoid storing the trimmer into a plastic bag. Otherwise, humidity generate can damage it.
- Do not store the trimmer with the guard supported onto the floor. It loses its shape. The trimmer shall be stored hanging from the upper handle so that the guard is not touching the floor.

## Environmental Protections

- The discarded tool materials like washers, damaged parts or the tool, after finishing its useful life shall not be handled like trash. Take the parts to a recycling center to be treated adequately according to the environment standards.

# Troubleshooting

## Problem

The cutting line does not advance when pressing the retention cap.

## Cause

- The line adhere itself.
- There is not enough line in the spool.
- The line is tangled in the spool.
- The line is not released from the spool notches.

It is difficult the retention cap.


- The thread in the ring is dirty or damaged.

Grass tangles around the lower axis and the cutting head.

- You are cutting too high with regards to the ground level.

## Solution

- Lubricate the cutting head with  **TRUPER®** silicon lubricant spray
- Set new line in the spool (consult page 7).
- Turn OFF the trimmer and thread again the line in the spool (consult page 7).
- Turn OFF the trimmer and pull the ends in both cutting lines to release them.
- Clean the threads and lubricate with grease. If the situation is not solved replace the retention cap.
- Cut the high grass in a gradual manner as explained in page 8.

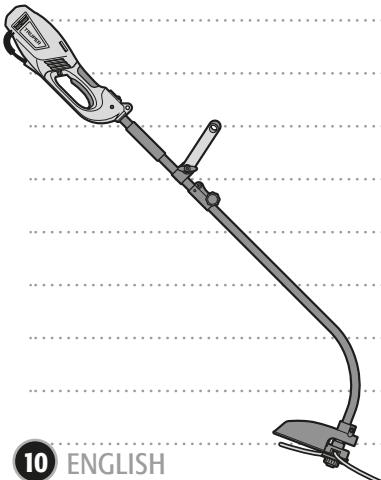

# Authorized Service Centers



In the event of any problem contacting a Truper Authorized Service Center, please see our webpage [www.truper.com](http://www.truper.com) to get an updated list, or call our toll-free numbers **800 690-6990** or **800 018-7873** to get information about the nearest Service Center.

AGUASCALIENTES	<b>DE TODO PARA LA CONSTRUCCIÓN</b> GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0557
BAJA CALIFORNIA	<b>SUCURSAL TIJUANA</b> AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL MORO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100
BAJA CALIFORNIA SUR	<b>FIX FERRETERÍAS</b> FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115
CAMPECHE	<b>TORNILLERÍA Y FERRETERÍA AAA</b> AV. ALVARO OBREGÓN #324, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808
CHIAPAS	<b>FIX FERRETERÍAS</b> AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083
CHIHUAHUA	<b>SUCURSAL CHIHUAHUA</b> AV. SILVESTRE TERRAZAS #12-111, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 614 434 0052
CIUDAD DE MÉXICO	<b>FIX FERRETERÍAS</b> EL MONSTRUO DE CORREDIGORA, CORREDIGORA # 22, COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX. TEL: 55 5522 5031 / 5522 4861
COAHUILA	<b>SUCURSAL TORREÓN</b> CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL: 871 209 68 23
COLIMA	<b>BOMBAS Y MOTORES BYMTESA DE MANZANILLO</b> BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL: 314 332 1986 / 332 2013
DURANGO	<b>TORNILLOS ÁGUILA, S.A. DE C.V.</b> MAZURIÓ #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO.TEL.: 618 817 1946 / 618 818 2844
ESTADO DE MÉXICO	<b>SUCURSAL CENTRO JILOTEPEC</b> PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL: 761 782 9101 EXT. 5728 Y 5102
GUANAJUATO	<b>CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V.</b> AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 7178 / 79 / 80 / 88
GUERRERO	<b>CENTRO DE SERVICIO ECLIPSE</b> CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL: 747 478 5793
HIDALGO	<b>FERREPRESOS S.A. DE C.V.</b> LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL: 775 753 6615 / 775 753 6616
JALISCO	<b>SUCURSAL GUADALAJARA</b> AV. ADOLFO B. HORN # 6800, COL. SANTA CRUZ DEL VALLE, C.P.: 45655, TLAJOMULCO DE ZUÑIGA, JAL. TEL: 33 3606 5285 AL 90
MICHOACÁN	<b>FIX FERRETERÍAS</b> AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858

MORELOS	<b>FIX FERRETERÍAS</b> CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL: 735 352 8931
NAYARIT	<b>HERRAMIENTAS DE TEPIC</b> MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL: 311 258 0540
NUEVO LEÓN	<b>SUCURSAL MONTERREY</b> CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
OAXACA	<b>FIX FERRETERÍAS</b> AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL: 287 106 3092
PUEBLA	<b>SUCURSAL PUEBLA</b> AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLACINGO, PUE. TEL: 222 282 8282 / 84 / 85 / 86
QUERÉTARO	<b>ARU HERRAMIENTAS S.A. DE C.V.</b> AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544
QUINTANA ROO	<b>FIX FERRETERÍAS</b> CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL: 984 267 3140
SAN LUIS POTOSÍ	<b>FIX FERRETERÍAS</b> AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, SLP. TEL: 444 822 4341
SINALOA	<b>SUCURSAL CULIACÁN</b> AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
SONORA	<b>FIX FERRETERÍAS</b> CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL: 644 413 2392
TABASCO	<b>SUCURSAL VILLAHERMOSA</b> CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL: 993 353 7244
TAMAULIPAS	<b>VM ORINGS Y REFACCIONES</b> CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
TLAXCALA	<b>SERVICIOS Y HERRAMIENTAS INDUSTRIALES</b> PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
VERACRUZ	<b>LA CASA DISTRIBUIDORA TRUPER</b> BLVD. PRIMAVERA ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
YUCATÁN	<b>SUCURSAL MÉRIDA</b> CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL: 999 912 2451

**Code**

13521

**Model**

DES-1000

**Brand** **TRUPER®**

This product is guaranteed for 2 years. To make the warranty valid or purchase parts and components you must present the product in Corregidora 22, Col. Centro, Alc. Cuauhtémoc, CDMX C.P. 06060 or at the establishment where you purchased it, or at any Truper® Service Center listed in the annex to the warranty policy and/or in [www.truper.com](http://www.truper.com). Transportation costs resulting from compliance of this warranty will be covered by .

For questions or comments, call **800-690-6990**. Made in China. Imported by Truper S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257

**2  
YEARS**

Stamp of the business. Date of purchase:

Sello del establecimiento comercial. Fecho de compra:

SÓLO

**Z**



Este producto es **garantizado por 2 años**. Para hacer válida la garantía o adquirir piezas y componentes debes presentar el producto en Corregidora 22, Col. Centro, Alc. Cuauhtémoc, CDMX C.P. 06060 o en el agente de servicio Truper® de acuerdo a lo establecido en el contrato de servicio. Los gastos de transporte que resulten para su cumplimiento serán cubiertos por **TRUPER**. Para dudas o comentarios, llame al **800-690-6990**. Hecho en China. Importado por Truper S.A. de C.V. Parque Industrial 1, Parque Industrial Jiutepec, Jiutepec, Edo. de Mex. C.P. 54257

Código	Marca	Modelo	DEs-1000	TRUPER®
13521				

**Poliza de Garantía**

**TRUPER®**

En caso de tener algún problema para contactar un Centro de Servicio Autorizado Truper®, consulte nuestra página [www.truper.com](http://www.truper.com) donde obtendrá una lista de actualizada, o llame al: 800 690-6990 ó 800 018-7873 donde le informaremos.

En cada ciudad es el Centro de Servicio más cercano.

**MORELOS** FIX FERRETRAS  
CAPITANIA AZUERAS #95, E/SQ. JOSE PEREZ, COL.

TEL.: 735 328 8931  
CENTRO C.P. 62400, CUAUTLA, MOREL.

**NAYARIT** HERMANNETAS DE TEPIC  
MAZATLAN #111, COL. CENTRO, C.P. 63000, TEPIC, NAY.  
TEL.: 311 258 0540

NEVOLEO COLONIA URBINA DE ESCOBEDO, C.P. 66052, ESCOBEDO,  
NEVOLEO, TEL.: 81 8352 8971 / 81 8352 8970

**OAXACA** FIX FERRETRAS  
AV. DIFUSOR DE MONTERREY #910, COL. CENTRO, C.P. 68300,  
TUXPEC, OAX. TEL.: 287 106 902

TEL.: 222 228 8282 / 84 / 85 / 86  
PUEBLA SUCURSAL PUEBLA  
AV. TIRADOR DE MONTERREY #270, COL. LOMAS ALMECTA,  
C.P. 72710, CUAUTLA/CUCHIAGUA, PUE.

**QUINTANA ROO** FIX FERRETRAS  
AV. UNIVERSIDAD #1850, COL. EL PASO, C.P. 73200,  
CARRETERA FEDERAL MZ 46 LT 3 LOCAL 2, COL. EIDEAL,  
TEL.: 987 267 3140  
TEL.: 667 173 9139 / 173 8400

SAN LUIS POTOSI, SL/P. TEL.: 444 822 4541  
SAN LUIS POTOSI, SL/P. TEL.: 444 822 4541  
TEL.: 427 268 4544  
QUERÉTARO AV. ERHERRAMIENTAS SA DE C.V.  
EMENDO, C.P. 66420, SAN JUAN DEL RIO, QRO.

**SINALOA** SUCURSAL CULIACÁN  
AV. EJES MUNICIPALES S/N #400, COL. HACIENDA DE LA  
ZONA FRÍA, C.P. 80100, CULIACÁN, SIN.

TEL.: 661 314 3529 / 3298 0103  
SONORA FIX FERRETRAS  
CALLE 5 DE FEBRERO #57, SUR 1 LT 25 MZ 10, COL.

**TABASCO** SUCURSAL VILLAHERRERA  
CALLE HELIO LÓTE 1, 2 Y 3 MZ #1, COL. INDUSTRIAL,  
ZONA FRÍA, C.P. 88010, VILLAHERMOSA, TAB.

TEL.: 993 353 7244  
TAMAULIPAS VM ORNIS Y REFRACCIONES  
CALLE ROSITA #57 EFTRE 20 DE NOVIEMBRE Y RIBAL  
RODRIGUEZ, P.RAC/ C.P. 88780, REYNOSA, TEC.

**TLAXCALA** SERVICIOS Y HERRAMIENTAS INDUSTRIALES  
CALLE 33 #600 602, LOCAL 102, TLAXCALA Y MULAS,  
TEL.: 999 912 2451  
MPD. 10 MUÑA C.P. 92390, MÉRIDA, YUC.

TEL.: 782 823 8100 / 826 8484  
VERACRUZ LA CASA DISTRIBUIDORA TRUPER®  
BLVD. PRIMERA E/SQ. HORIENTES S/N, COL.

**YUCATÁN** SUCURSAL MERIDA  
CALLE 33 #600 602, LOCAL 102, TLAXCALA Y MULAS,  
TEL.: 999 912 2451  
MPD. 10 MUÑA C.P. 92390, MÉRIDA, YUC.

TEL.: 782 823 8100 / 826 8484  
MICHOCÁN FIX FERRETRAS  
AV. REFREREDOS S/A DE LV.

**MICHOCÁN** FIX FERRETRAS  
AV. REFREREDOS S/A DE LV.  
TEL.: 33 3606 5285 AL 90  
AV. ADOLFO B. HORN # 6800, COL. SANTA CRUZ DEL

TEL.: 775 753 6615 / 775 753 6616  
HGO. TEL.: 755 753 6615 / 775 753 6616  
ESTADOS UNIDOS DE AMÉRICA #540, COL.

**JALISCO** SUCURSAL GUADALAJARA  
AV. REFREREDOS S/A DE LV.

TEL.: 33 3606 5285 AL 90  
AV. REFREREDOS S/A DE LV.

**HIDALGO** CENTRO DE SERVICIO ECLIPSE  
CHILPANCINGO, C.P. 43901, TULANCINGO, HGO.  
TEL.: 747 878 5793

CELAQ, TQ. #617 7578 / 79 08 / 88  
AV. MÉDICO - PINTO #225, CD. INDUSTRIAL, C.P. 38010.

**GUANAJAUTA** CLA. REFREREDOS S/A DE LV.  
GUAJAJARA #600, TULANCINGO, C.P. 39010.

TEL.: 761 782 9101 TEL.: 5728 9102  
ESTADOS UNIDOS DE AMÉRICA #540, COL. INDUSTRIAL

**MÉXICO** CENTRAL CENTRO INDOTRPEC  
MEXICO CITY #200, LUIS ECHEVERRÍA, DURANGO,  
TEL.: 314 352 1986 / 3292 8013


ESTADO DE MÉJICO  
TEL.: 314 352 0052  
ESTADOS UNIDOS DE AMÉRICA #540, COL. INDUSTRIAL

**CUERREDO** CENTRO DE SERVICIO ECLIPSE  
CHILPANCINGO, C.P. 43901, TULANCINGO, HGO.  
TEL.: 747 878 5793

CELAQ, TQ. #617 7578 / 79 08 / 88  
AV. MÉDICO - PINTO #225, CD. INDUSTRIAL, C.P. 38010.

**MICHOACÁN** FIX FERRETRAS  
AV. REFREREDOS S/A DE LV.  
TEL.: 443 334 6858

ESTADOS UNIDOS DE AMÉRICA #540, COL.

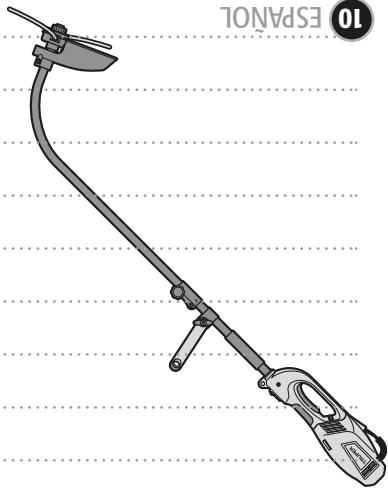

**TRUPER®**

## Mantenimiento

## Cambio de carbones

## Limpieza

## Protección ambiental

- E mediante el desarrollo de la herramienta como se muestra en la figura 1.
- El resultado es una lista de recomendaciones que se presentan en la figura 2.

- Limpie la harinera interior antes de guardarla para evitar acumulo de humedad.
- Utilice la harinera en un lugar seco y templado para que no se moje.
- Evite almacenar la deshidratadora en bolsas de plástico.
- Evite almacenar la deshidratadora en lugares húmedos.
- Evite almacenar la deshidratadora con la tapa abierta.
- Utilice la deshidratadora en un lugar seco y templado para que no se moje.
- Utilice la deshidratadora en un lugar seco y templado para que no se moje.
- Utilice la deshidratadora en un lugar seco y templado para que no se moje.

## Problema Causa

## Solución

- El hilo de **silicón** es pegado entre si.
  - Lubrifique el cabezal de corte con lubricador de **silicón**. En aerosol.
  - Coloque hilo nuevo en el carrete (consulte la página 7).
  - Coloque hilo nuevo en el carrete (consulte la página 7).
  - No hay hilo suficiente en el carrete.
  - El hilo es tirado en el carrete.

## Solución de problemas

- Esta corriendo pasto demasiado alto al nivel del suelo.
- La tierra es muy seca y la humedad es casi nula.
- Corte el pasto alto de manera gradual como se retocan.
- No moforar la siembra reemplazé la tapa de regadío.

# Puesta en marcha

**TRUPER®**

Encendido

- A VOLTEC®**

  - Haga un bucle (A) en el extremo de una extensión de alambre para evitar que se desenrolle.
  - Conecte la extensión a una alarma de extensión para la desbrozadora.
  - Como medida adicional de seguridad se recomienda utilizar un interruptor de corriente (no incluido) en caso de que se desenrolle la extensión.
  - Para apagarla suelte el interruptor.
  - Mantenga una postura equilibrada con ambos pies de operar la herramienta.
  - Sostenga la desbrozadora con firmeza frénte a usted y no la deje caer en el piso.
  - Evite perder otra posición.
  - Izquierda la desbrozadora y realice los cortes de posición de la herramienta.
  - Confíome se realiza el corte de pasto el hilo de corte es desgasificante y elimina por desprendimientos. Para liberar más gasolina para que el hilo de corte de retención.
  - Corte de la cuchilla de la guardia en ese instante se cortado con la cuchilla de la guardia. El sobrante será de la desbrozadora.
  - Para cortar malas o pasto alto pisos para que el hilo de corte no impacte contra la base, pulse el botón de control de la cuchilla de la guardia.
  - Para cortar malas o pasto alto pisos para que el hilo de corte no impacte contra la base, pulse el botón de control de la cuchilla de la guardia.
  - Apriete la perilla (E) para cortar el hilo de corte.
  - Apriete el botón que define el corte de la perilla.
  - Es posible utilizar la desbrozadora para cortar y definir el límite del césped siguiendo el contorno de bandejitas y veredes.
  - Si tiene que cortar la desbrozadora para cortar y definir el límite del césped siguiendo el contorno de bandejitas y veredes.

**Operación**

**A ATENCIÓN** • Recuerde que usted como operador de la desbrozadora es responsable de su seguridad, así como de las personas que se encuentren cerca de ella. Tenga cuidado de no lastimarse.

**A PELIGRO** • No encienda ni opere la desbrozadora sin pies.

**O Trimmer**

**E Operadora**

## Operación

- Para adaptarla a las necesidades de los pacientes.
  - Para aumentar la adherencia a la terapia.
  - Como medida adicional de seguridad se recomienda la tensión específica para la desbridadura.
  - Utilizar un interpretador de corriente (no hispánico) en caso de precios de consulta de 30 o 50 pesos.
  - Para una mejor comprensión de la información médica.
  - Para aumentar la adherencia a la terapia.
  - Para adaptarla a las necesidades de los pacientes.

The diagram illustrates the correct and incorrect assembly of the string trimmer head. The main image shows the head attached to the shaft with a lock nut. An inset shows the correct orientation of the head with a curved arrow pointing upwards. Another inset shows the incorrect orientation with a large 'X'.

- Es posible utilizar la desbrozadora para cortar y definir el límite del césped situando el control de banduetas y viveros.
  - Añade la Perilla (**E**), apriete el botón que pone a la Perilla hasta que el filo de la cuchilla esté en contacto con la hierba.
  - Libere el ele cuadro.
  - Apriete la Perilla (**F**), apriete el botón que pone a la Perilla hasta que el ele cuadro quede en contacto con la hierba.
  - Mientras libera el ele cuadro, libere el ele cuadro.
  - Repita el procedimiento para cada césped.


Orialdora

- **A PELIGRO** • No encienda ni opere la desbrozadora en cualquier otra posición.
  - Izquiera la desbrozadora y realice los cortes de posición de la herramienta.
  - Confíome se realice el corte de pasto el hilo de corto se desgastaría y terminaría por desprendérse, para liberar más hilo del carrete prensione un poco la desbrozadora hacia abajo para que el sección de cable no se rompa.
  - Compruebe si el carrete de pasto se ha quedado sin cable.
  - Siempre se realice el corte de pasto el hilo de corto se corta y libera más hilo. El sobrante será cortado contra el carrete y libere más hilo. El sobrante será cortado por el cuñillo de la guardia, en ese instante debe de empujar la desbrozadora contra el pasto para no perder más hilo.
  - Para cortar maleza o pasto los haga lo que se muestra en la figura, en ese caso el carrete de la desbrozadora se corta y libera más hilo. El sobrante será cortado con la desbrozadora en la base, para no perder más hilo.
  - No intente cortarlos de una sola vez desde la base, pues los residuos pueden atascar el cabezal de corte o hacerla perder el control de la desbrozadora.



- A PELIGRO** • No encienda ni opere la desbrozadora sin pieles.

- Matemáticas una ciencia equilibrada con ambos piezas de operar la herramienta.

- La conexión especificada para la deszonificación.
  - Comenzó medida adicional de seguridad para el recorrido que lleva a la extensión a una toma de corriente que tiene
  - Utilizar un interruptor de corriente (no incluido) en caso de picos de corriente de 30 u 60 miliamperios.
  - Para encender la deszonificación se segunro del interruptor (C) juntó con el de interruptor (D). El segundo del interruptor elita encendidos accidentales.
  - Para apagarla se le suelta el interruptor.

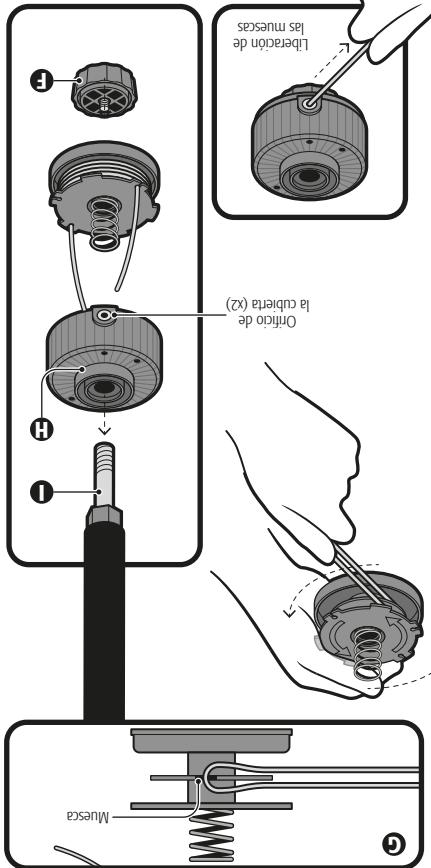


## Carrete de hilo de corte

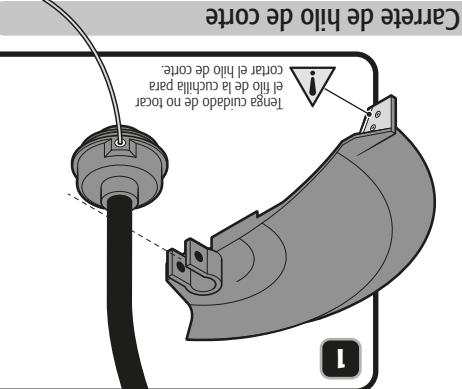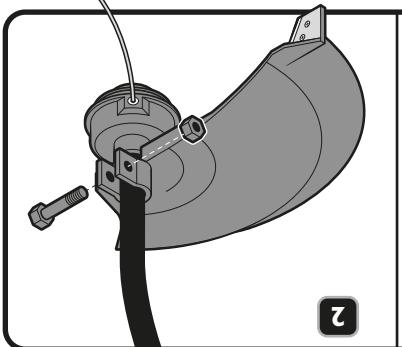

- Instale la guarda como se muestra en la imagen.
  - Recuerde instalar debidamente la guarda antes de encender la desbrozadora.

## Guarda

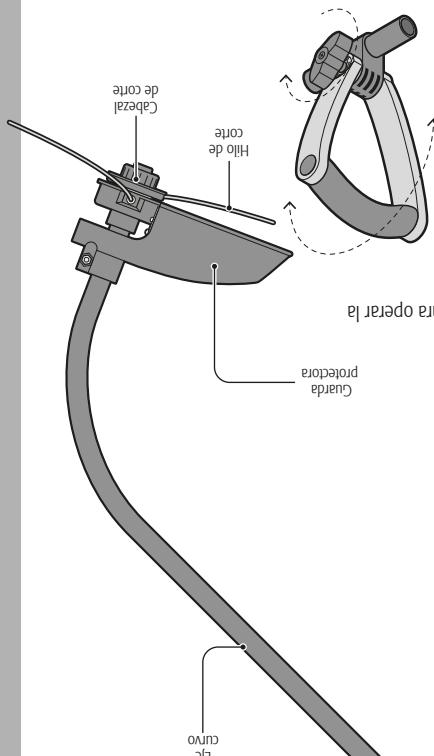


• Apriete la perilla para fijar la posición y el ángulo del mango auxiliar.

• Recorra el mango auxiliar por el eje superior a una altura adecuada para operar la desbrozadora.

• Instale el mango auxiliar como se muestra en la imagen.

### Mango auxiliar tipo "D"

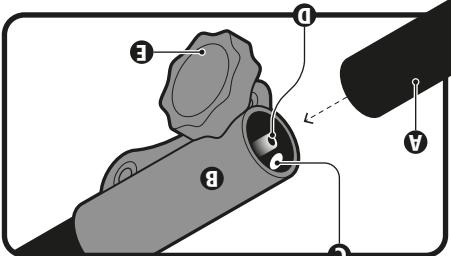

• Apriete la perilla (E) para bloquear el eje curvo en su lugar.

• Correcamine en el interior del adaptador (D) del mango superior

• Asegúrese de que la flecha flexible del eje curvo se acople

correctamente con el botón del eje curvo.

• Inserte el eje curvo (A) en la montura (B) haciendo coincidir el orificio (C) de la montura con el botón del eje curvo.

• Inserte el eje curvo (A) en la montura (B) haciendo coincidir el

### Eje curvo

## Montaje



No se expone a la humedad.



Immediatamente le dañaría.



En caso de drenar el cable de alimentación desconecte



del cable de alimentación de los niños.



No se debe al alcance de las lluvias.



Use lentes de seguridad.




Use protección auditiva.



Lea el instructivo de uso antes de operar



Alerta de seguridad.

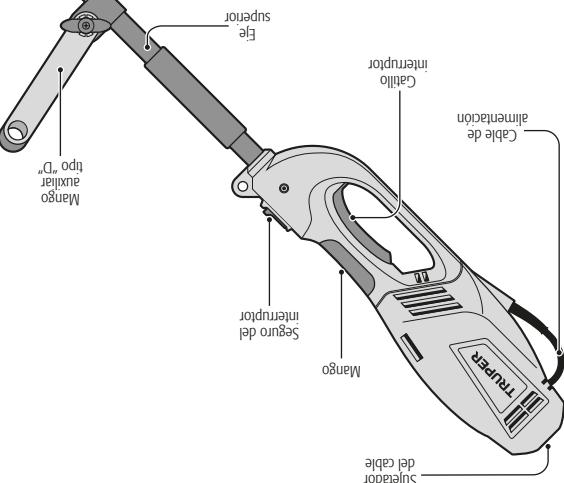

## Partes

**TRUPER®**



La mañana no debe de ser utilizada para los fines de las personas con capacidades físicas, sensoriales o mentales reducidas. Tampoco por personas que experimentan o padecen trastornos mentales o emocionales. Los niños deben de estar bajo supervisión para asegurarse de que no jueguen con juguetes que les puedan causar daño. Los padres y las personas que les acompañan deben de estar pendientes de los niños y garantizar que se respeten las normas establecidas por una persona, ya sea, un adulto o un menor que esté autorizado a hacerlo. La noche es el momento más apropiado para que los niños jueguen con juguetes que les permitan desarrollar habilidades cognitivas y motoras. Los padres deben de estar pendientes de los niños y garantizar que se respeten las normas establecidas por una persona, ya sea, un adulto o un menor que esté autorizado a hacerlo.

VICIDIA

Para mantener la seguridad de la herramienta.  
Repare la herramienta en un Centro  
de Servicio TRUPER® usando solo piezas  
originals.

A horizontal row of six circular icons representing different types of personal protective equipment or hygiene practices. From left to right: a hard hat, a face mask, a respirator mask, a power drill, a hand being washed, and a stack of folded laundry.

Uso de herramientas y técnicas de aprendizaje activo para la resolución de problemas. Los estudiantes deben aplicar las estrategias y procedimientos que se presentan para resolver situaciones de la vida real. La evaluación se basa en la aplicación de las estrategias y procedimientos que se presentan para resolver situaciones de la vida real.

Este altero, vigiló lo que ocurría en la escuela y se acordó de su hermano. No la usó si se la daban con una bebida alcohólica o drogas, alcohol o medicamentos.

Muchos cedulantes son causados por el escaso mantenimiento de las partes móviles que suelen desmadrarse o perderse que no se han cambiado en sucesivas reparaciones.

La nueva **extensión especial para uso en exteriores**, que une el **extremo de choque** y el **extremo hermético**, reduce el riesgo de electricidad.

**No se expone a la humedad**. Hay un mayor riesgo de choque eléctrico si el cuerpo está mojado.

**La herramienta de cálculo hace un tablero mejor y más seguro cuando se usa el tiempo para él que tiene disponible.**

**Seguridad eléctrica** La clave de la herramienta debe coincidir con el tomacorriente. Nunca modifique una salida. No use ningún tipo de adaptador para conectar dispositivos de alta potencia.

 En caso de control con dispositivos de extracción y recirculación de polvo conectados a la herramienta, verifique sus conexiones y las piezas de movimiento.

No maneje la herramienta en ambientes explosivos, como en presencia de líquido, gas o polvo inflamables.

Las áreas desordenadas y oscuras son propensas a accidentes.

7) d. Conserve las instrucciones de uso en una cinta contenedora. La misma debe ser depositada en el campamento de acuerdo con las normas establecidas sobre el uso y conservación del equipo en todo

**TRUPER®**



**⚠ Reafile MANTENIMIENTO** periódico a su máquina (Consulte página 9).

**⚠ UTILICE** siempre con la **GUARDA UTILICE HILO** con diámetro de 1.6 mm

**⚠ CALIBRE 16 AWG** (no incluida).  
Para no dañar el producto, se recomienda utilizar una **EXTENSIÓN DE USO RUDO**

## RECOMENDACIONES DE USO Y CUIDADOS

- 12 Poliza de Garantía
- 11 Centros de Servicio Autorizados
- 10 Notas
- 9 Solución de problemas
- 8 Puesta en marcha
- 7 Montaje
- 6 Partes
- 5 Para uso de desbrozadoras eléctricas
- 4 Advertencias generales de seguridad
- 3 Requerimientos eléctricos
- 3 Especificaciones técnicas

**⚠ ATENCIÓN**


**Indice**

**TRUPER®**



Lea este instructivo por completo  
antes de usar la herramienta.

**ATENCION**

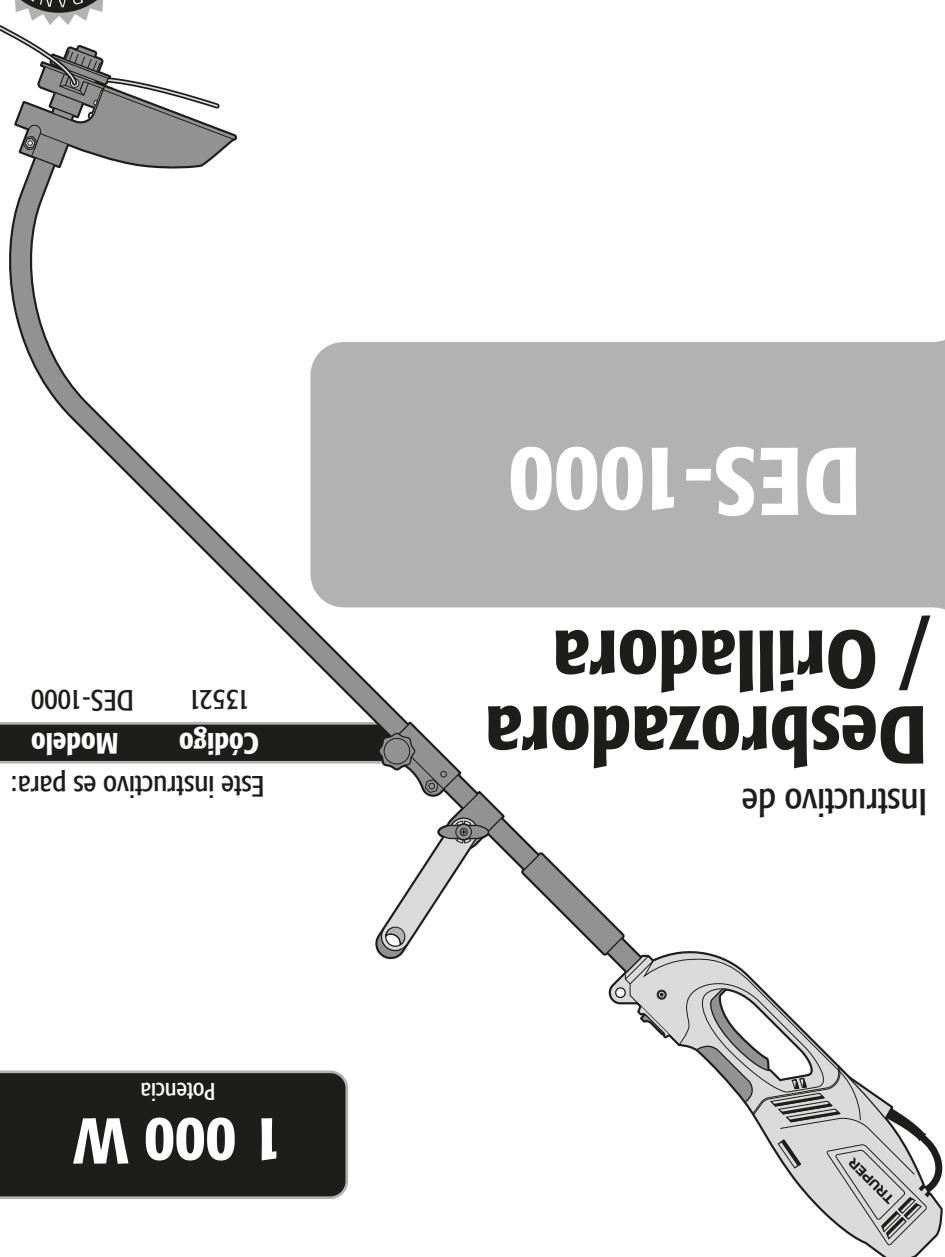

**TRUPER®**

ESPAÑOL  
ENGLISH