

Manual


Variable speed polisher

1200 W

Power

175 mm
7"

Diameter

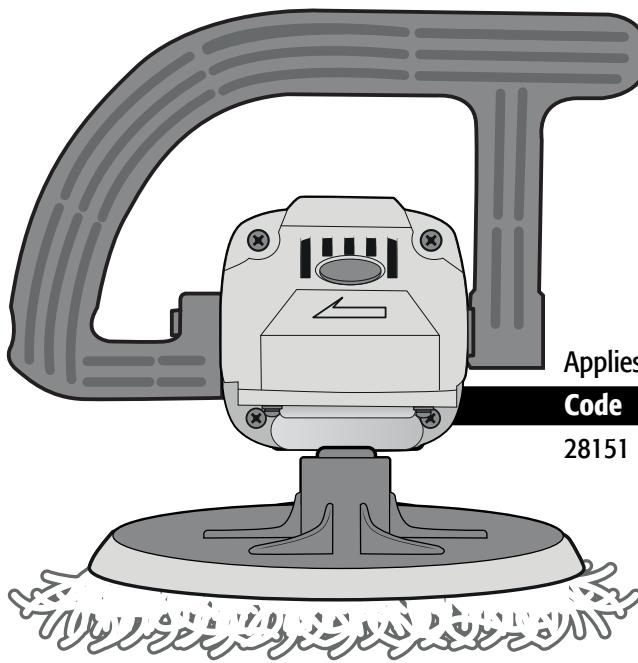

Applies for:

Code

28151

Model

PULA-7P

PULA-7P



CAUTION



Read this manual thoroughly
before using the tool.



Technical data	3
Power requirements	3
 General power tool safety warnings	4
 Safety warnings for the use of variable speed polishers	5
Parts	7
Preparation	8
Start up	9
Maintenance	11
Notes	12
Authorized service centers	15
Warranty policy	16

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

Use and care recommendations



RESPECT THE WORK CYCLES.

20 minutes of work per 10 minutes of rest. Maximum 1 hour and 30 minutes daily.



AVOID using the cord to move, lift or disconnect the tool.



Always use the auxiliary handle or the "D" handle.



NEVER tighten the shaft lock when the disc is spinning.



Keep the tool's ventilation openings clean.



Perform regular MAINTENANCE on your machine (page 11).

PULA-7P

Code •	28151
Description •	Variable speed polisher
Diameter •	7"
Voltage •	127 V~
Frequency •	60 Hz
Current •	9.5 A
Power •	1 200 W
No load speed •	1000 RPM – 3 500 RPM
Duty Cycle •	20 minutes of work per 10 minutes of rest. Maximum 1 hour and 30 minutes daily
Conductors •	18 AWG x 2C with insulation temperature of 221 °F
Insulation •	Class II
	IP Grade • IP20

The power cable has cable ties type: Y

The construction class of the tool is: Class II.

The thermal insulation class of the motor windings: Class E.


WARNING Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a TRUPER Authorized Service Center. The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use. Do not expose to rain, liquids and/or dampness.

WARNING Before gaining access to the terminals all power sources should be disconnected.



Power requirements

WARNING Tools with double insulation and reinforced insulation are equipped with a polarized plug (one prong is wider than the other). This plug will only fit in the right way into a polarized outlet. If the plug cannot be introduced into the outlet, reverse the plug. If it still doesn't fit, call a qualified electrician to install for you a polarized outlet. Do not alter the plug in any way. Both insulation types eliminate the need of both a grounded third power cord with three prongs or a grounded power connection.

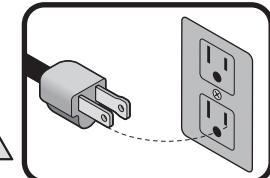

WARNING When using an extension cable, verify the gauge is enough for the power that your product needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and overheating. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

Amperes capacity	Number of conductors	Extension gauge From 5.9' to 49.2'	Extension gauge Higher than 49.2'
From 0 A and up to 10 A		18 AWG(*)	16 AWG
From 10 A and up to 13 A		16 AWG	14 AWG
From 13 A and up to 15 A		14 AWG	12 AWG
From 15 A and up to 20 A	3 (one grounded)	8 AWG	6 AWG

* It is safe to use only if the extensions have a built-in artifact for over current protection.

AWG = American Wire Gauge. Reference: NMX-J-195-ANCE

WARNING When operating power tools outdoors, use a VOLTECK grounded extension cable labeled "For Outdoors Use". These extensions are specially designed for operating outdoors and reduce the risk of electric shock.





⚠ WARNING! Read carefully all safety warnings and instruction listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. **Save all warnings and instructions for future references.** The term 'power tool' in the warnings refers to both your main (corded) power tool and the cordless power tool.

Work area**Keep your work area clean, and well lit.**

Cluttered and dark areas may cause accidents.

**Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**

Sparks generated by power tools may ignite the flammable material.

**Keep children and bystanders at a safe distance while operating the tool.**

Distractions may cause loss of control.

**Electrical Safety****The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.**

Modified plugs and different power outlets increase the risk of electric shock.

**Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.**

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

Personal safety**Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.**

A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.

**Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.**

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

**Do not overreach. Keep proper footing and balance at all times.**

This enables a better control on the tool during unexpected situations.

**Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.**

Loose clothes, jewelry, or long hair can get caught in moving parts.

**If you have dust extraction and collection devices connected onto the tool, inspect their connections and use them correctly.**

Using these devices reduce dust-related risks.

**Power Tools Use and Care****Do not force the tool. Use the adequate tool for your application.**

The correct tool delivers a better and safer job at the rate for which it was designed.

Do not use the tool if the switch is not working properly.

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

**Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.**

These measures reduce the risk of accidentally starting the tool.

**Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.**

Power tools are dangerous in the hands of untrained users.

Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.

Most accidents are caused due to poor maintenance to the tools.

Keep the cutting accessories sharp and clean.

Cutting accessories in good working conditions are less likely to bind and are easier to control.

**Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.**

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

Service**Repair the tool in a TRUPER Authorized Service Center using only identical spare parts.**

This will ensure that the safety of the power tool is maintained.

This tool is in compliance with
the Official Mexican Standard
(NOM - Norma Oficial Mexicana).

This electric tool is designed to work as a polisher. Read all safety warnings, instructions, illustrations, and specifications provided with this electric tool.

- Failure to follow the instructions below can result in electric shock, fire, and/or serious injury.
- Never keep your car running when using the polisher in an enclosed space.
- It is not recommended for operations such as grinding, brushing, sanding, or cutting.
- Operations for which this tool was not designed can cause an accident and result in personal injury.
- Do not use accessories that are not specifically designed and recommended by the manufacturer.
- Perform a test with your polisher before starting the work. If the tool makes a strange noise or vibrates irregularly, turn it off. Disconnect the tool and take it to a TRUPER Authorized Service Center.
- When not in use, the tool should be turned off and unplugged.
- To prevent accidental starts, keep fingers away from the on/off switch when connecting the polisher to the outlet.
- To avoid electric shocks, keep the tool dry and clean, free of any oil and grease residue.

CAUTION • During polishing operations, keep the cord away from the polisher's path; otherwise, it could be caught and cut by the disc, exposing the operator to electric shock.

• Do not force the tool. Hold it firmly by both handles without applying downward pressure. Otherwise, the machine's movement will be slower, the quality of the work will be reduced, and severe damage to the tool may occur.

• Take care of your tool. Your work will be easier if you keep your tool in good condition.

WARNING • Use safety glasses.

- Keep people present at a safe distance from the work area. Anyone entering the work zone should wear personal protective equipment.
- Fragments from the workpiece or a broken accessory can detach and cause damage beyond the immediate operating area.
- Place the power cord away from the rotating accessory.
- If control of the power tool is lost, the cord can be cut or tangled, and the operator's arm or hand can be pulled toward the rotating accessory.
- Never release the power tool until the accessory comes to a complete stop.
- The rotating accessory can snag on a surface and render the power tool out of control.
- Do not operate the power tool while carrying it by your side.
- Accidental contact with the rotating accessory can snag on clothing, pulling the accessory towards your body.

- Regularly clean the ventilation slots of the power tool.
- The motor fan directs dust into the housing, and excessive accumulation of metal dust can pose an electrical risk.
- Do not use the power tool near flammable materials.
- Sparks can ignite these materials.
- Do not use accessories that require liquid coolants.
- The use of water or other liquid coolants can result in electric shock or electrocution.
- The fact that the accessory can be installed on the power tool does not guarantee safe operation.
- The designated speed of the accessory must be at least equal to the maximum speed marked on the power tool.
- Accessories operating faster than their designated speed may break and detach.
- The outer diameter and thickness of accessories should fall within the assigned capacity of the power tool.
- Incorrectly sized accessories may not be adequately protected or controlled.
- The threaded assembly (installation) of accessories should match the thread of the shaft (spindle).
- Accessories that do not match the installation devices of the power tool cause imbalance, excessive vibration, and can lead to loss of control.
- Do not use a damaged accessory. Before each use, inspect the accessories, for example: Check backings for cracks, tears, or excessive wear.
- If the power tool or an accessory fall, inspect for possible damage or install an undamaged accessory. After inspecting and installing an accessory, keep away, and keep people present away from the plane of the rotating accessory; operate the power tool at maximum speed without a load for one minute.
- Damaged accessories typically break during this period.
- Use personal protective equipment. Depending on the application, wear a face shield, safety glasses, and, if necessary, a dust mask, ear protectors, gloves, and a workshop apron capable of stopping small abrasive fragments or workpiece chunks.
- Eye protection should stop debris generated by various operations. Dust masks or respirators should filter particles produced by the operation. Prolonged exposure to high-intensity noise can cause hearing loss.




Kickback and related warnings

- Kickback is a sudden reaction when a rotating wheel, backing pad, brush, or any other accessory becomes jammed or snagged. Jamming or snagging causes a rapid stoppage of the rotating accessory, which in turn forces the power tool uncontrollably in the opposite direction of the accessory's rotation at the point of operation.
- Kickback can occur because of misuse of power tools and/or incorrect operating procedures or inappropriate conditions and can be avoided by taking the essential precautions outlined below:
- Maintain a firm grip on the power tool, keep your body and arm positioned to resist kickback forces.
- Always use the auxiliary handle if provided, for maximum control over kickback or the motor's torsional reaction during startup.
- The operator can control torsional moment and kickback forces with proper precautions.
- Never place your hand near the rotating accessory.
- Accessories can kick back into the hand.
- Do not position your body in the area where the power tool may move if kickback occurs.
- This propels the power tool in the opposite direction of the disc's movement at the point of engagement or snag.
- Exercise special care when working in corners, sharp edges, among others. Avoid bouncing and accessory snagging.
- When working in corners, sharp edges, or encountering bouncing, it can cause the accessory to snag and lead to loss of control of the power tool or kickback.

Parts

PRETUL

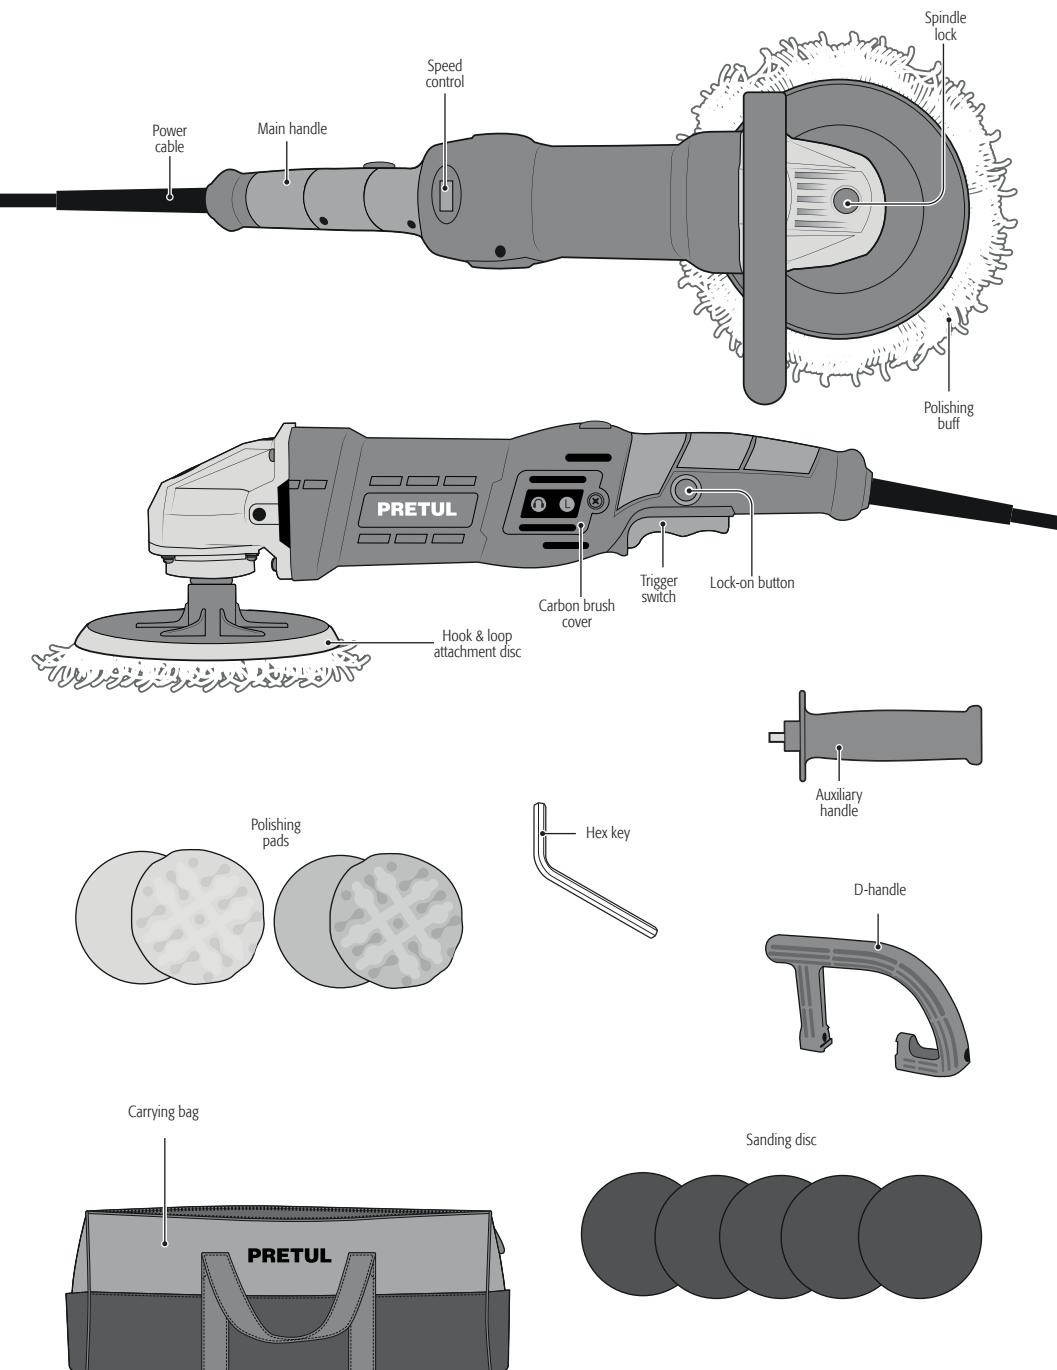

Assembly of the D-handle


- Align the D-handle with the head of the polisher and match the screw holes (**A**).
- Securely screw the D-handle to the polisher head using the included screws, washers, and key.

Assembly of the auxiliary handle

- For safe operation, use the auxiliary handle; place it in either of the two holes (**B**) to mount it and make your work easier.

Assembly of the disc

- Attach the pad to the disc with hook and loop fastening.
 - Press the shaft lock (**C**) and mount the disc to the polisher head by screwing it tightly.
 - To remove the disc, press the shaft lock and unscrew the disc.
- CAUTION** • The shaft lock should only be pressed when mounting or dismounting the disc, it should never be pressed to stop the disc during the polishing operation, as it may damage the tool and expose you to personal injury. The threaded assembly (installation) of accessories should match the thread of the shaft (spindle). For accessories installed with flanges, the entry hole of the accessory to the shaft should match the diameter of the flange. Accessories that do not match the installation devices of the power tool cause imbalance, excessive vibration, and can lead to loss of control. Do not use damaged accessories. Before each use, inspect the accessories, for example: **1)** Check for damage and cracks. **2)** Check backings for cracks, tears, or excessive wear. **3)** Check that the base is not cracked. If the power tool or an accessory fall, inspect for possible damage or install a damaged accessory. After inspecting and installing an accessory, run the power tool at maximum speed without a load for one minute, keeping yourself and others present away from the plane of the rotating accessory. Damaged accessories typically break during this period.

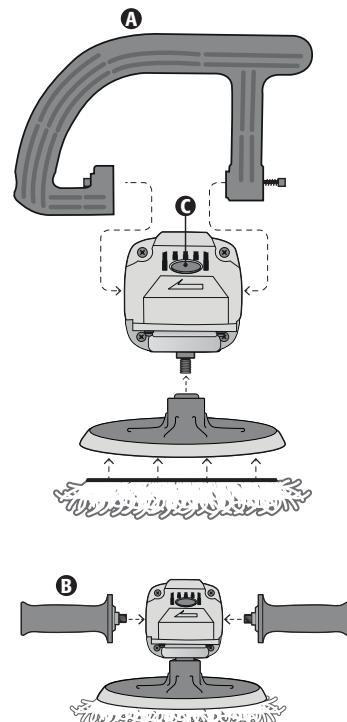

Operating instructions

- D-handle:
For your safety, use the D-handle.
- Polishing disc installation:
Mount the rubber disc and wool disc on the shaft, press the shaft lock, and screw the disc tightly.
- Variable speed and soft start:
Adjust the continuously variable speed regulator from 1 000 rpm to 3 500 rpm as needed, with the highest speed at the '6' position, gradually decreasing at the '1' position.
- Always turn off and wait until the polishing wheels have completely stopped before storing the machine.

Polishing pads

- Polishing sponges or any other polishing accessory is directly mounted to the disc with hook and loop fastening.
 - To install the sponge, first remove any dirt or foreign materials that may adhere to the surfaces of the disc and interchangeable accessories. Place the sponge on the hook and loop fastening disc so that the edges are aligned.
 - The polisher includes the following interchangeable accessories:
 1. Sanding discs
 2. Polishing sponges
 3. Buffing wheel
 - To remove the sponge, simply pull it by the edge.
- CAUTION** Ensure that the pad and the sponge are aligned and properly installed. Otherwise, the sponge may cause excessive vibration, leading to loss of control, or the sponge may be expelled from the tool.

Preparation


PRETUL

Polishing application

- Most polishes come in paste or liquid form. Before using any polish, read all instructions regarding the product's uses and the correct application method.

• Application of liquid polish.


Apply a small circle of liquid, approximately 3 cm in diameter, in the center of the buffering wheel, followed by two more rings, each slightly larger than the previous one. After the initial application, the buffering wheel doesn't absorb as much liquid. Therefore, apply only two rings, using half of the initial amount.

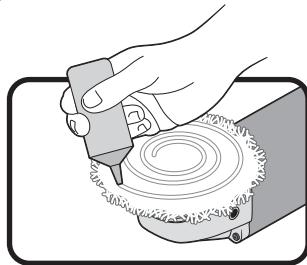

• Application of paste polish.

Using a putty knife or any other flat, dull object, apply about a teaspoon of paste to the buffering wheel. Spread the paste evenly over the entire surface of the buffering wheel.

NOTE: Do not apply paste directly to the surface being polished.

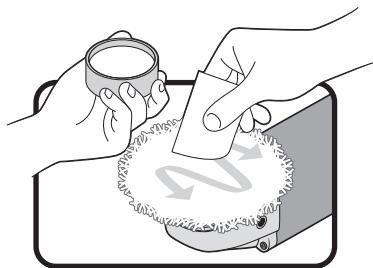


⚠ WARNING The switch can be locked in the on position for the operator's convenience during extended use. Be careful when locking the tool in the on position and keep a firm grip on the tool.
Do not connect the tool with the lock switch activated. The tool will start without support and may cause personal injury or breakage.

Start up

Power on and operation control

- Intermittent Operation:
Plug the tool into the outlet.
Press the switch (**A**) to make the tool start working.
To stop its use, simply release the switch.
- Continuous Operation:
Plug the tool into the outlet.
Press the switch (**A**) and lock it by pressing the continuous use button (**B**).
To interrupt its operation, press and then release the switch.

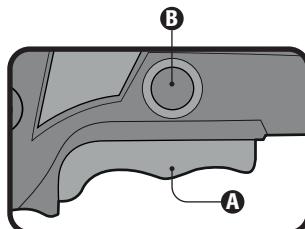


Speed control

- The tool can be operated at different speeds. These are selected by adjusting the speed control from minimum to maximum (C). Turn the speed control while referencing the speed chart (D).
 - Generally, low speeds are recommended for small work areas, and high speeds for larger surfaces.
- Use the speed that best suits the working conditions.



CAUTION Continuous use of the tool at low speeds for an extended period will overload the motor and result in inefficient tool operation.

The speed control dial can only be turned up to Max and back to Min. Do not force it beyond Max or Min, or the speed adjustment function may stop working.

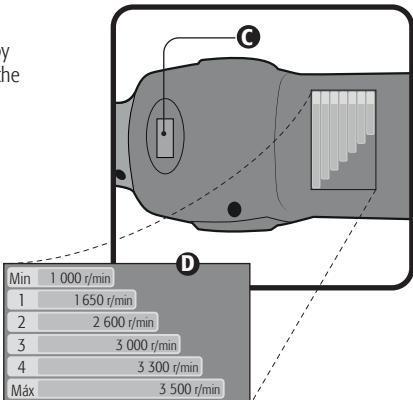

How to properly grip the tool

- Always hold the tool with both hands. One hand gripping the main handle and the other the auxiliary handle (A) or D-handle (B). Be careful not to obstruct the ventilation slots.

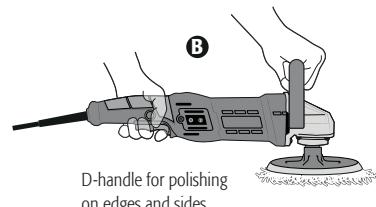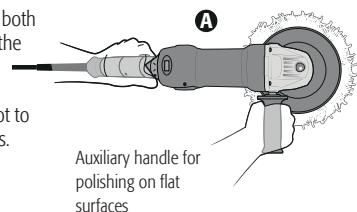

Polishing

- Move the polisher back and forth over the working surface with long strokes.
- Be aware that excessive pressure, incorrect angles, or improper movements can cause swirl marks or burns in the finish. To avoid them, do not use high speeds when polishing small areas, press the buffing wheel lightly onto the surface, and keep the polisher constantly moving without letting it stay static in one spot, especially near edges or changes in the working surface.
- Follow the instructions of the polishing products for a quality job.
- For best results, it is recommended to use original accessories such as the TRUPER brand BOR-PULA-7N.

- The most common mistake is applying too much wax. If the buffing wheel absorbs too much wax, it won't last long, and the polishing job will be more difficult and take a long time to finish.
- Always disconnect the tool before proceeding to clean it.
- Never use water or other liquids; only use a brush.
- To prevent the motor from overheating, regularly clean the ventilation slots.
- The housing should not be cracked or damaged.
- Always check that the cable is not cut or peeled.
- After prolonged use, the grease in the tool head should be replaced at a TRUPER authorized Service Center.

CAUTION • Be attentive when polishing rough surfaces, joints, or crevices where the buffing wheel may get stuck. A stuck buffing wheel can make you lose control of the tool and/or burn the finish. To reduce this risk, use low speeds on rough surfaces, and for complicated surfaces such as mirrors or moldings, avoid using the tool and polish manually.

- Always ensure that the tool is disconnected from the power when performing machine maintenance.
- Remove chips, oil, and grease from the machine. Keep the tool and interchangeable accessories clean.
- Regularly check if all fastening screws are tight and ensure there are no cracks or damage to the tools.
- Inspect your tool regularly and ensure there is no damage to the cable.
- When the wool disc is worn out, replace it, making sure the wool disc is aligned with the edges of the rubber disc.

Repair


Use only parts and accessories recommended by the manufacturer. In case the tool malfunctions, repairs should be carried out by an authorized TRUPER Service Center.


Storage


Store the tool neatly in a dry place protected from dust and water.


Carbon brush replacement

- It is necessary to replace worn-out brushes (burnt, broken, or less than 5 mm long) with new brushes.
- When replacing brushes, always change both brushes.
- Use a screwdriver to remove the brush cover (A).
- Remove the worn brushes from the brush holders and blow away accumulated dust with compressed air.
- Place the new brushes by reversing the order. The brushes should easily fit into the brush holders.
- After installing the new brushes, allow the tool to run for 10 minutes without any workload to ensure better fitting of the brushes.
- Only use TRUPER replacement brushes, designed with the appropriate hardness and electrical resistance for each type of motor. Brushes outside of specifications can damage the motor.

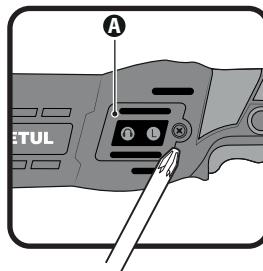

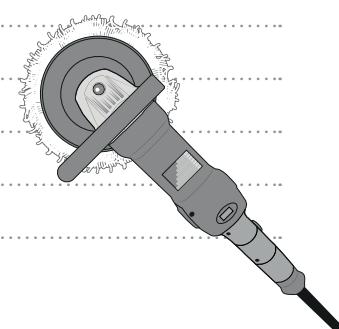

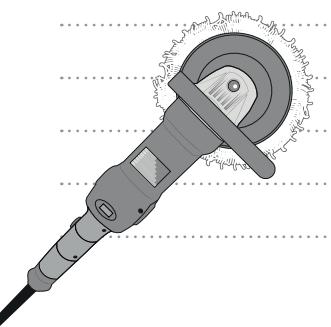

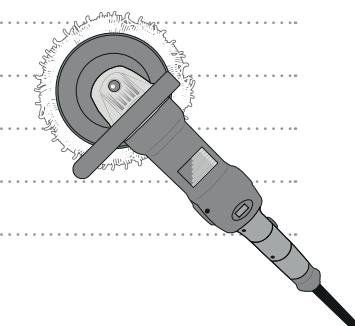

Authorized service centers

PRETUL

In the event of any problem contacting a TRUPER Authorized Service Center, please see our webpage WWW.TRUPER.COM to get an updated list, or call our toll-free numbers **800 690-6990** or **800 018-7873** to get information about the nearest Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 5037	MORELOS	FIX FERRETERÍAS CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931
BAJA CALIFORNIA	SUCURSAL TIJUANA AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100	NAYARIT	HERRAMIENTAS DE TEPIC MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540
BAJA CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115	NUEVO LEÓN	SUCURSAL MONTERREY CARRETERA LAREDO #500, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NEUVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
CAMPECHE	TORNILLERIA Y FERRETERÍA AAA AV. ÁLVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808	OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL.: 287 106 3092
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083	PUEBLA	SUCURSAL PUEBLA AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLACINGO, PUE. TEL.: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	SUCURSAL CHIHUAHUA AV. SILVESTRE TERRAZAS #12-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 614 434 0052	QUERÉTARO	ARU HERRAMIENTAS S.A DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544
CIUDAD DE MÉXICO	FIX FERRETERÍAS EL MONSTRUO DE CORREDOR, CORREDOR # 35, COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX. TEL: 55 5522 5031 / 5522 4861	QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL.: 984 267 3140
COAHUILA	SUCURSAL TORREÓN CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL.: 871 209 68 23	SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, SLP. TEL.: 444 822 4341
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL.: 314 332 1986 / 332 8013	SINALOA	SUCURSAL CULIACÁN AV. JESÚS KUMATE #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZURIO #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO.TEL.: 618 817 1946 / 618 818 2844	SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 413 2392
ESTADO DE MÉXICO	SUCURSAL CENTROJILOTEPEC PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL.: 761 782 9101 EXT. 5728 Y 5102	TABASCO	SUCURSAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 353 7244
GUANAJUATO	CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 617 7578 / 79 / 80 / 88	TAMAULIPAS	VM ORINGS Y REFACCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL.: 747 478 5793	TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #152, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
HIDALGO	FERREPRECIOS S.A. DE C.V. LIBERTAD ORIENTE #504 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616	VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA. ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
JALISCO	SUCURSAL GUADALAJARA AV. ADOLFO B. HORN #6800, COL: SANTA CRUZ DEL VALLE, C.P.: 45655, TLAJOMULCO DE ZUÑIGA, JAL. TEL.: 33 3606 5285 AL 90	YUCATÁN	SUCURSAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858		

Code

28151

Model

PULA-7P

Brand**PRETUL®**

Warranty. Duration: 1 year. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by TRUPER®. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. Phone number 800-018-7873. Made in China. Imported by TRUPER, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.



Stamp of the business. Delivery date:

**Póliza de
garantía**

PRETUL


Sello del establecimiento comercial. Fecho de entrega:



Garantía. Duración: 1 año. Cobertura: plazas, componentes y mano de obra contra defectos de fabricación o fundicionamiento, excepto si se usó en condiciones distintas a las normales; cuando no fue operado conforme instrucción; fue alterado o reparado por personal no autorizado por TRUPER®. Para efectiva la garantía debe ser presentada el producto, poliza sellada o factura o recibo o comprobante que conste lo comprado en Corregidora 35, Centro, Cuautitlán, CDMX, 06060, donde también podrá adquirir partes, componentes, o en red de servicio. Tel. 800-018-7873. Made in/Hetido en China. Importador TRUPER, S.A. de C.V. Padrue su red de servicios. Incluye los gastos de transporte del producto que derive de su cumplimiento de consumoables y accesorios. Incluye los gastos de instalación y/o desmontaje del producto.


Código	Modelo	Marca	PRETUL	PULA-7P	28151
--------	--------	-------	--------	---------	-------


En caso de tener algún problema para contactar con Centro de Servicio Autorizado RUPER consulte nuestra página WWW.RUPER.COM donde obtendrá en instantánea información detallada sobre los centros más cercanos.

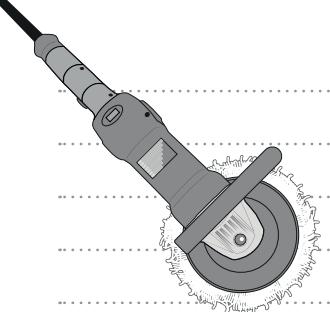

Notas

PRETUL

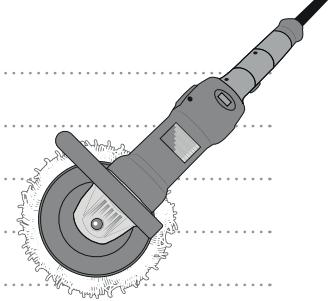


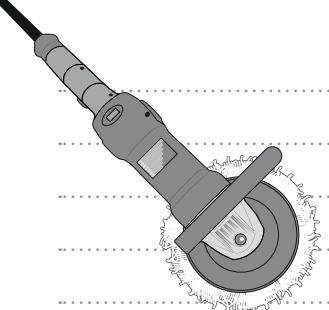

Notas

PRETUL

Lamido de cardones

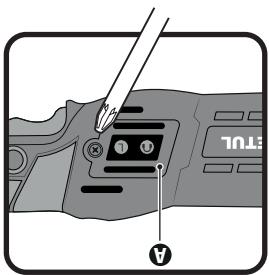

- Es necesario reemplazar los carbonos de quemados, todos o de menos de 5 mm de largo), por carbones nuevos.
- Cuando se hace el cambio de carbono siempre debén cambiarse los dos carbonos.
- Utilice un desmolillador para quitar la tapa de los carbonos viejos.
- Retire los carbonos usados del portacarbonos y rellene el pozo acumulado con arena comprimida.
- Coloque los carbonos nuevos en su sitio. Los carbonos deben estar en los portacarbonos.
- Despues de colocar los carbonos nuevos, permita que la herramienta funcione durante 10 minutos sin cargar de trabajo para que los carbonos levanten un motor jalonado.
- Solo se deben de usar carbonos de repuesto TRUPER, dischados con la dureza Y la resistencia elctrica adecuada para cada tipo de motor. Los carbonos furea de especificaciones piden darlar el motor.

Almacene la herramienta ordenadamente en un lugar seco y protegida de polvo y agua.

Almacenamiento

recomendados por el fabricante. En caso de que la herramienta no funcione la reparación deberá ser realizada por algún Centro de Servicio Autorizado TRUPER.

Reparacion

- Asegúrese siempre de que la herramienta esté desenchufada de la toma de corriente.
- Mantenga la herramienta y los accesorios intercambiables.
- Verifique regularmente si todos los tornillos de fijación limpianos.
- Están sujetos a la humedad y los accesorios intercambiables.
- Revise su herramienta regularmente y asegúrese de que no haya daños en el cable.
- Cambie el disco de lana en el caso de que se agriete o se desgaste.
- Utilice únicamente discos de lana que estén dentro de la gama de velocidad.

Puesta en marcha



PRETUL

Control de velocidad

- Siempre revisar que el cable no esté cortado o pegado.
 - La carcasa no debe estar suelta o dañada.
 - Para evitar que se sobrecaliente el motor, debe limpiar cepillo.
 - Nunca utilice agua u otros líquidos, solamente utilizar un limpiador.
 - Descubrir siempre la herramienta antes de proceder a tiempo en terminarse.
 - Bola absorte demasiada cerca no va a tardar mucho si se trabaja de pie.
 - Si el error más común es aplicar demasiada fuerza, se tardará más tiempo en terminar.
 - Para evitar que se sobrecaliente el motor, debe limpiar las ranuras de ventilación de manera regular.
 - La carcasa es de plástico y es más resistente al agua.
 - Despues de uso prolongado la grasa en la cebolla se hermaneta debe ser cambiada en un Centro de servicio autorizado TRUPER.

En la sección de **IMPLEMENTACIÓN**, se detallan los pasos para la instalación y configuración del sistema. Una vez instalado, el software presenta una interfaz intuitiva que permite al usuario acceder a las funcionalidades principales: **ESTADÍSTICAS**, **ANÁLISIS DE DATOS**, **REPORTES** y **MANAJERIA DE PROYECTOS**. Los datos se visualizan en forma de gráficos y tablas, facilitando la interpretación y toma de decisiones.


opinid

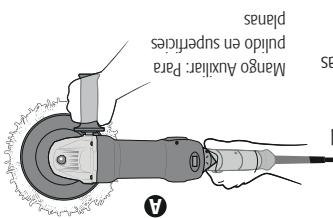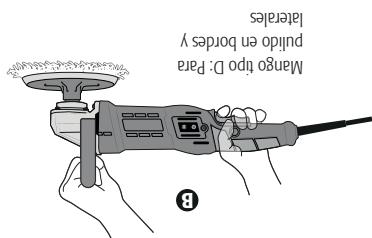

Como sujetar adecuadamente la herramienta

- Siempre sostenga la
mano con los dedos
separados y el pulgar
apoyado en la muñeca.
Sostenga el mango
entre los dedos y el
pulgar. Una mano
sostiene el mango
principal y la otra el
mango auxiliar (A).
Mantenga el mango
principal de modo que
el eje de rotación
se encuentre en la
base del mango (B).


a función de ajuste de velocidad podría dejar de funcionar.

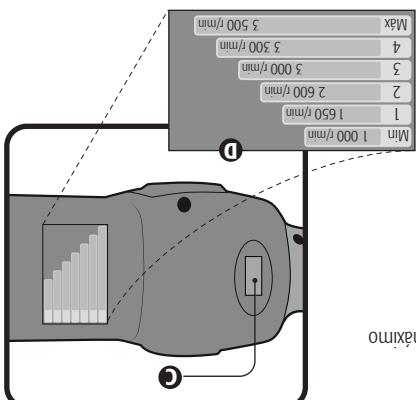

AVISO Si los controles de la herramienta a bajas velocidades duran un tiempo prolongado podrían causar la desaceleración del motor y un funcionamiento defectuoso de la herramienta.

- C.** Gire el control de velocidad constante de acuerdo con la tabla de desaceleración y sustituya el control de velocidad por el de velocidad constante. La velocidad constante se recomienda basándose en las condiciones de tránsito y velocidad de velocidad constante.

D. Gire el control de velocidad constante de acuerdo con la tabla de desaceleración y sustituya el control de velocidad constante por el de velocidad constante. La velocidad constante se recomienda basándose en las condiciones de tránsito y velocidad de velocidad constante.


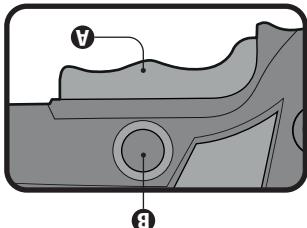


- Operación de interrupción:
 - Presione la tecla **(A)** para hacer que la herramienta se detenga.
 - Conserve la tecla **(A)** presionada para interrumpir la herramienta.
 - Operación continua:
 - Presione el interruptor **(A)** para hacer que la herramienta comience a trabajar.
 - Conserve la tecla **(B)** presionada para mantener la herramienta en uso.
 - Operación conmutación:
 - Presione el interruptor **(A)** para iniciar la herramienta.
 - Presione el interruptor **(B)** para detener la herramienta.
 - Presione la tecla **(A)** para iniciar la herramienta.
 - Presione la tecla **(B)** para detener la herramienta.
 - Para interrumpir su funcionamiento, presione y desplace el botón de uso continuo (**B**).
 - Presione el interruptor **(A)** y bloqueele, apretando el botón de uso continuo (**B**).
 - Conserve la tecla **(A)** de tomacorriente.
 - Presione la tecla **(B)** de tomacorriente.
 - Para interrumpir su funciónamiento, presione y desplace el interruptor.

Puesta en marcha

A. ADVERTENCIA El interruptor posee bloques de seguridad en la posición de encendido para la comodidad del operador. Nunca utilice el uso prolongado. Tenga cuidado al bloquear la herramienta en la posición de encendido y mantenga bien sujetela herramienta. No conecte la herramienta con el interruptor de bloqueo activado. La herramienta se pondrá en marcha sin apoyo y podría ocasionar una lesión personal o romperse.

ADVERTENCIA

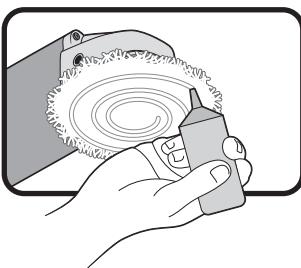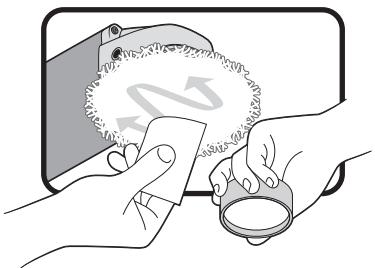

Aplicación de pulimento

- La mayoría de pluviales vienen en pasta o en forma líquida. Antes de usar cualquier pluvial lea todas las instrucciones sobre los usos del producto y la forma correcta de empleo.

PRETUL

Preparation

Preparation

PRETUL

Montaje del disco

- Para una operación segura debe el trabajo cumplir con los siguientes requisitos:

Montaje del mango auxiliar

- Atomilla firmemente el mango tipo D a la cabaza de la pulidora con los tornillos, ronudas y llave incluidos.

- Alinee el mango tipo D a

- Montaje del mango tipo D


Montaje del mango tipo D

- © 2013 Pearson Education, Inc. All Rights Reserved. May not be copied, scanned, or duplicated, in whole or in part. Due to electronic rights, some third party content may be suppressed from the eBook and/or eChapter(s). Editorial review has determined that any suppressed content does not materially affect the overall learning experience. Pearson Education, Inc. reserves the right to remove additional content at any time if subsequent rights restrictions require it.

- PRETUL**

PREFACE

- For more information about the study, please contact Dr. Michael J. Hwang at (310) 206-6500 or via email at mhwang@ucla.edu.

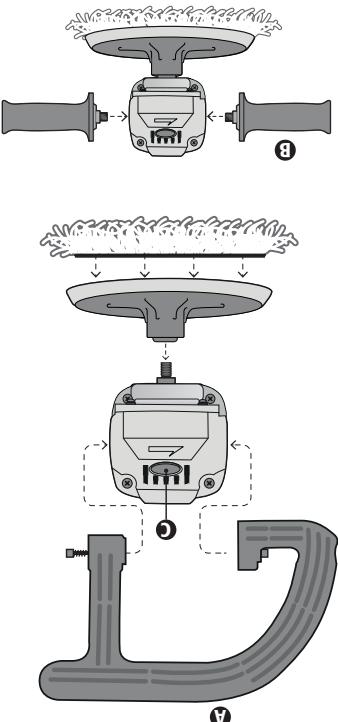

Instrucciones de operación

o desmonstrar el disco, nunca debe ser el resultado de la operación de pulido.

- Presione el seguro del eje (C) y monte el disco a la Cabeza de la Pulidora automática firmemente.
 - Para retirar el disco presione el seguro del eje y desatornille el disco.
 - Para seguir el disco presione el seguro del eje y desatornille el disco.

Motivación para la acción

- monitario que le facilite más el trabajo.

- Para una operación segura utilice el m

- Montaje del mango auxiliar

• Automóvil firmemente el mango tipo D


- Mantenaje del mango tipo D**

For more information about the study, please contact Dr. Michael J. Hwang at (319) 356-4000 or email at mhwang@uiowa.edu.


- PREIUL

111200


- 10.1002/anie.201907002

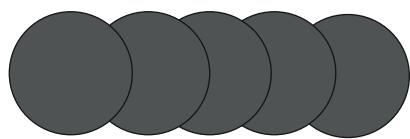

Discos de lila

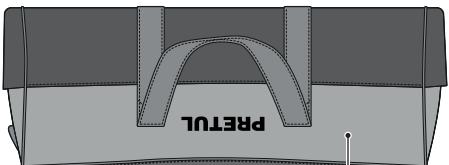


Maleta
Portaherramienta

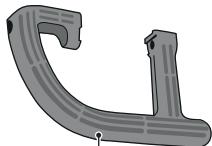


Mango D




Leave hexagonal

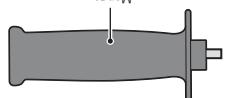


auxiliar
Máximo

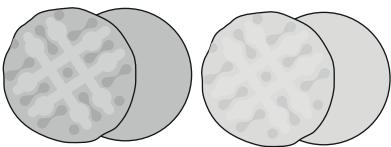

Espousas para Púlio

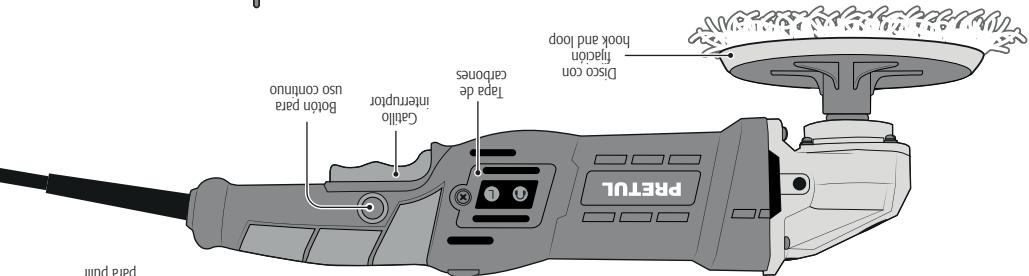

para pullir

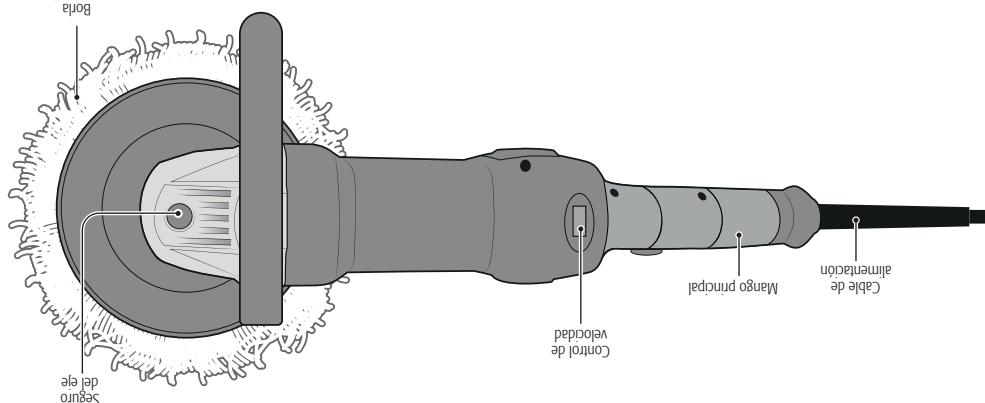

۱۰

PRETUL

Partes

Contragolpe y advertencias relacionadas

advertencias de seguridad

Advertencias de Seguridad

i

PRETUL



especiales para el uso en exteriores y reducen el riesgo de sufrir una descarga eléctrica.


ADVERFINCA Al operar herramientas eléctricas en extremitades, utilice una extensión alterada marcada como "Uso extremo" marca VOLTECK. Estas extensiones son

AWG = Calibre de alambre estadounidense (American Wire Gauge). Referencia: NMX-J-195-ANCE

de 10 A hasta 10 A	16 AWG	18 AWG (**)	16 AWG	16 AWG	16 AWG	16 AWG	14 AWG	14 AWG	12 AWG	12 AWG	8 AWG	6 AWG	de 15 A hasta 20 A
de 10 A hasta 13 A	16 AWG	18 AWG (**)	16 AWG	16 AWG	16 AWG	16 AWG	14 AWG	14 AWG	12 AWG	12 AWG	8 AWG	6 AWG	de 13 A hasta 15 A

Capacidad en	Número de	Calibre de extensión	Amperes	conductores	de 18 a 15 m mayor de 15 m
--------------	-----------	----------------------	---------	-------------	------------------------------

A) ADVERTENCIA Al usar un cable de extensión, asegúrese de que el cable de extensión, así como el cable de alimentación, sean lo suficientemente gruesos para transportar la corriente que se consume en la herramienta. Un cable de un calibre inferior o casi igual al calibre de la herramienta se tensión en la línea, tiene tendido y sobrecalienta el motor. La sobrecaloramiento del motor puede dañar la herramienta y causar lesiones graves.

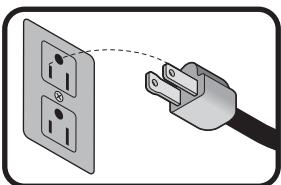

Reduquerimientos eléctricos



ADVERTENCIA Antes de obtener acceso a las terminales, todos los circuitos de alimentación deben ser desconectados.



La construcción del sistema eléctrico de esta herramienta es diferente por sus placas o determinaciones de líquidos durante su operación. No la lluvia, líquidos y/o humedad.

ADVERTENCIA: Si la calidad de alimentación es deficiente, existe riesgo de enfermedad para el animal. Un equilibrio dietético debe ser considerado.

ADVERTENCIA Si el celulo de plástico es deshecho dentro del recipiente de los residuos de la mitad, el celulo de plástico se descomponerá dentro del recipiente de los residuos de la mitad.

La clase de aislamiento térmico de los devanados del motor: Clase E

La clase de construcción de la herramienta es: Clase II

Y cable de alimentación tiene silleta-cables tipo:

Código •	28151	Descripción •	Pulidora de velocidad variable
Díametro •	7" (175 mm)	Tensión •	127 V~
Frecuencia •	60 Hz	Potencia •	1 200 W
Corriente •	9.5 A	Velocidad sin carga •	1 000 r/min - 500 r/min
Potencia •		Ciclo de trabajo •	20 minutos de trabajo por 10 minutos de descanso. Máximo历时 1 hora 30 min
Conductores •	18 AWG x 2C con temperatura de aislamiento de 105 °C	Ciclo de trabajo •	18 AWG x 2C con temperatura de aislamiento de 105 °C
Aislamiento •			

■ REALICE MANTENIMIENTO periódico a su máquina (página 11).

■ Mantenga limpia los oficiales de ventilación de la herramienta.

■ NUNCA apriete el seguro del eje cuando el disco esté girando.

■ Siempre utilice el mango auxiliar o el mango tipo "D".

■ NUNCA use el cable para transportar, levantar o desconectar la herramienta.

■ RESPETE LOS CICLO DE TRABAJO. 20 min de trabajo por 10 min de descanso. Máximo diario 1 hora 30 minutos.

RECOMENDACIONES DE USO Y CUIDADOS

- | | |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>■ ATTENCIÓN</p> <p>Para poder sacar el máximo provecho de la herramienta, alargar su vida útil, hacer válida la garantía en caso de ser necesario y evitar riesgos o lesiones graves, es fundamental leer este instructivo por completo antes de usar la herramienta.</p> <p>Guarde este instructivo para futuras referencias.</p> | <p>16 Poliza de garantía.</p> <p>15 Centros de servicio autorizados.</p> <p>12 Notas.</p> <p>11 Mantenimiento.</p> <p>9 Puesta en marcha.</p> <p>8 Preparación.</p> <p>7 Partes.</p> <p>5 Para uso de plíldores para autos.</p> <p>4 Advertencias de segundas para herramientas eléctricas.</p> <p>3 Requerimientos técnicos.</p> <p>3 Especificaciones técnicas.</p> |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|




Lea este instructivo por completo.
Antes de usar la herramienta.



! ATENCIÓN

PULA-7P

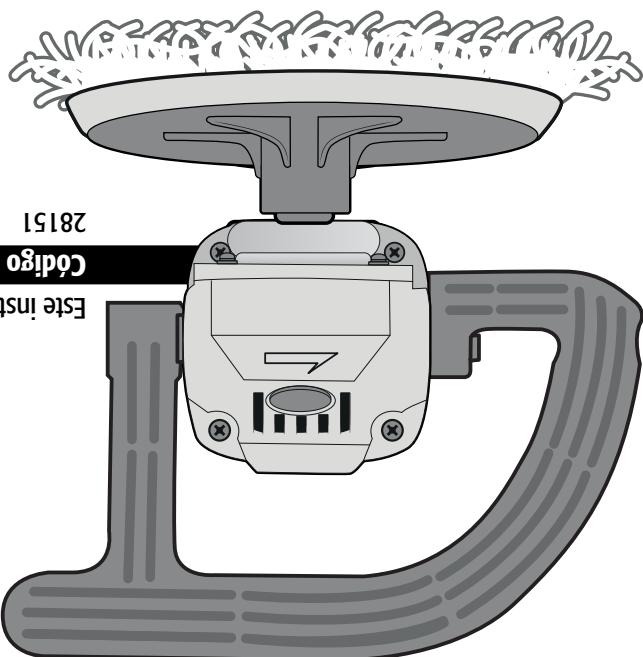

1200 W 7" 175 mm Potencia Diametro
75 mm

velocidad variable
Pulidora de
instruccivo de

ESPAÑOL

PRETUL



ESPAÑOL
ENGLISH