

Manual


Variable speed angle grinder

1.4 Hp

Power

4½"

Wheel

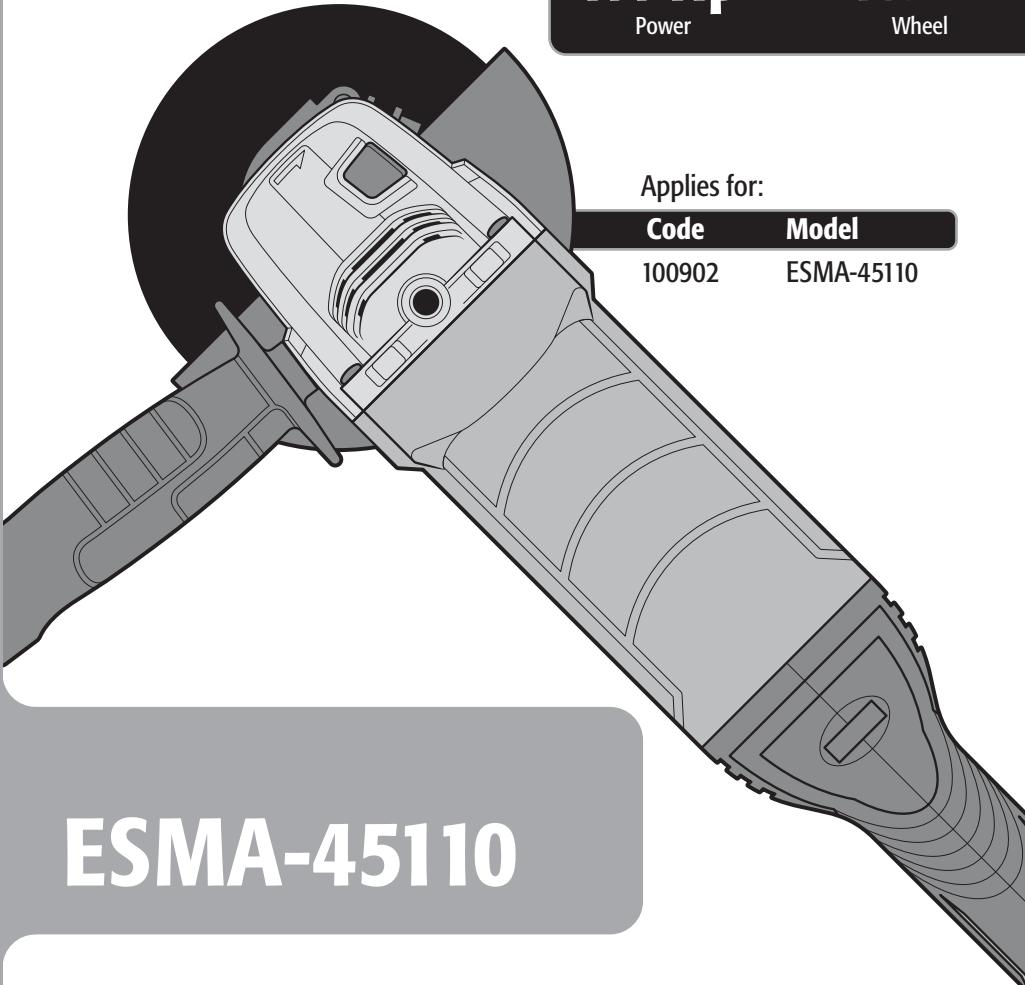

Applies for:

Code

100902

Model

ESMA-45110

ESMA-45110



Read this manual thoroughly
before using the tool.



Technical data	3
Power requirements	3
 General power tool safety warnings	4
 Safety warnings for angle grinders	5
Parts	7
Preparation	7
Start up	8
Maintenance	9
Notes	10
Authorized service centers	11
Warranty policy	12

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

Use and care recommendations

 **TO EXTEND THE LIFE OF YOUR TOOL, CLEAN IT WITH COMPRESSED AIR AFTER EACH USE.**

 **FULFILL THE WORKING CYCLES AT RATED LOAD**
30 min of work and 15 min of rest. Daily maximum 3 hours.



 **NEVER** use or pull the power cord to carry, lift, or disconnect the tool.

 **NEVER** press the lock button while the disc is running.



 Perform periodic **MAINTENANCE** to your machine (page 9).

ESMA-45110

Code	•	100902
Description	•	Variable speed angle grinder
Discs	•	4 1/2"
Voltage	•	127 V~
Frequency	•	60 Hz
Current	•	8.3 A
Power	•	1.4 Hp
Speed	•	6 000 RPM - 12 000 RPM
Duty cycle	•	Screwed thread size • 5/8-11-UNC-1A 30 minutes work per 15 minutes idle. Maximum 3 hours per day.
Conductors	•	18 AWG x 2C with insulating temperature of 221 °F
Insulation	•	Class II IP Grade • IP 20

Power Cord Grips used in this product: Type Y
Tool Build Quality: Reinforced insulation
Thermal insulation on motor winding: Class E

⚠ WARNING Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a TRUPER Authorized Service Center.

The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use.

Do not expose to rain, liquids and/or dampness.


⚠ WARNING Before gaining access to the terminals all power sources should be disconnected.



Power requirements

⚠ WARNING Tools with double insulation and reinforced insulation eliminate the need of a grounded power cord with three prongs or a grounded power connection.

⚠ WARNING When using an extension cable, verify the gauge is enough for the power that your product needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and overheating. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

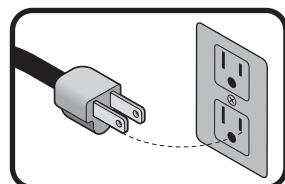

Ampere Capacity	Number of Conductors	Extension gauge from 6' m to 49'	Extension gauge higher than 49'
from 0 A and up to 10 A		18 AWG(*)	16 AWG
from 10 A and up to 13 A		16 AWG	14 AWG
from 13 A and up to 15 A	3 (one grounded)	14 AWG	12 AWG
from 15 A and up to 20 A		8 AWG	6 AWG

* It is safe to use only if the extensions have a built-in artifact for over current protection.

AWG = American Wire Gauge. Reference: NMX-J-195-ANCE

⚠ WARNING When operating power tools outdoors, use a VOLTECK grounded extension cable labeled "For Outdoors Use". These extensions are specially designed for operating outdoors and reduce the risk of electric shock.



General power tool safety warnings

⚠️ WARNING! Read carefully all safety warnings and instructions listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. **Save all warnings and instructions for future references.**

Work area

Keep your work area clean, and well lit.

Cluttered and dark areas may cause accidents.



Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

Sparks generated by power tools may ignite the flammable material.



Keep children and bystanders at a safe distance while operating the tool.

Distractions may cause loss of control.



Electrical Safety

The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.



Modified plugs and different power outlets increase the risk of electric shock.

Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

Personal safety

Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.

A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.



Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times.

This enables a better control on the tool during unexpected situations.

Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.

Loose clothes, jewelry or long hair may get caught in moving parts.



If you have dust extraction and collection devices connected onto the tool, inspect their connections and use them correctly.

Using these devices reduce dust-related risks.

Power Tools Use and Care

Do not force the tool. Use the adequate tool for your application.



The correct tool delivers a better and safer job at the rate for which it was designed.

Do not use the tool if the switch is not working properly.

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.

These measures reduce the risk of accidentally starting the tool.

Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.



Power tools are dangerous in the hands of untrained users.

Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.



Most accidents are caused due to poor maintenance to the tools.

Keep the cutting accessories sharp and clean.

Cutting accessories in good working conditions are less likely to bind and are easier to control.

Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

Service

Repair the tool in a TRUPER Authorized Service Center using only identical spare parts.

This will ensure that the safety of the power tool is maintained.



This tool is in compliance with
the Official Mexican Standard
(NOM - Norma Oficial Mexicana).

Safety warnings for angle grinders

This power tool is intended to function as a cutting tool. Read all safety warnings, instructions and specifications provided. Failure to follow the instructions outlined below may result in electric shock, fire and/or serious injury.

Select the right disc

CAUTION • Never use wheels with bigger diameter than the size required in the tool.

WARNING • Use only wheels or accessories than 12 000 RPM speeds.

CAUTION • The assigned speed of the accessory must be at least equal to the maximum speed marked on the tool. Accessories that work faster than their assigned speed can break and fall off.

CAUTION • Use only wheels or accessories with an orifice that fits perfectly in the tool spindle.

CAUTION • Use only wheels or accessories specifically designed for the chosen material.

Keep present people at a safe distance from the work area. Anyone entering the work area should wear personal protective equipment.

Before operating the grinder

• Set apart some time and assess the job you are about to do. Pay attention to all the necessary cautions before starting to grind.

DANGER • Remove all the fastening wrenches from the tool. Otherwise they can shoot away causing sever injuries to the user.

WARNING • Double-check the guard. It should be perfectly fastened and in good working condition. Do not use the tool without a guard. Fragments of workpieces or a broken accessory can break off and cause damage beyond the immediate area of operation.

CAUTION • Double-check the disc. It should not be broken or cracked. Tap the wheel gently with a wooden hammer and listen for a strange sound to learn if is cracked.

DANGER • Before plugging the tool, see if is in the OFF position. Otherwise the tool could start unexpectedly causing severe injuries.

CAUTION • Run the tool 30 seconds before using, to detect important vibration or any type of unusual movement. If detected, unplug the tool and take it to a TRUPER Authorized Service Center.


CAUTION • See if the wheel rotates freely.
• Do not tighten the disc. It could brake.

WARNING • To work with small work pieces fasten with wrenches. Never use your hands to hold the piece.

DANGER • Do not place saw wheels for wood or a serrated blade. Such blades create frequent kickbacks and loss of control.

Keep present people at a safe distance from the work area. Anyone entering the work area should wear personal protective equipment.

Operations for which this power tool is not designed may result in an accident and cause personal injury. It is not recommended to use this power tool in operations such as sanding, brushing or polishing. Do not use accessories that are not specifically designed and recommended by the manufacturer.

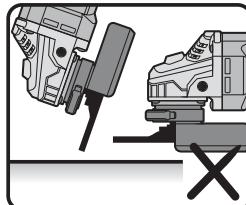

Wrong way to operate the grinder

While operating the grinder

CAUTION • Do not start the tool when the wheel is touching the work piece.

WARNING • Wear safety glasses, gloves and an apron when using the tool.



WARNING • Keep the power cable or extension in the back of the tool. Avoid accidentally damaging the cables with the disc.

• If control of the power tool is lost, the cable may be cut or tangled and the operator's arm or hand may be pulled toward the rotary attachment.

WARNING • Never hold the tool by the power cable. Hold by the housing or auxiliary handle.

CAUTION • Hold the tool by the isolated parts. The cutting tool could come into contact with hidden wiring or its own cable. Making contact with a "live" wire causes the metal parts to electrify and give an electric shock to the user.

• Never let go of the power tool until the attachment comes to a complete stop.

• Never hit the work surface with the disc.

CAUTION • To get the best result with the grinding process, the inclination of the wheel and the working surface should have an angle measuring 15° to 30°.



DANGER • When the wheel is rotating never use the spindle lock to stop it. It is very dangerous and may cause injuries to the user.

CAUTION • Do not touch the wheel or the working piece after grinding. Wait for them to cool down. Never try to cool them down using water or oil.


WARNING • Before checking, adjusting or changing wheels, double-check the tool is not plugged in.

• Do not use the power tool near flammable materials.
• Do not operate the tool while it is being transported to your side.

DANGER • Sparks caused when grinding may be dangerous. Use caution. Make sure sparks do not get into contact with skin or flammable substances.

• Gradually clean the tool's vents. The motor fan directs dust into the housing and excessive accumulation of metal dust can cause an electrical hazard.

• Do not use accessories that require liquid refrigerants. The use of water or other liquid refrigerants can result in an electric shock.

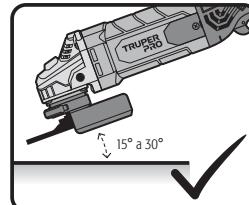

Right way to operate the grinder

The outer diameter and thickness of the accessories must be within the assigned capacity. Incorrectly sized accessories cannot be properly protected or controlled. For best results use 4 - 1/2" (115 mm) cutting wheels with 1 mm - 6.5 mm thickness.

⚠ DANGER KICKBACK (Sharp Recoil)

Kickback (sharp recoil) is a sudden reaction when a rotating wheel, backrest, brush, or other accessory gets stuck or snagged. Stalling or snagging causes rapid stalling of the rotary attachment which in turn causes the power tool to be forced uncontrollably in the direction opposite to the rotation of the attachment at the working point. An abrasive wheel jams into the workpiece, the edge of the contacting wheel can be pinched into the surface of the material causing the wheel to stop, creating a kickback (sudden recoil). The wheel may break and the fragments may jump in the direction of or away from the operator, depending on the direction of wheel movement at the point of jamming.

Kickback can occur as a result of misuse of power tools and/or improper operating procedures or conditions and can be avoided by taking the precautions listed below:

- a) Keep a firm grip on the power tool. Maintain your body and arm so that they can resist the forces of kickback. Always use the auxiliary handle, if provided, for maximum control over kickback or the reaction of the torsional movement of the engine during starting. The operator can control the torsional movement and the kickback forces if the appropriate precautions are taken;
- b) Never place your hand near the rotating attachment.

The accessories may kick back in your hand;

- c) Do not place your body in the area where the power tool can move if kickback (sudden recoil) occurs.

This will propel the power tool in the opposite direction of wheel movement at the point of engagement or binding;

- d) Take special care when working on corners, sharp edges, among others. Avoid bouncing and jamming of the attachment.

When working corners, sharp edges, or bouncing, can cause the attachment to jam and result in loss of control of the power tool or kickback (sudden recoil) of the power tool.

⚠ WARNING Specific safety for grinding and cutting operations with abrasives

- a) Use only wheel types that are recommended for the specific power tool and the specific tool holder that is designed for the selected disc.

Wheels that are not designed for the power tool cannot be properly protected and are unsafe;

- b) The grinding surface of wheels with a sunken center must be installed below the plane of the guard.

An improperly installed wheel may project burrs outside the plane of the guard and cannot be properly protected;

- c) The guard must be securely fastened to the power tool and positioned to provide maximum safety, so that the least amount of the blade is exposed to the operator.

Do not use damaged accessories. Before each use inspect the accessories. * Check abrasive wheels for damage.

- * Check backing pads for cracks, tears or excessive wear

After inspecting and installing the accessory, operate the tool at maximum speed without charge for one minute. Damaged accessories usually break during this period of time.

Do not use accessories that are not specifically designed and recommended by the manufacturer. The fact that the accessory may be installed on the power tool does not ensure safe operation.

- d) Wheels should be used only for their recommended applications. For example: do not grind with the side of a cut-off wheel. Abrasive wheels are used for perfect grinding. If lateral forces are applied, they can break;
- e) Always use flanges in perfect condition, of the correct size according to the shape of the selected disk.

A flange with the correct characteristics supports the disc, which reduces the possibility of wheel rupture. The flanges for cut-off wheels can be different from the flanges for grinding wheels;

- f) Do not use worn out disks from larger or higher capacity tools

Disks that are designed for larger or higher capacity tools are not suitable for the increased speed that occurs in the operation of a smaller size or capacity tool and may defragment.

⚠ WARNING Additional safety warnings for abrasive cutting operations

- a) Avoid locking or applying excessive pressure to the abrasive cut-off wheel. Do not attempt to make an excessively deep cut.

Applying excessive force to the wheel increases the load on the power tool and the susceptibility to deformation in the cutting area and increases the possibility of kickback (sudden recoil) or blade breakage;

- b) Do not place your body in line and behind the rotating disc.

When the disc, at the point of operation, is aligned with your body, the possibility of a kickback (sudden recoil) can propel the spinning wheel and the power tool directly against you;

- c) When wheel operation is interrupted or cutting stops for any reason, turn off the power tool and keep it stationary until the wheel comes to a complete stop. Do not attempt to remove the blade while it is in motion, as this may cause kickback (sudden recoil) or similar effect.

Investigate and complete corrective actions to eliminate the cause of the spin interruption;

- d) Do not restart the cutting operation on the workpiece. Allow the blade to reach maximum speed off the workpiece and carefully restart cutting.

The abrasive cut-off wheel can jam, move upwards or produce a kickback if cutting is restarted on the workpiece;

- e) Support large workpieces on presses or clamping brackets to reduce the risk of the abrasive cut-off wheel becoming trapped or of kickback (sudden recoil).


Large pieces tend to sink under their own weight. Brackets should be placed under the workpiece near the cutting line and near the edge of the workpiece on both sides of the abrasive cut-off wheel;

- f) Be careful when making a "very small cut" in walls or other blind areas or where there is no visibility of internal components.

The protruding abrasive cutting wheel can cut through gas or water pipes, electrical wiring, or objects that may cause kickback (sudden recoil).

Parts


TRUPER
PRO

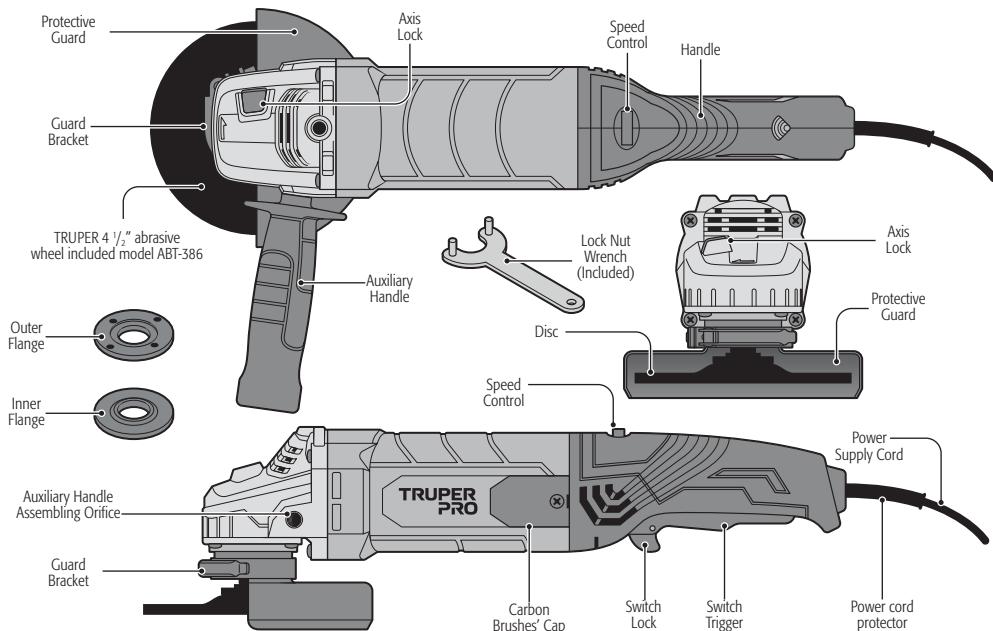

Preparation


Protection Guard Assembly

1. Open the clamp lever and match both cantilevered parts inside the protection guard bracket with the matching slots in the axis cover. Push the protective guard down until the protruding parts engage and rotate freely with the corresponding grooves in the axis cover.
2. With the clamp lever open, turn the protective guard to the desired working position.
3. Set it pushing the bracket lever.

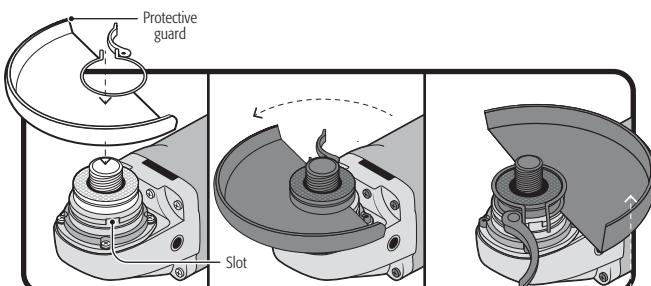

Disc Assembly


4. Fit the inner flange onto the spindle.
 5. Set the disc onto the inner flange.
 6. Set the outer flange onto the spindle.
 7. Press the spindle lock into the grinder head.
 8. Screw the outer flange with the lock nut wrench until securely fastened.
- DANGER** The spindle lock should only be used to change discs.
Never use it to stop the disc while rotating.

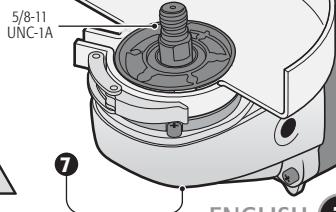

ENGLISH

Auxiliary Handle Assembly

⚠ WARNING Before performing any operation, always make sure that the auxiliary handle is firmly installed. Thread the auxiliary handle into one of three positions based on operator preference and application.

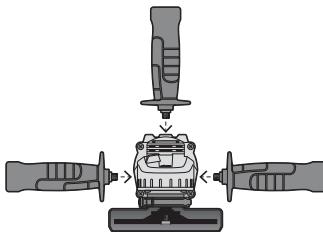

Start up

The angle grinder is a manual power tool. It is used to grind and cut steel, pipes, and angles in iron, bricks, tiles, stone and/or ceramic pieces. Also to remove burr from metal surfaces, to level and smoothing out soldering. When changing the tool accessory, it can be used to clean rust and to buff metal surfaces and other materials.

Switch On

- Intermittent operation:


Push switch latch (**A**) forward, then depress switch trigger (**B**). To stop using it, simply release the trigger.

- Continuous operation:

Push the switch latch (**A**) forward, then depress the switch trigger; push the switch safety forward again, without releasing the safety release the trigger.

The lock will remain depressed and the tool will remain on.

To interrupt its operation, press and then release the switch.

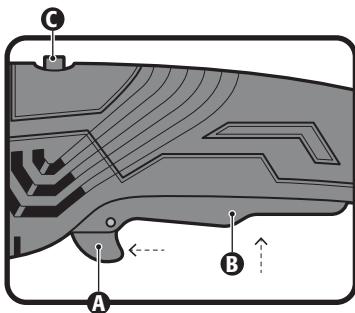

Speed Control

- The tool can run in different speeds. Select by adjusting speed control (**C**) in the switch.

1	6 000 RPM
2	7 500 RPM
3	9 000 RPM
4	10 000 RPM
5	11 000 RPM
6	12 000 RPM

How to correctly hold the tool

Always hold the tool using both hands. One hand holds the handle and the other hand on the auxiliary handle. Use care not to obstruct the ventilation slots.



- Grinding:

For better results hold the tool at an angle of 15° to 30° with regards to the work piece. Move backward and forward with a constant rhythm and a slight pressure. This way the work piece will not get too hot, will not fade and rough edges will not appear.

- Cutting:

Do not press, tilt or oscillate the tool. Use a moderate speed. The wheel should always rotate in a movement opposite to the cutting movement. Never the other way around, as there is danger that the tool shoots out of control.

For cutting hard stone, using a diamond wheel is recommended.

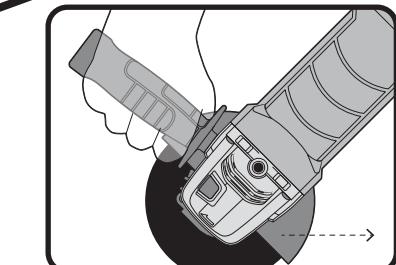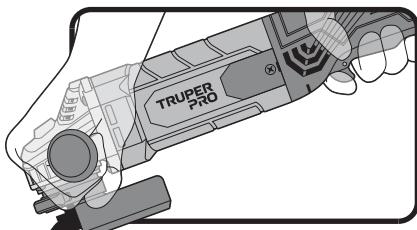

Useful Tips

- To prevent damaging the wheel work using the wheel into the right position.
 - Press onto the work piece using less force than the tool's weight to avoid overload and damaging the motor and disc.
 - After installing a new wheel allow it to rotate with no load at least during one minute. If it vibrates, replace immediately.
- ⚠ CAUTION** • Avoid working onto wood or soft materials like lead. These materials saturate the wheel very fast and make it unusable.

Maintenance


- Before cleaning the tool disconnect the tool.
- Never use water or other liquids. Use only a brush.
- To avoid motor overheating clean the ventilation slots regularly.
- Double-check all the tool components are securely fastened.
- The housing should not be cracked or damaged.
- Double-check the power cable is not cut or peeled.
- After a prolonged use the grease on the tool head should be replaced in a TRUPER Authorized Service Center.

Repairs

Use only spare parts and accessories recommended by the manufacturer. In the event the tool is not working, repairs should be carried out in a TRUPER Authorized Service Center.


Carbon Brush Replacement

- Replace worn (burnt, broken or smaller than 5 mm long) carbon brushes. Use new carbons.
- When replacing carbons always replace both carbons at the same time.
- Use a screwdriver to remove the cap from the carbons.
- Remove worn carbons from the housing. Clean accumulated dust with compressed air.
- Set the new carbons in a reverse order. Carbons should easily fall into the carbon housing.
- After setting up new carbon brushes let the grinder running a couple of minutes unloaded. This way the carbon brushes will adjust better.
- Use only original TRUPER spare carbon brushes, designed specifically with the right strength and electric resistance for each type of motor. Carbon brushes with different specifications may damage the motor.
- For better results, it is recommended to use grinding and/or cutting wheel to 4-1/2" TRUPER

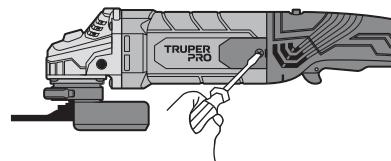

Storage

Store the tool neatly in a dry place. Protect against dust and water.

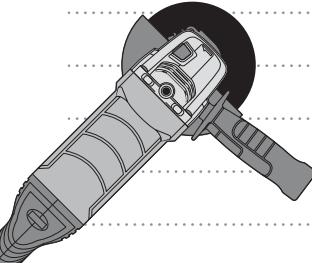

Authorized service centers

**TRUPER
PRO**

In the event of any problem contacting a TRUPER Authorized Service Center, please see our webpage WWW.TRUPER.COM to get an updated list, or call our toll-free numbers 800 690-6990 or 800 018-7873 to get information about the nearest Authorized Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0537	
BAJA CALIFORNIA	SUCURSAL TIJUANA AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100	
BAJA CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115	
CAMPECHE	TORNILLERÍA Y FERRETERÍA AAA AV. ÁLVARO OBREGÓN #324, COL. ESPERANZA C.P. 24800 CAMPECHE, CAMP. TEL.: 981 815 2808	
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083	
CHIHUAHUA	SUCURSAL CHIHUAHUA AV. SILVESTRE TERRAZAS #128-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 614 434 0052	
MEXICO CITY	FIX FERRETERÍAS EL MONSTRUO DE CORREGIDORA, CORREGIDORA # 35, COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX. TEL: 55 5522 5031 / 5522 4861	
COAHUILA	SUCURSAL TORREÓN CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL: 871 209 68 23	
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL: 314 332 1986 / 332 8013	
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZURIJO #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO.TEL.: 618 817 1946 / 618 818 2844	
ESTADO DE MÉXICO	SUCURSAL CENTRO JILOTEPEC PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MEX. C.P. 54257 TEL: 761 782 9101 EXT. 5728 Y 5102	
GUANAJUATO	CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 617 7578 / 79 / 80 / 88	
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL.: 747 478 5793	
HIDALGO	FERREPRECIOS S.A. DE C.V. LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616	
JALISCO	SUCURSAL GUADALAJARA AV. ADOLFO B. HORN # 6800, COL. SANTA CRUZ DEL VALLE, C.P. 45655, TLAJOMULCO DE ZUÑIGA, JAL. TEL.: 33 3606 5285 AL 90	
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858	
MORELOS	FIX FERRETERÍAS CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931	
NAYARIT	HERRAMIENTAS DE TEPIC MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540	
NUEVO LEÓN	SUCURSAL MONTERREY CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790	
OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL.: 287 106 3092	
PUEBLA	SUCURSAL PUEBLA AV PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLACINGO, PUE. TEL.: 222 282 8282 / 84 / 85 / 86	
QUERÉTARO	ARU HERRAMIENTAS S.A DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544	
QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL. EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL.: 984 267 3140	
SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, SLP. TEL.: 444 822 4341	
SINALOA	SUCURSAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400	
SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 413 2392	
TABASCO	SUCURSAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 353 7244	
TAMAULIPAS	VM ORINGS Y REFACCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552	
TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502	
VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA ESQ. HORTENSIA S/N, COL. PRIMAVERA, C.P. 93308, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484	
YUCATÁN	SUCURSAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMAN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451	

Code	Model	Brand
100902	ESMA-45110	TRUPER PRO

Warranty. Duration: 3 years. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by TRUPER®. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. Phone number **800-018-7873**. Made in China. Imported by TRUPER, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.



Stamp of the business. Delivery date:

sello del establecimiento comercial. Fecho de entrega:



I, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Tel. 761 782 9100.
real de servicios. Tel. 800-018-7873. Made in/Hecho en China. Importador TRUPER, S.A. de C.V. Parque Industrial
consumibles y accesorios, incluye los gastos de transporte del producto que derivan de su cumplimiento de su
en Corregidora 35, Centro, Querétaro, CDMX, 06060, donde también podrás adquirir partes, componentes,
presente el producto, poliza sellada o factura o recibo o comprobante, en el establecimiento donde lo compró o
instalación; fue allí donde se preparó por personal no autorizado por TRUPER®. Para hacer efectiva la garantía
funcionamiento, excepto si se uso un condimento distinto a los normales; cuando no fue operado conforme
Garantía. Duración: 3 años. Cobertura: piezas, componentes y mano de obra contra defectos de fabricación o
funcionamiento, excepto si se usó un condimento distinto a los normales; cuando no fue operado conforme
a las instrucciones de funcionamiento. Excluye daños causados por accidente, negligencia, abuso, mal uso, alteración
o manipulación del producto. No cubre gastos de envío ni instalación.

Código	Modelo	Marca	TRUPER PRO	ESMA-A-45110	100902
--------	--------	-------	------------	--------------	--------


garantía
poliza de

TRUPER PRO

En caso de tener algún problema para contactar un Centro de Servicio Autorizado TRUPER consulte nuestra página WWW.TRUPER.COM donde obtendrá una lista actualizada, o llame al: 800 690-6990 ó 800 018-78-73 donde le informarán cuál es el Centro de Servicio más cercano.

MORELOS FIX FERRETERIAS CPTNA MONTZERAS #95, ESO. JOSE PEREZ, COL. CENTRO, CP. 6240, CUAUTLA, MOR. TEL.: 735 28931	NAYARIT HERMOSILLAS DE TEPIC MEXICALI #171, COL. CRISTAL, CP. 63000. TEL.: 311 254040	NEW LEO SUCURSAL MONTERREY CARRERA 100 LLEGADA #500, 18 MONTERREY PARKS, NUEVO LAGO, TEL.: 81 352 791 / 81 352 790	OAXACA FIX FERRETERIAS A. 20 DE NOVIEMBRE #910, COL. CENTRO, CP. 68300. TUXTEPEC, OAX. TEL.: 287 106 5092	PUEBLA SUCURSAL PUEBLA AV. PFERDICO #2-A SAN LORENZO ALMECTA, CP. 72710, CAMPANAS DEL CARMEN, Q.R. TEL.: 984 267 544	QUINTANA ROO FIX FERRETERIAS A/A, UNIVERSIDAD #180, COL. EL PASO, CP. 78320. SAN LUIS POTOSI, SL.P. TEL.: 44 822 4341	SINALOA SUCURSAL CIUDAGEN MORA, C.P. 80143, CIUDAGEN, SON. TEL.: 661 271 193 / 173 800	SONORA FIX FERRETERIAS CALLE 5 DE FEBRERO #157, SUR II 25 MZ. 10, COL. CENITRO, CP. 85000, CD. OBREGON, SON. TEL.: 661 44 32392	TABASCO SUCURSAL VILLAHERMOSA CALLE 353 55 TABASCO, 7A. INDUSTRIAL, TAB. TEL.: 993 353 2744	TAJAMULCAS VIA DIRECCIONES RODRIGUEZ, P.C. 88780, REYNOSA, C.P. 88780. TELMIS, TEL.: 899 926 7552	TLAXCALA SERVICIOS HERMILINAS INDUSTRIALES PDRIO SIRIA #173, COL. BARRIO DE SAN BARTOLOME, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 717 7552	VERACRUZ LA CASA DISTRIBUIDORA TRUPER PRIMAVERA #3538, PZA RICA, VER. TEL.: 782 823 8100 / 826 8484	YUCATAN SUCURSAL MERIDA CALLE 33 #600 Y 602, LOCAL 101, TECNOCABA MULAYA, MPIO. UMA, CP. 97390, MERIDA, YUC. TEL.: 999 912 2451
AGUASCALIENTES DE TODO PARA LA CONSTRUCCION GRAL. ORBEGO #120, COL. GRIMAL, CP. 20030. ACUACALIENTES, AGS. TEL.: 449 994 0577	BAJA SUCURSAL TIJUANA PTORD #61, CP. 22724, TIJUANA, B.C. TEL.: 661 996 5100	CALIFORNIA SUR FIX FERRETERIAS AV. LA ENCANTADA LOTE #5, PTORD #61, TIJUANA, B.C. TEL.: 661 996 5100	CHIAPAS FIX FERRETERIAS AV. CENTRAL SUR #27, COL. ESPERANZA TEL.: 661 112 1115	CAMPECHE TORNILLOSA CAMPESINA CP. 25700, CONSULTORIO B.C.S. TEL.: 661 112 1115	COAHUILA SUCURSAL TORREBLANCA TEL.: 5522 503 / 5522 4861	COLIMA SOMBAS BY MOTORS BYMESTA DE MANZANILLA BLVD. MIGUEL DE LA MADRID, KM. 16 DE SEDEMPRES, CP. 28250, MANZANILLA, COL. TEL.: 313 32 1986 / 332 3083	DURANGO TORNILLOS AGUILA S.A. DE C.V. DGUO #200, COL. LUIS ENFREIDIA DURANGO, TEL.: 618 817 1946 / 618 818 2844	GUANAJAUTO CLASICO DE SERVICIO C.I.E.L. AV. MEXICO, APART #225, COL. INDUSTRIAL, CP. 38010. CELAYA, GTO. TEL.: 461 617 758 / 79 / 80 / 88	HIDALGO CLASICO DE SERVICIO C.I.E.L. CHILPANCINGO, MEX. TEL.: 747 748 7939 CALLE PRACTICAL MZ. 1, COL. SANTA FE, C.P. 39010.	JALISCO SUCURSAL GUADALAJARA AV. HACIENDA DE LA REPUBLICA #800, COL. SANTA CRUZ DEL VALLE, C.P. 45655, TLAJOMULCO DE ZUNIGA, JAL. TEL.: 33 3606 2585 AL 90	MICHOACAN EX-FERRETERIAS MICH. TEL.: 443 334 6858	
GUERRERO FERRETERIAS GRAL. CEMENTO 304 ROBLEDO, COL. CEMENTO, C.P. 43360, INTERIOR DE PASEO RIBERA, TEL.: 775 753 1165 / 775 753 1166	GUERRERO FERRETERIAS GRAL. CEMENTO 304 ROBLEDO, COL. CEMENTO, C.P. 43360, INTERIOR DE PASEO RIBERA, TEL.: 775 753 1165 / 775 753 1166	HIDALGO FERRETERIAS GRAL. CEMENTO 304 ROBLEDO, COL. CEMENTO, C.P. 43360, INTERIOR DE PASEO RIBERA, TEL.: 775 753 1165 / 775 753 1166	JALISCO SUCURSAL GUADALAJARA AV. HACIENDA DE LA REPUBLICA #800, COL. SANTA CRUZ DEL VALLE, C.P. 45655, TLAJOMULCO DE ZUNIGA, JAL. TEL.: 33 3606 2585 AL 90	MICHOACAN EX-FERRETERIAS MICH. TEL.: 443 334 6858								

donde le informarán cuál es el Centro de Servicio más cercano.

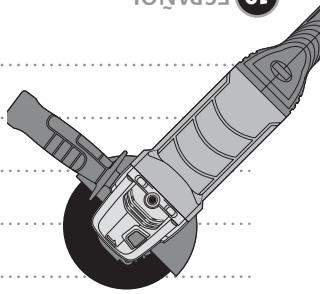

Notas

TRUPER PRO



Almacenamiento
Almacene la herramienta ordenadamente en un lugar seco y protegido de polvo y agua.

Almacenamiento

- Solo se deben de usar carbonos de repuesto TRUPER originales, diseñados mejor ajuste.
- Dureante algunos minutos sin carga de trabajo para que los carbonos tengian una duración más larga.
- Despues de colocar los carbonos nuevos, permita la esmeriladora funcionar con aire comprimido.
- Quite los carbonos nuevos invitando el orden. Los carbonos deben caer en los portacarbones fácilmente.
- Quite los carbonos desgastados del portacarbones y retire el polvo acumulado con aire comprimido.
- Utilice un destornillador para quitar la tapa de los carbonos.
- Cuando se aga el cambio de carbonos siempre deben cambiarse los dos carbonos.
- Es necesario reemplazar los carbonos desgastados (quemados), rotos o de menos de 5 mm de largo), con carbonos nuevos.
- Es necesario reemplazar los carbonos desgastados (quemados), rotos o de menos de 5 mm de largo), con carbonos nuevos.

Cambio de carbonos

Utile utilice reñiciones accesorios recomendados por el fabricante. En caso de que la herramienta no cumpla la preparación debida ser realizada por algún Centro de Servicio Autorizado TRUPER.



Reparación

- Siempre cambie en un Centro de Servicio Autorizado TRUPER.
- Despues de un uso prolongado la grasa de la cabeza de la herramienta debe revisar el eje para ver si tiene daños.
- La carcasa debe estar correctamente ensamblada.
- Revise que todos los componentes de la herramienta estén bien fijos.
- Nunca utilice agua u otros líquidos, solamente utilice un cepillo.
- Descubra siempre la herramienta antes de proceder a limpiarla.

Mantenimiento

- ATENCIÓN** • Evite trabajar madera o metales suaves como el plomo. Pueden estropear las tuercas y tornillos.
- Despues de instalar un disco nuevo permita que el disco gire sin trabaja al menos un minuto.
 - Presione sobre la pista de trabajo con una fuerza menor al peso de la herramienta para evitar que la sobrecarga dañe el motor y el disco.
 - Trabaje con el disco en la posición correcta para evitar que se dañe.
 - Desconecte siempre la herramienta antes de proceder a limpiarla.
 - Nunca utilice agua u otros líquidos, solamente utilice un cepillo.
 - Para evitar que se sobrealimente el motor, debe limpiar las ranuras de ventilación de manera regular.
 - Revise que todos los componentes de la herramienta estén bien fijos.
 - Nunca utilice agua u otros líquidos, solamente utilice un cepillo.
 - Desconecte siempre la herramienta antes de proceder a limpiarla.

Consejos útiles

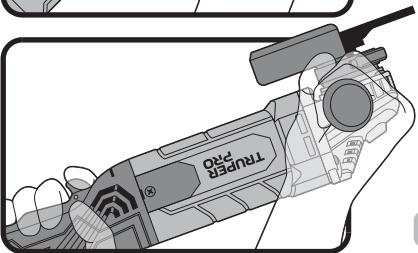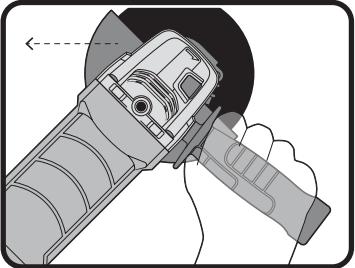

• No prensione, jalee un oscile la herramienta. Trabaje a una velocidad moderada.

• Ejerza una fuerza constante en el eje de control. Para cortar piedras duras es recomendable una fuerza constante.

• Ejerza una fuerza constante en el eje de control, pues existe el riesgo de que la herramienta se despedida si controla. Para cortar piedras duras es recomendable una fuerza constante.

• No prensione, jalee un oscile la herramienta. Trabaje a una velocidad moderada.

• Control: demasiado, no se decola y no se producen arrastres.

• Ejerza una fuerza constante en el eje de control. De esta forma la pieza de trabajo no se calienta demasiado.

• Ejerza una fuerza constante en el eje de control. Haga mas movimientos de adelante hacia atrás con una ligera presión a un ritmo constante.

• Para un mejor resultado sostenga la herramienta a 15° a 30°. Siempre sujetela las ranuras de ventilación.


• Sostenga la herramienta con ambas manos. Una mano sostiene el mango y la otra de mango auxiliar. Tenga cuidado de no obstruir las ranuras de ventilación.

Cómo sujetar adecuadamente la herramienta

1	6 000 rpm/min
2	7 500 rpm/min
3	9 000 rpm/min
4	10 000 rpm/min
5	11 000 rpm/min
6	12 000 rpm/min

• La herramienta puede operarse a distintas velocidades. Estas se seleccionan juntas de control de velocidad (C).

Control de velocidad

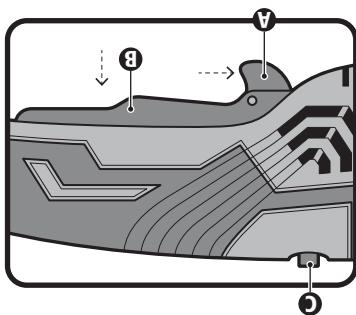

• Operación continua: Para interrumpir su funcionamiento, presione y desplace suelte el interruptor. Se seguramente se detendrá la herramienta permaneciendo encendida.

• Operación continua: Empuje hacia adelante el seguro del interruptor (A), después presione el gatillo del interruptor; vuelve a empujar hacia adelante el seguro del interruptor, sin soltar el seguro libre el gatillo.

• Operación continua: Empuje hacia adelante el seguro del interruptor (A), después presione el gatillo del interruptor.


• Operación continua: Para interrumpir su uso, simplemente suelte el gatillo.

• Operación continua: Empuje hacia adelante el seguro del interruptor (B), después presione el gatillo del interruptor.

• Operación continua: Empuje hacia adelante el seguro del interruptor (A), después presione el gatillo del interruptor.

Encendido

Puesta en marcha

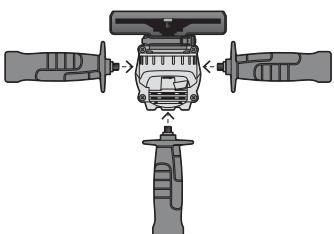

• Montaje del mango auxiliar: Antes de realizar cualquier operación, asegúrese siempre de que el mango auxiliar esté instalado según la preferencia del operario y la aplicación.

• Montaje del mango auxiliar: Rosque el mango auxiliar en alguna de las tres posiciones fijas.

• Montaje del mango auxiliar: Asegúrese de que el mango auxiliar esté instalado firmemente.


Montaje del mango auxiliar

Preparación

TRUPER PRO


7

ESPAÑOL

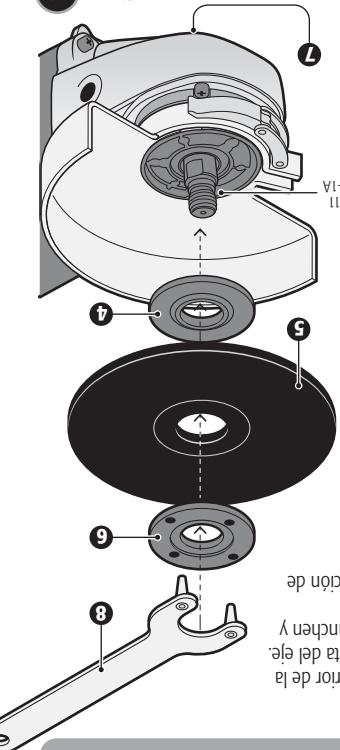

- discos. Nunca para frenar el disco mientras esté girando.
- A PELIGRO** El freno de disco se detiene solo si el disco se detiene de la fuerza del freno.
8. Ajuste la brida exterior con la llave de los puntos hasta que quede bien fija.
7. Presione el seguro del eje en la abertura de la esmeriladora.
6. Coloque la brida exterior en el eje.
5. Coloque el disco en la brida interior.
4. Fije la brida interior en el eje.

Montaje del disco

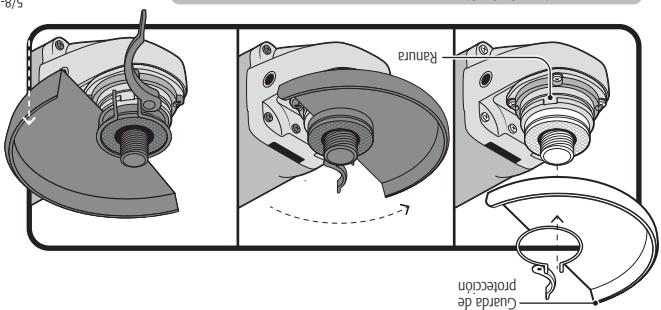


3. Fije la placa de protección de la abrazadera.
4. Fije la placa de la abrazadera.

5. Abra la placa de la abrazadera y haga coincidir las partes sobresalientes del interior de la abrazadera con las ranuras correspondientes de la cubierta del eje.
6. Empuje la placa de la abrazadera hacia abajo hasta que las partes sobresalientes de la cubierta del eje queden libremente con las ranuras correspondientes de la placa de la abrazadera.
7. Con la placa de la abrazadera abierta, gire la guarda hasta que la protección de la abrazadera esté en la posición de la placa de la abrazadera.
8. Cierre la abrazadera y trabaje la placa de la abrazadera.

Montaje de la guarda de protección

Preparación

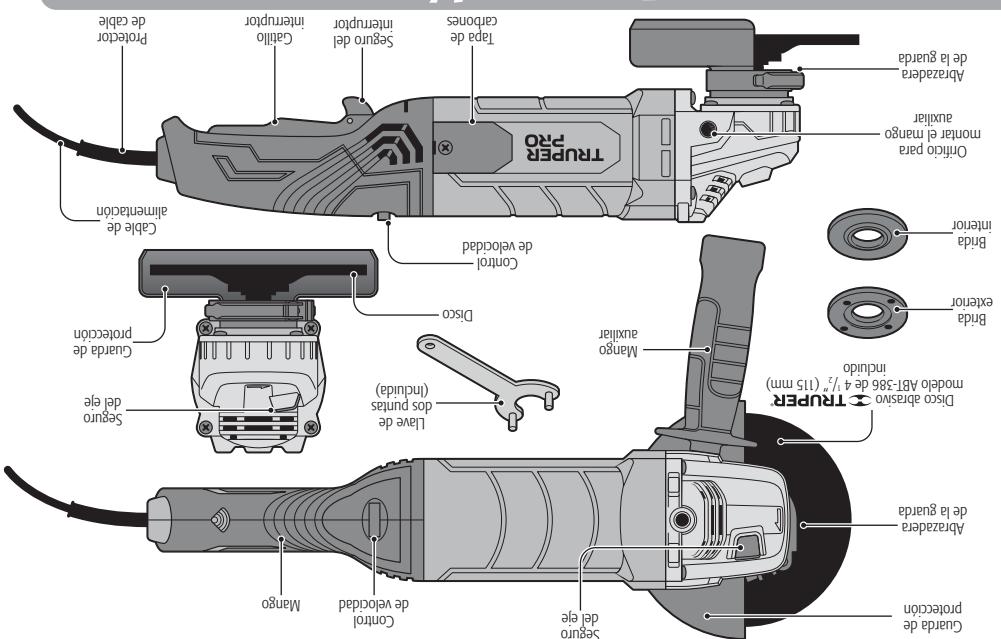

TRUPER PRO

Partes



ADVERTENCIA Al operar herramientas eléctricas en exteriores, utilice una extensión
especializada marcada como "Uso en exteriores" marca **VOLTECK**. Estas extensiones son
especiales para el uso en exteriores y reducen el riesgo de sufrir una descarga eléctrica.

AWG = Calibre de alambre estadounidense (American Wire Gauge). Referencia: NMX-J-195-ANCE

* Se permite utilizarlo siempre y cuando las extensiones masas cuenten con un reflejo de protección contra sobrecorriente.

de 0 A hasta 10 A	18 AWG(*)	Calibre de extensión	Número de conductores	Capacidad en
de 10 A hasta 13 A	16 AWG	mayor de 15 m	de 18 m a 15 m	Amperes
de 13 A hasta 20 A	14 AWG		3 (uno a tierra)	Conductores
de 15 A hasta 20 A	12 AWG		8 AWG	de 15 A hasta 20 A
	10 AWG		6 AWG	de 15 A hasta 20 A


Amperes indicada en la placa de datos de la herramienta. Si tiene dudas use el siguiente calibre más alto.
Siguiente tabla muestra el tamaño correcto que debe usar dependiendo de la longitud del cable y de la capacidad de

como resultado perdida de potencia y sobrecaleamiento del motor. La
cable de un calibre inferior causaría cables de tensión en la línea, teniendo
calibre suficiente para transportar la corriente que consume la herramienta. Un
cable de un calibre menor que el necesario para la herramienta se agotaría el uso.

ADVERTENCIA Al usar un cable de extensión, asegúrese de usar un
conector a tierra de un sistema de conexión a tierra.

rejilla de conexión a tierra en la necesidad de un cable de conexión a tierra. Los cables con
rejilla de conexión a tierra tienen sujetacables tipo Y.

ADVERTENCIA Las herramientas de doble aislamiento y aislamiento
entre partes con un voltaje de 500 V o más deben tener una conexión a tierra.

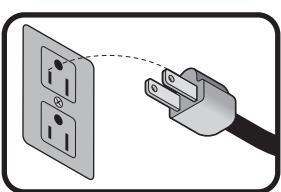

ADVERTENCIA Antes de obtener acceso a las terminales, todos los circuitos de alimentación deben ser desconectados.
La construcción del aislamiento eléctrico de esta herramienta es diferente por separado o
derramamiento de líquidos durante su operación. No la exponga a la lluvia, líquidos y/o humedad.

ADVERTENCIA Si el cable de alimentación se daña, este debe ser reemplazado por el fabricante o Centro de Servicio
Autorizado TRUPER, con el fin de evitar riesgos de descarga o accidente causable.

La clase de aislamiento térmico de los devanados del motor: Clase E
La clase de construcción tiene sujetacables tipo Y
El cable de alimentación tiene sujetacables tipo Y

Velocidad •	6000 r/min - 12000 r/min	Tamaño de hilo de ROSCA •	5/8-11-UNC-1A
Ciclo de trabajo •	30 minutos de trabajo por 15 minutos de descanso. Máximo 3 horas diarias.	Conductores •	18 AWG x 2C con temperatura de aislamiento de 105 °C
Alislamiento •	La clase de construcción de la herramienta es: Aislamiento refrigerado.	Alislamiento •	Eje fino de aluminio termico de los devanados del motor: Clase E
Potencia •	La clase de construcción tiene sujetacables tipo Y	Clase II	El cable de alimentación tiene sujetacables tipo Y
Corriente •	El cable de alimentación tiene sujetacables tipo Y	IP 20	La clase de aislamiento térmico de los devanados del motor: Clase E
Frecuencia •	60 Hz	Grado IP	La clase de construcción tiene sujetacables tipo Y
Tensión •	127 V~		La clase de construcción tiene sujetacables tipo Y
Discos •	4 1/2" (115 mm)		La clase de construcción tiene sujetacables tipo Y
Descripción •	Esmeladora angular de velocidad variable		La clase de construcción tiene sujetacables tipo Y
Código •	100902		La clase de construcción tiene sujetacables tipo Y

ESMA-4510

TRUPER PRO

Especificaciones técnicas

A PARA PROLONGAR LA VIDA DE SU HERRAMIENTA, LIMPIE CON AIRE

A NUNCA EXCEDA EL CICLO DE TRABAJO A CARGA NOMINAL

A Realice MANTENIMIENTO periódico a su máquina (página 9).

A NUNCA apriete el botón de bloqueo cuando esté girando el disco.

A NUNCA use el cable para transportar, levantar o desconectar la herramienta.

A NUNCA EXCEDA EL CICLO DE TRABAJO A CARGA NOMINAL

RECOMENDACIONES DE USO Y CUIDADOS

- 12 Poliza de garantía
 - 11 Centros de servicio autorizados
 - 10 Notas
 - 9 Mantenimiento.
 - 8 Puesta en marcha
 - 7 Preparación
 - 6 Partes
 - 5 Advertencias de seguridad
 - 4 Advertencias generales de seguridad
 - 3 Requerimientos eléctricos
 - 3 Especificaciones técnicas
- Los gráficos de este instructivo son para referencia, pueden variar del aspecto real de la herramienta.
- Guarde este instructivo para futuras referencias.
- Para poder sacar el máximo provecho de la herramienta, alargar su vida útil, hacer válida la garantía en caso de ser necesario y evitar riesgos o lesiones graves, es fundamental leer este instructivo por completo antes de usar la herramienta.

A ATENCIÓN

Indice

TRUPER PRO




Lea este instructivo por completo
antes de usar la herramienta.

ATENCIÓN



ESMA-45110

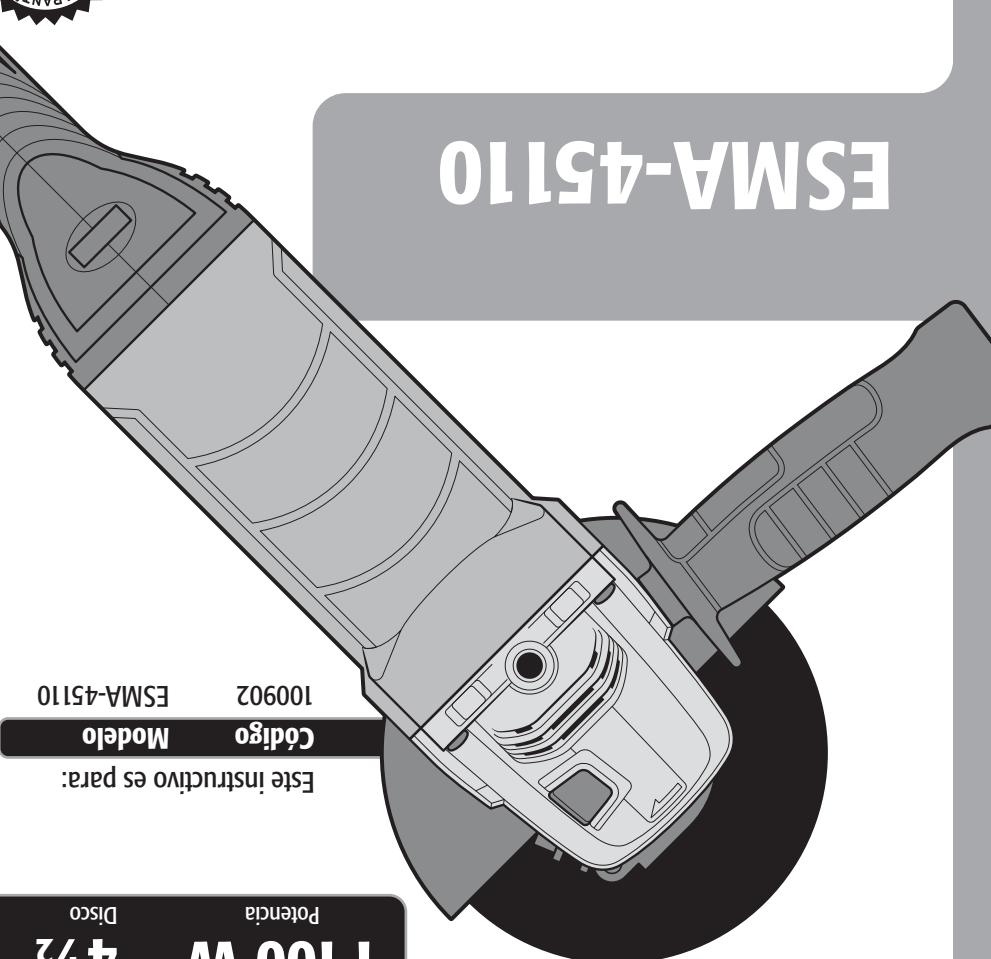

100902 ESMA-45110
Código Modelo

Este instructivo es para:

1100 W 4½" 115 mm
Potencia Disco
115 mm

Esmeriladora angular de velocidad variable

Instructivo de

TRUPER[®] PRO

ESPAÑOL