


Instructivo

1 Introducción del producto

El Regulador de tensión ofrece alta densidad de potencia y protección completa contra sobrecargas y picos con un diseño compacto y ergonómico. El regulador AVR seguirá alimentado los dispositivos conectados a pesar de las fluctuaciones de energía. Es ideal para el uso en el hogar o en oficina.

2 Descripción del producto.

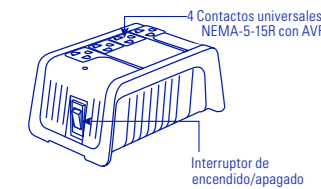

3 INSTALACIÓN E INICIO.

NOTA Por favor revise la unidad antes de su instalación. Asegúrese que ningún componente del paquete esté descompuesto o roto.

Colocación y condiciones de almacenamiento

Instale el regulador en un lugar libre de polvo y con suficiente flujo de aire. Para evitar interferencias, coloque el dispositivo a una distancia de al menos 20 cm de otros aparatos. Evite usar el regulador en entornos demasiado húmedos o con altas temperaturas. Verifique las restricciones especificadas.

Conexión a la red eléctrica y de carga.

Enchufe el cable de entrada de alimentación en el tomacorriente de la pared. Los componentes eléctricos conectados al regulador estarán protegidos al encender el interruptor.

PROBLEMA	POSIBLE CAUSA	ACCIÓN CORRECTIVA
El AVR no enciende (la luz LED está apagada)	El interruptor está apagado	Encienda el interruptor
	El tomacorriente de la pared no tiene energía	Intente con un tomacorriente distinto
	Probable sobrecarga	Desconecte algunos aparatos para reducir la carga

**45572
RV-800**

ESPECIFICACIONES

Potencia nominal: 800 VA / 400 W
Tensión de entrada: 100 V~ - 145 V~
Tensión de salida: 120 V~ +/- 10% (108 V~ - 132 V~)
Frecuencia de entrada: 43 Hz - 67 Hz
Número de contactos: 4 contactos regulados

Capacidad	VA/Watts	800 VA / 400 W
Regulación	Pasos	Regulación de 2 pasos
Salida	Regulador de tensión	Elevación y reducción
Protección	Supresión de sobretensiones	Energía eléctrica
	Sobrecarga	Interruptor de encendido/apagado con función de apagado de seguridad
	Sobrecalentamiento	Interruptor térmico
Indicador	LED	LED verde: encendido
Ambiente	Altitud	< 5 000 metros
	Temperatura	0°C - 40°C
	Humedad	0% - 90% (Sin condensación)
	Ruido perceptible	< 40 dB a 1 metro

⚠ PELIGRO

Conectar dispositivos, como una impresora láser o una fotocopiadora, que consumen más energía de lo que puede manejar este regulador puede causar sobrecarga y dañarlo.

Regulador de tensión

CENTROS DE SERVICIO EN SUCURSALES TRUPER®

Venta de partes, componentes, consumibles y accesorios.

BAJA CALIFORNIA | SUCURSAL TIJUANA
AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 66 4969 5100

CHIHUAHUA | SUCURSAL CHIHUAHUA
AV. SILVESTRE TERRAZAS #128-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MEXICO CUAUHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 61 4434 0052

COAHUILA | SUCURSAL TORREÓN
CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL.: 87 1209 6823

ESTADO DE MÉXICO | SUCURSAL CENTRO JILOTEPEC
PARQUE INDUSTRIAL 1, PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257. TEL: 76 1782 9101 EXT. 5728 Y 5102

JALISCO | SUCURSAL GUADALAJARA
AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL VALLE, C.P.: 45655, TLAJOMULCO DE ZUNIGA, JAL. TEL.: 33 3606 5285 AL 90

NUEVO LEÓN | SUCURSAL MONTERREY
CARRETERA LAREDO #300, 1B MONTERREY PARKS COLONIA PUERTA DE ANÁHUAC, C. P. 66052, ESCOBEDO, NUEVO LEÓN, N.L. TEL.: 81 8352 8791 / 81 8352 8790

PUEBLA | SUCURSAL PUEBLA
AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUHTLACINGO, PUE. TEL.: 22 2282 8282 / 84 / 85 / 86

SINALOA | SUCURSAL CULIACÁN
AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 66 7173 9139 / 66 7173 8400

TABASCO | SUCURSAL VILLAHERMOSA
CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 99 3353 7244

YUCATÁN | SUCURSAL MÉRIDA
CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL.: 99 9912 2451

Garantía. Duración: 2 años. Cobertura: piezas, componentes y mano de obra contra defectos de fabricación o funcionamiento, excepto si se usó en condiciones distintas a las normales; cuando no fue operado conforme instructivo; fue alterado o reparado por personal no autorizado por TRUPER®. Para hacer efectiva la garantía presente el producto, póliza sellada o factura o recibo o comprobante, en el establecimiento donde lo compró o en Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, donde también podrá adquirir partes, componentes, consumibles y accesorios. Incluye los gastos de transportación del producto que deriven de su cumplimiento de su red de servicio. Tel. 800-018-7873. Made in/Hecho en China. Importador TRUPER, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Tel. 761 782 9100 WWW.TRUPER.COM

Sello del establecimiento comercial
Fecha de entrega 05-2024


NOM

Instructive

1. Product Introduction

The Voltage Regulator offers high-power density and thorough protection against surges and spikes in a compact, ergonomic form. The AVR will continue to power connected devices despite power fluctuations. Any application at home or in a small business is ideal for it.

2. Product description

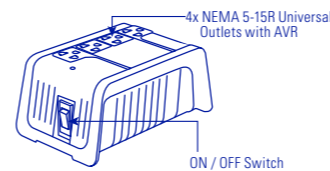

3. INSTALLATION AND START UP

NOTE Please check the unit before installation. Verify that nothing inside the package is broken.

Placement and storage conditions

Install the AVR in a dust-free sheltered space with sufficient airflow. Place the AVR at least 20 cm (about 7.87 in) apart from other devices to prevent interference. Avoid using the AVR in excessively humid or high-temperature environments. Check the specifications for any restrictions.

Connect to utility and charging.

Connect the AC input cord into the wall outlet. The electrical components connected to the AVR will be safeguarded by flipping on the AVR's switch.

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
The AVR does not turn on (the LED is OFF)	The ON/OFF Switch is OFF	Turn on the switch
	The wall outlet is not powered on	Attempt a different outlet
	Potential overload	Unplug a few of the electrical devices to reduce the load.

**45572
RV-800**

TECHNICAL PARAMETER

Nominal power: 800 VA / 400 W
Input voltage: 100 V~ - 145 V~
Output voltage: 120 V~ +/- 10% (108 V~ - 132 V~)
Input frequency: 43 Hz - 67 Hz
Number of receptacles: 4 AVR

Capacity	VA/Watts	800 VA / 400 W
Regulation	Steps	2 Steps regulation
Output	Built-in AVR	Boost & Buck
Protection	Surge suppression	AC power
	Over load	ON / OFF Breaker switch safety shut down
	Over-temperature	Terminal switch
Indicator	LED	Green LED: Power on
Environment	Altitude	< 5 000 meter
	Temperature	0°C - 40°C
	Humidity	0% - 90% (Non-condensing)
	Audible noise	< 40 dB a 1 meter

⚠ DANGER

Connecting devices, like a laser printer or a photocopier, that use more power than the Voltage Regulator can handle, could result in an overload and harm it.

Voltage regulator

TRUPER® BRANCH SERVICE CENTERS

Sale of parts, components, consumables and accessories.

BAJA CALIFORNIA | SUCURSAL TIJUANA
AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 66 4969 5100

CHIHUAHUA | SUCURSAL CHIHUAHUA
AV. SILVESTRE TERRAZAS #128-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MEXICO CUAUHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 61 4434 0052

COAHUILA | SUCURSAL TORREÓN
CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL.: 87 1209 6823

ESTADO DE MÉXICO | SUCURSAL CENTRO JILOTEPEC
PARQUE INDUSTRIAL 1, PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257. TEL: 76 1782 9101 EXT. 5728 Y 5102

JALISCO | SUCURSAL GUADALAJARA
AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL VALLE, C.P.: 45655, TLAJOMULCO DE ZUNIGA, JAL. TEL.: 33 3606 5285 AL 90

NUEVO LEÓN | SUCURSAL MONTERREY
CARRETERA LAREDO #300, 1B MONTERREY PARKS COLONIA PUERTA DE ANÁHUAC, C. P. 66052, ESCOBEDO, NUEVO LEÓN, N.L. TEL.: 81 8352 8791 / 81 8352 8790

PUEBLA | SUCURSAL PUEBLA
AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUHTLACINGO, PUE. TEL.: 22 2282 8282 / 84 / 85 / 86

SINALOA | SUCURSAL CULIACÁN
AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 66 7173 9139 / 66 7173 8400

TABASCO | SUCURSAL VILLAHERMOSA
CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 99 3353 7244

YUCATÁN | SUCURSAL MÉRIDA
CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL.: 99 9912 2451

Warranty. Duration: 2 years. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by TRUPER®. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. Phone number 800-018-7873. Made in China. Imported by TRUPER, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100 WWW.TRUPER.COM

Stamp of the business.
Delivery date: 05-2024

NOM